**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Benkut 2 Rings Metal Walnut Color

# Benkut Modern LED Chandelier User Manual

Model: 2 Rings Metal Walnut Color

## 1. Introduction

Thank you for purchasing the Benkut Modern LED Chandelier. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read this manual thoroughly before installation and retain it for future reference.



Figure 1: Benkut Modern LED Chandelier, featuring a circular double-ring design with a walnut color metal print and matte black light source circle.

## 2. Safety Information

**WARNING:** To reduce the risk of fire, electric shock, or personal injury, always follow these safety precautions:

- Always disconnect power at the main circuit breaker before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician in accordance with all local electrical codes.
- Ensure the mounting surface can support the weight of the fixture.
- Do not connect the fixture to a dimmable switch unless specified. This chandelier is dimmable via its included remote control only.
- Do not modify the fixture or its components.
- Avoid direct contact with the LED light source when the fixture is powered on.
- Keep packaging materials away from children.

## 3. Package Contents

Carefully unpack the box and ensure all items listed below are present and undamaged. If any parts are missing or damaged, contact Benkut customer service before proceeding with installation.

- LED Chandelier Unit (1)
- Remote Control (1)
- Mounting Hardware (Screws, wire nuts, etc.) (1 set)
- Instruction Manual (1)




Figure 2: Overview of product specifications and included remote control.

## 4. Specifications

| Feature | Detail |
|---|---|
| Brand | Benkut |
| Model | 2 Rings Metal Walnut Color |
| Color | Metal Walnut Color |
| Material | Aluminum, Metal, Silicone |
| Style | Modern |
| Light Fixture Form | Chandelier |

| Feature | Detail |
|---|---|
| Product Dimensions | 23.6"L x 23.6"W x 59"H (Max adjustable height) |
| Power Source | AC/DC |
| Installation Type | Semi Flush Mount |
| Special Features | Adjustable Color Temperature, Adjustable Height, Dimmable |
| Control Method | Remote Control |
| Light Source Type | LED |
| Voltage | 110 Volts |
| Light Color | Warm light, Neutral light, Cold light (3000K-6500K) |
| Brightness | 2000 Lumen (Max) |
| Wattage | 30 watts |
| Item Weight | 9.1 Pounds |
| Assembly Required | Yes |

## 5. Setup and Installation

**Important:** Before beginning installation, ensure the power is turned off at the circuit breaker. It is recommended to have this fixture installed by a licensed electrician.

1. **Prepare the Mounting Location:** Ensure the electrical box is securely mounted and capable of supporting the fixture's weight.
2. **Attach Mounting Bracket:** Secure the mounting bracket to the electrical box using the provided screws.
3. **Wire Connections:** Connect the fixture's wires to the corresponding household wires (Live to Live, Neutral to Neutral, Ground to Ground) using wire nuts. Ensure all connections are secure.
4. **Adjust Height:** The chandelier's height is adjustable up to 59 inches. Press the button on the canopy to adjust the suspension wires to your desired length. Ensure the fixture is level.
5. **Secure Canopy:** Carefully push the canopy up to the ceiling and secure it to the mounting bracket with the provided screws.
6. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker.

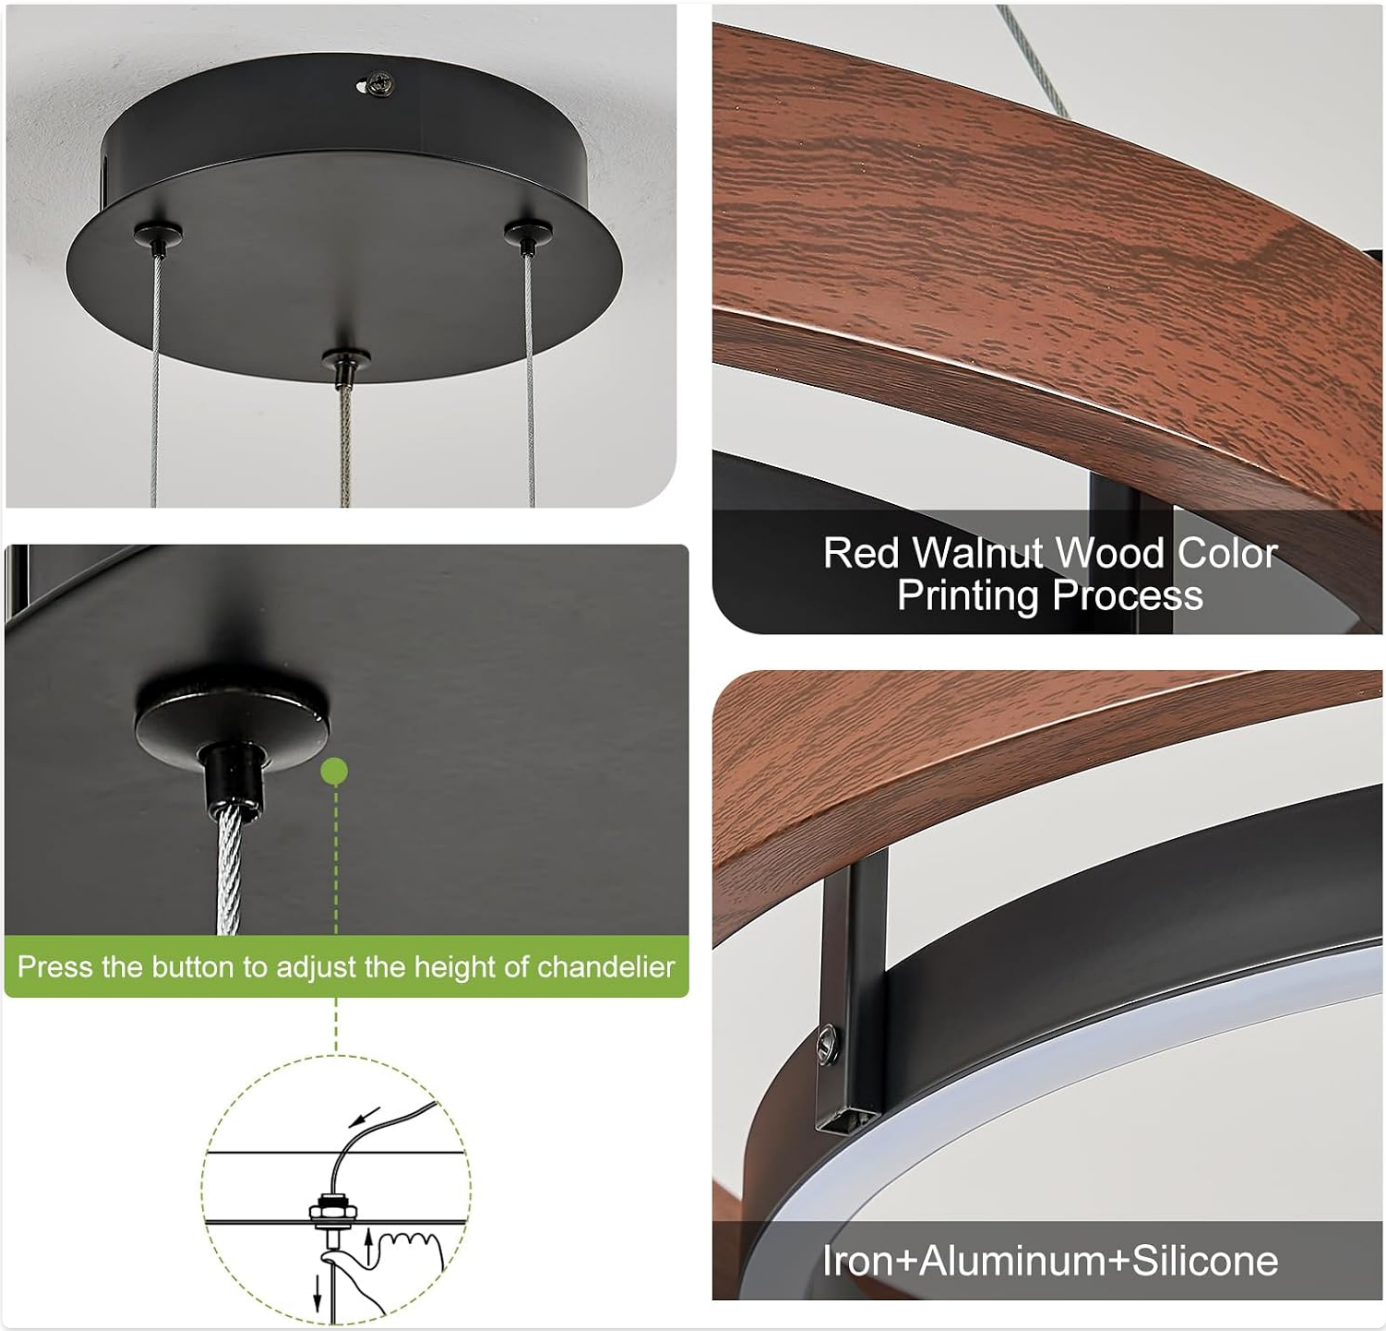



Figure 3: Details on canopy, material finish, and height adjustment mechanism.

Your browser does not support the video tag.

Video 1: Demonstration of the Benkut Chandelier's features, including its design and dimming capabilities. This video is provided by Benkut Lighting.

## 6. Operating Instructions

The Benkut LED Chandelier is controlled by the included remote control, allowing for adjustment of brightness and color temperature.

- **Power On/Off:** Use the "ON" and "OFF" buttons on the remote to turn the chandelier on or off.
- **Color Temperature Adjustment:** The chandelier offers three color temperatures:
  - **Warm Light (3000K):** For a cozy and inviting atmosphere.
  - **Neutral Light (4500K):** A balanced, natural light suitable for most tasks.
  - **Cool Light (6500K):** Bright, crisp light ideal for focused activities.

  Use the dedicated buttons on the remote to switch between these color temperatures.

- **Brightness Dimming:** The brightness can be adjusted from 10% to 100%. Use the brightness up/down buttons on the remote to achieve your desired illumination level.
- **Night Mode:** Activate the night mode for a very low light setting, suitable for ambient lighting.




Figure 4: Remote control functions for color temperature and dimming.

## 7. Maintenance

Regular maintenance will help preserve the appearance and functionality of your chandelier.

- **Cleaning:** Before cleaning, ensure the power is turned off. Use a soft, dry cloth to wipe the fixture. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** The LED light source is integrated and not user-replaceable. If the LEDs fail, contact customer support.
- **Inspection:** Periodically check the wiring and mounting for any signs of wear or looseness.

## 8. Troubleshooting

If you encounter issues with your chandelier, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---|---|---|
| Chandelier does not light up. | No power, loose wiring, remote battery dead. | Check circuit breaker. Ensure all wire connections are secure. Replace remote battery. |
| Remote control not working. | Remote battery dead, remote not paired (if applicable), obstruction. | Replace remote battery. Ensure no obstructions between remote and fixture. Refer to remote pairing instructions if provided separately. |
| Light flickers or dims unexpectedly. | Loose wiring, incompatible wall dimmer (if used). | Check wire connections. Ensure only a standard on/off switch is used for wall control, not a dimmer. The chandelier is dimmable via its own remote. |

If the problem persists after attempting these solutions, please contact Benkut customer support.

## 9. Warranty and Support

Benkut stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Benkut website. For technical support, replacement parts, or any other inquiries, please contact Benkut customer service through the following channels:

- **Email:** [Insert Benkut Support Email Here, if available]
- **Phone:** [Insert Benkut Support Phone Number Here, if available]
- **Website:** Visit the Benkut Store on Amazon

Please have your model number (2 Rings Metal Walnut Color) and purchase date ready when contacting support.

© 2025 Benkut. All rights reserved.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0FB3FKR7L**

More documents and user manuals: **https://manuals.plus/**