Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Benkut D30.7In

Benkut 3 Rings Modern LED Chandelier Instruction Manual

Model: D30.7In

Product Overview

The Benkut 3 Rings Modern LED Chandelier is a lighting fixture designed for various indoor spaces. It features a circular three-ring design with integrated LED lighting.

- **Design:** Modern circular three-ring design in black and gold finish, constructed from brushed metal and white silicone.
- **Dimmable Functionality:** Includes a remote control for adjusting brightness and color temperature.
- **Color Temperatures:** Offers three color temperature options: 3000K (warm light), 4500K (neutral light), and 6500K (cool light).
- **Adjustable Height:** Features an adjustable wire for customizing the chandelier's height up to 78.7 inches.
- **Dimensions:** Three rings with diameters of 20.5", 25.6", and 30.7".
- **Application:** Suitable for living rooms, bedrooms, studies, kitchens, dining rooms, foyers, and corridors.

Package Contents

Verify that all components are present before beginning installation.

- Chandelier fixture (3 rings)
- Remote Control
- Mounting Hardware

Installation Instructions

Professional installation is recommended. Ensure power is turned off at the circuit breaker before installation.

1. Prepare for Installation

1. Turn off power at the main circuit breaker.
2. Unpack all components and inspect for any damage.
3. Gather necessary tools (not included): screwdriver, wire strippers, electrical tape, ladder.

2. Mount the Canopy

Attach the mounting bracket to the junction box in the ceiling. Secure the canopy to the mounting bracket.



Image: Close-up of the chandelier's ceiling canopy, showing the attachment points and the adjustable wires extending downwards. The canopy has a diameter of 5.9 inches and a height of 1.4 inches.

3. Adjust Chandelier Height

The chandelier's height can be adjusted to a maximum of 78.7 inches. To adjust, press the button on the cable grip within the canopy and slide the wire to the desired length. Ensure all wires are adjusted evenly for a level fixture.

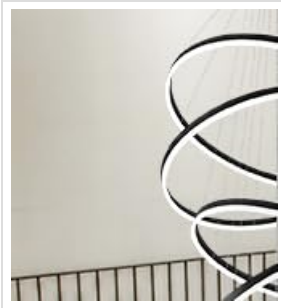


Image: A diagram illustrating the mechanism for adjusting the chandelier's suspension wire. A finger is shown pressing a small button on

the wire's attachment point to release and adjust its length.

Installation Tip: The load-bearing wires may slightly bend during initial suspension. They will straighten over time after hanging.

4. Electrical Connection

Connect the chandelier's wires to the household electrical wires according to local electrical codes. Ensure all connections are secure and insulated.

This fixture is designed for 110-220V AC/DC power sources.

Operating Instructions

Remote Control Functions

The chandelier is operated using the included remote control. It allows for adjustment of both brightness and color temperature.



Image: The Benkut chandelier shown in three different lighting modes: cool light, neutral light, and warm light, demonstrating the adjustable

color temperature feature.

Color Temperature Adjustment (3000K-6500K)

- Use the remote control to cycle through or select specific color temperatures:
  - **Warm Light (3000K):** For a cozy and inviting atmosphere.
  - **Neutral Light (4500K):** A balanced light suitable for general tasks.
  - **Cool Light (6500K):** Bright, crisp light for focused activities.

Brightness Dimming (10%-100%)

- The remote control allows for stepless dimming from 10% to 100% brightness.
- **Note:** This chandelier is **not** compatible with external dimmable wall switches. It only accepts a regular on/off switch for power and uses its dedicated remote for dimming and color temperature control.



Image: An illustration detailing the dimmable color temperature range (3000K-6500K) and brightness dimming range (10%-100%) of the chandelier, along with a visual representation of the remote control and compatibility notes for wall switches.

Product Video: Dimmable Features

Your browser does not support the video tag.

Video: This video demonstrates the dimmable features and color temperature adjustments of the Benkut LED Chandelier using the remote control. It shows the light transitioning between warm, neutral, and cool settings, and adjusting brightness levels.

Maintenance

To maintain the appearance and functionality of your Benkut LED Chandelier:

- **Cleaning:** Gently wipe the fixture with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as they may damage the finish or LED components.
- **Inspection:** Periodically check all electrical connections and mounting hardware to ensure they remain secure.
- **LED Longevity:** The integrated LED light sources are designed for long-term use and do not require replacement.

Troubleshooting

If you encounter issues with your chandelier, refer to the following common solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power supply; loose wiring; remote control battery low.	Check circuit breaker; ensure all electrical connections are secure; replace remote control batteries.
Light flickers or dims unexpectedly	Incompatible dimmer switch; unstable power supply.	Ensure only a standard on/off switch is used (not a dimmable wall switch); consult an electrician for power supply issues.
Remote control not responding	Remote control battery low; remote not paired (if applicable); obstruction between remote and fixture.	Replace remote control batteries; ensure clear line of sight; refer to remote pairing instructions (if provided separately).

Problem	Possible Cause	Solution
Chandelier appears uneven after installation	Uneven adjustment of suspension wires.	Re-adjust the suspension wires to ensure equal length and proper balance. The wires may also straighten over time.

Specifications

Feature	Detail
Brand	Benkut
Model	D30.7In
Color	Black Gold
Material	Aluminum, Metal, Silicone
Style	Modern
Light Source Type	LED
Wattage	70 watts
Brightness	4000 Lumens (Maximum)
Voltage	110 Volts
Color Temperature	3000K-6500K (Warm, Neutral, Cool Light)
Dimming Range	10%-100%
Control Method	Remote Control
Product Dimensions	30.7"L x 30.7"W x 79"H (Maximum adjustable height)
Ring Diameters	20.5", 25.6", 30.7"
Item Weight	13.97 pounds
Installation Type	Semi Flush Mount
Assembly Required	Yes

Warranty and Support

For warranty information or technical support, please contact Benkut customer service through the retailer where the product was purchased or visit the official Benkut website.

Please retain your purchase receipt for warranty claims.

© 2025 Benkut. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FB3GC9PR

More documents and user manuals: **https://manuals.plus/**