Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Redmi Redmi Pad 2 Wi-Fi + Cellular

Redmi Pad 2 Wi-Fi + Cellular User Manual

Model: Redmi Pad 2 Wi-Fi + Cellular

1. Introduction

This manual provides essential information for the safe and efficient use of your Redmi Pad 2 Wi-Fi + Cellular tablet. Please read this manual thoroughly before using your device and retain it for future reference. This tablet is designed for various uses including creative tasks, entertainment, and gaming.

2. Package Contents

Verify that all items are present in your product package:

- Redmi Pad 2 Tablet Computer
- Power Adapter
- USB Type-C Cable
- SIM Ejector Tool

3. Device Overview

Familiarize yourself with the physical components of your Redmi Pad 2 tablet.

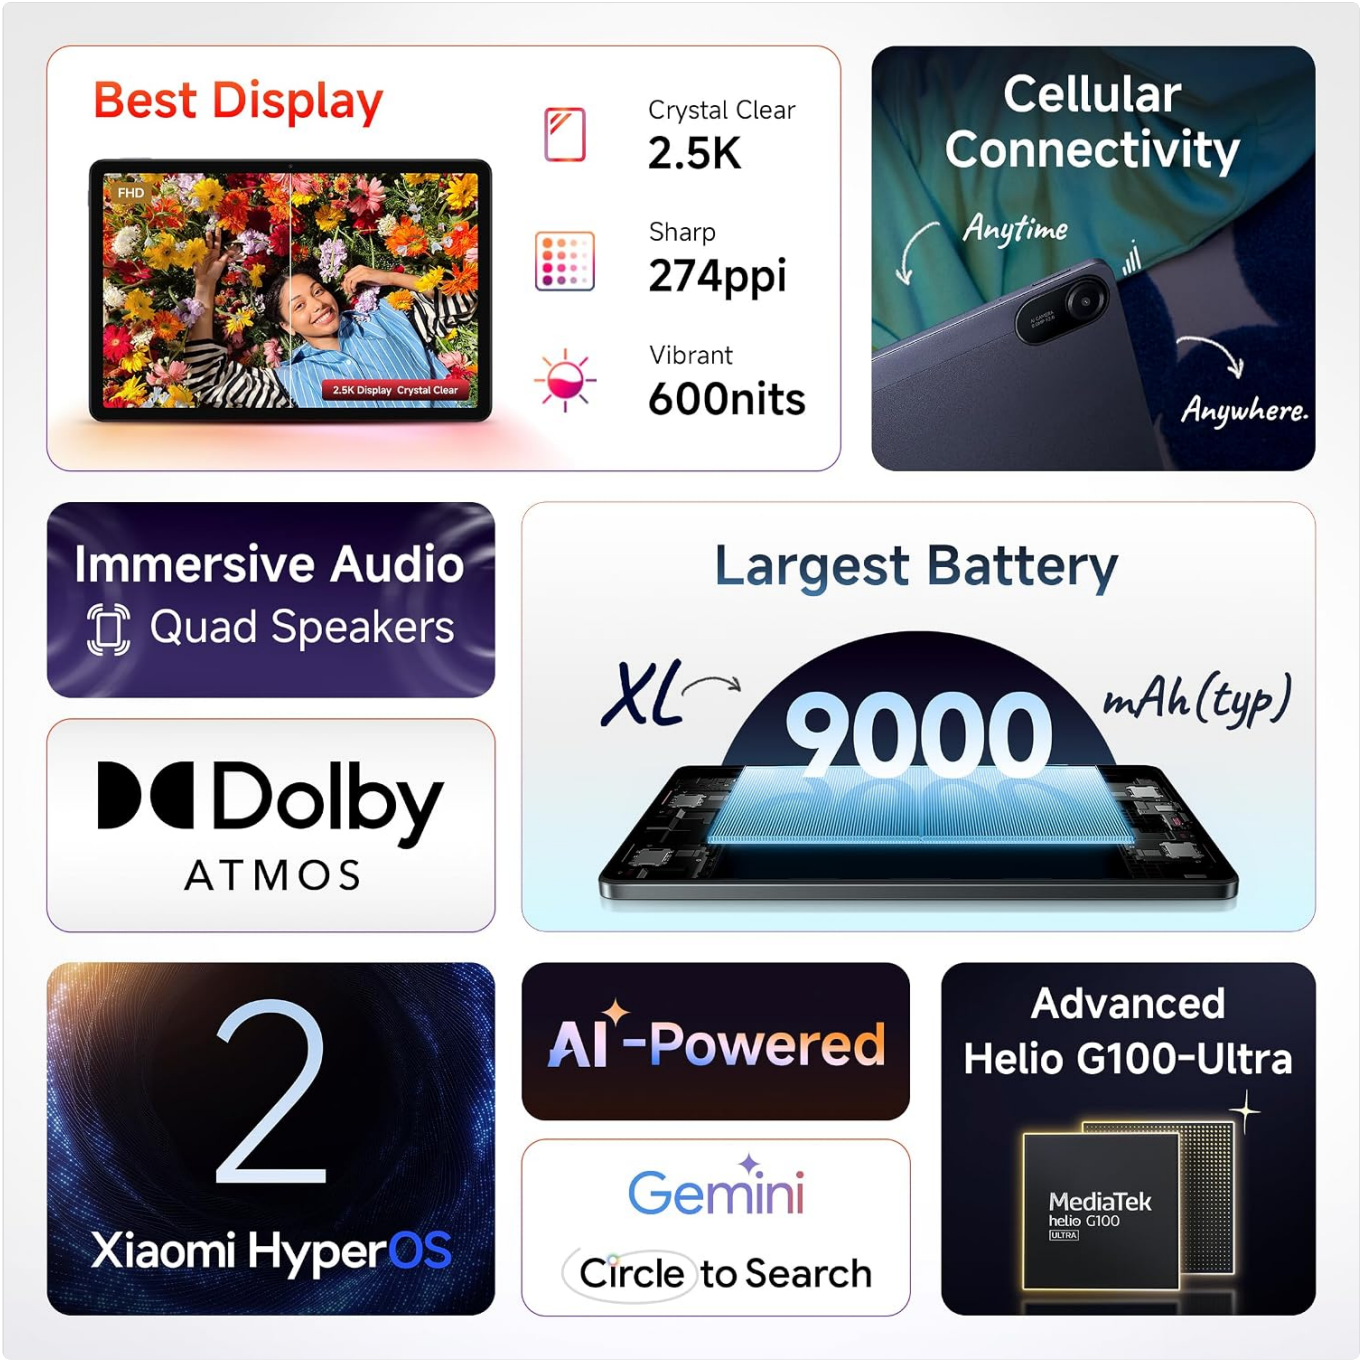


Image: Front view of the Redmi Pad 2 tablet, showcasing its display.

Active Pen Support



Image: Side view of the Redmi Pad 2 tablet, highlighting its slim profile and button placement.



Image: Back view of the Redmi Pad 2 tablet, showing the camera module and Redmi branding.

4. Setup

4.1 Initial Charging

Before first use, fully charge your Redmi Pad 2 using the provided adapter and USB Type-C cable. Connect the USB Type-C cable to the tablet's charging port and the adapter to a power outlet. The battery indicator on the screen will show charging progress.

4.2 Power On/Off

To power on, press and hold the power button until the Redmi logo appears. To power off, press and hold the power button, then select 'Power off' from the options on the screen.

4.3 SIM Card Installation (for Cellular Models)

Use the SIM ejector tool to open the SIM card tray. Insert your Nano-SIM card into the designated slot. Ensure the card

is correctly oriented. Close the tray securely. The tablet supports cellular connectivity for mobile data and calls.

4.4 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, signing in with your Google account, and configuring basic settings for HyperOS 2.

5. Operating Instructions

5.1 Basic Navigation

The Redmi Pad 2 features a touchscreen interface. Use gestures such as tap, swipe, pinch-to-zoom, and long-press to navigate the system and interact with applications.

5.2 HyperOS 2 Interface

Your tablet runs on HyperOS 2, offering a clean user interface. Explore the home screen, app drawer, notification panel, and quick settings to customize your experience.

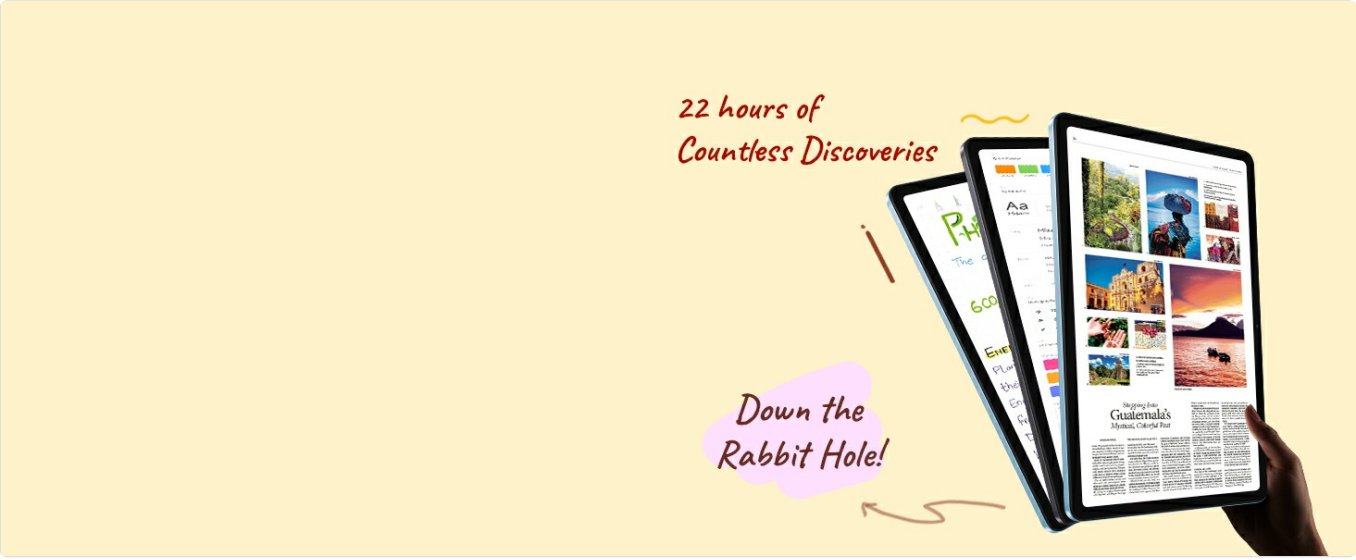


Image: Illustration of the HyperOS 2 interface on the Redmi Pad 2, demonstrating its clean design.

5.3 AI-Powered Features

The tablet integrates AI features for enhanced productivity and convenience:

- **Circle to Search:** Draw a circle around any object on your screen to instantly search for information about it.
- **Gemini AI:** Provides personalized assistance and adapts to your usage patterns for faster, more intuitive interactions.

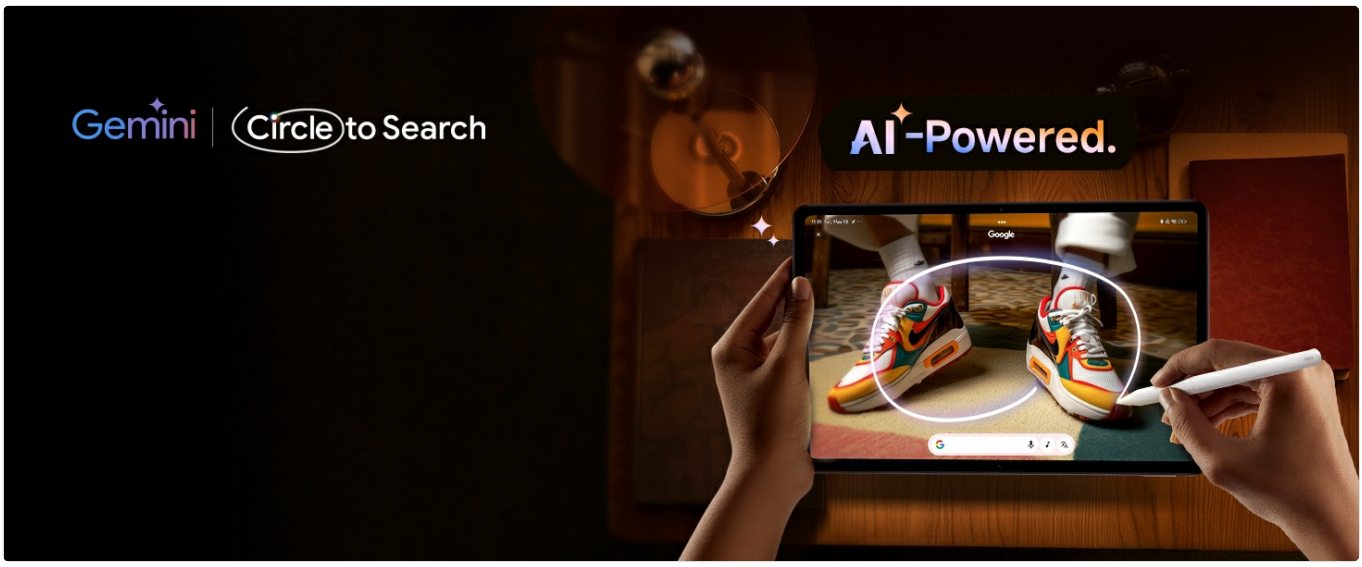


Image: A user demonstrating the 'Circle to Search' AI feature on the Redmi Pad 2 tablet.

6. Active Pen Usage

The Redmi Pad 2 supports an active stylus (sold separately) for enhanced creativity and productivity.

6.1 Pen Features

- **Ultra-low latency:** Ensures a smooth and natural writing experience.
- **4096-levels Pressure Sensitivity:** Allows for precise control over line thickness and shading.
- **10g Activation Force:** Responds to light touches for effortless input.
- **12h Continuous Writing:** Provides extended usage time.

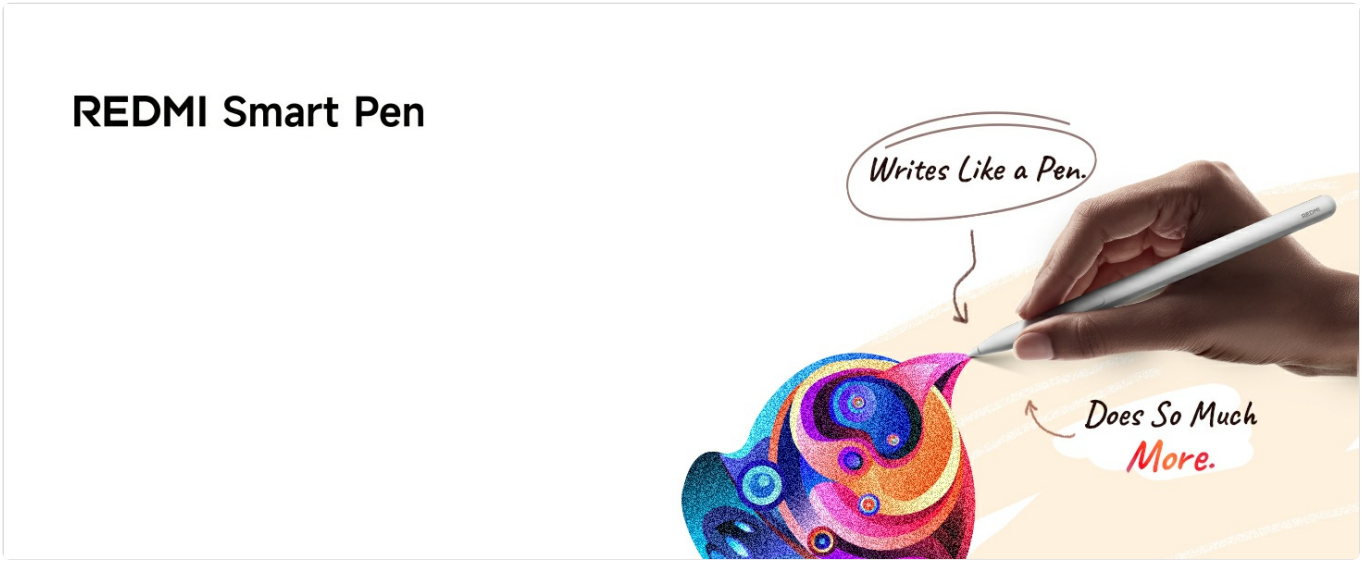


Image: Close-up of the Redmi Smart Pen in use, highlighting its seamless writing capabilities and technical specifications.

6.2 Applications for Pen Use

Use the active pen for marking up documents, taking notes, sketching ideas, and navigating the tablet with precision. Handwriting recognition features are also supported.



Image: A user utilizing the Redmi Smart Pen on the tablet for note-taking, demonstrating its precision.

7. Connectivity

7.1 Wi-Fi Connectivity

To connect to a Wi-Fi network, go to Settings > Wi-Fi, turn on Wi-Fi, and select your desired network. Enter the password if prompted.

7.2 Cellular Connectivity

With a properly installed SIM card, your tablet can connect to cellular networks for mobile data and calls. Ensure mobile data is enabled in Settings > Network & internet > Mobile network.

7.3 Xiaomi Interconnectivity

The tablet supports features like Call Sync and Shared Clipboard, allowing seamless interaction with other Xiaomi devices. This enables you to take calls on your tablet and effortlessly copy and paste content across devices.

8. Display Features

The Redmi Pad 2 features an 11-inch 2.5K display with a 90Hz refresh rate and up to 600 nits brightness.

- **2.5K Resolution (2560x1600 Pixels):** Provides sharp and clear visuals.
- **90Hz Refresh Rate:** Ensures smooth scrolling and fluid animations.
- **600 Nits Brightness:** Offers vibrant display quality, suitable for both indoor and outdoor use.
- **1.07 Billion Colours:** Delivers rich and radiant color reproduction.



Image: The Redmi Pad 2 display showcasing its 2.5K resolution and vibrant colors.

9. Audio Features

Experience immersive audio with the Redmi Pad 2's quad speakers and Dolby Atmos support.

- **Quad Speakers:** Delivers rich and powerful sound output.
- **Dolby Atmos:** Provides a cinematic audio experience with enhanced clarity and depth.

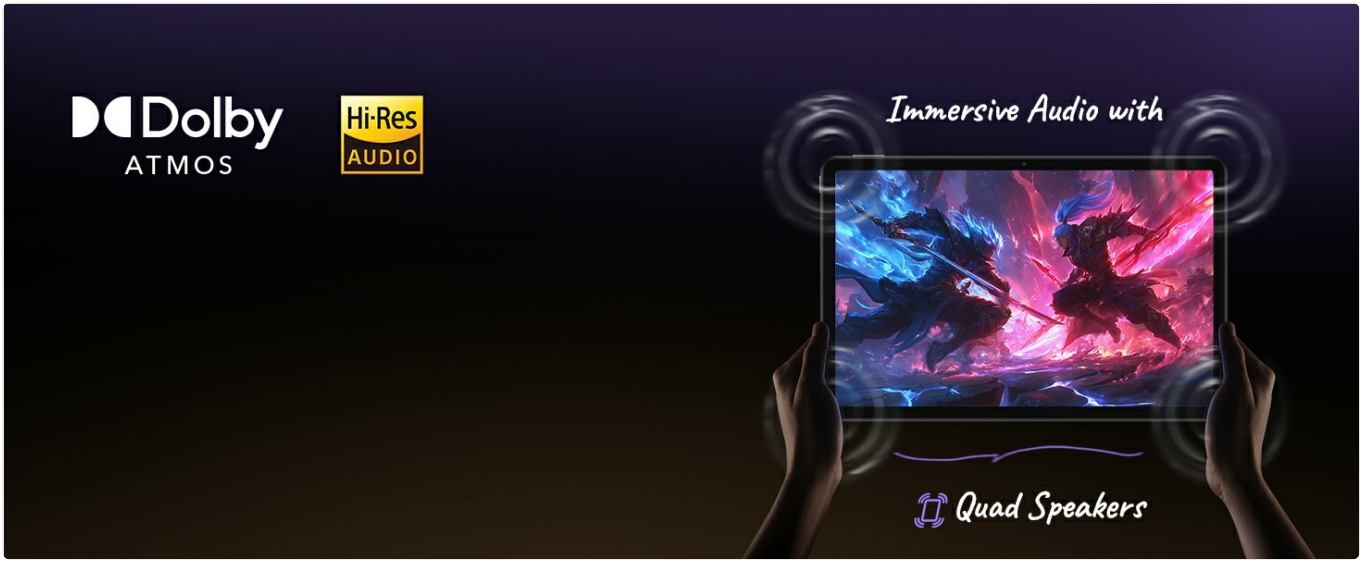


Image: The Redmi Pad 2 tablet displaying content with an emphasis on its quad speakers and Dolby Atmos audio.

10. Battery Management

The Redmi Pad 2 is equipped with a 9000mAh battery for extended usage.

- **Battery Capacity:** 9000mAh Lithium Ion battery.
- **Fast Charging:** Supports 18W fast charging.
- **Average Battery Life:** Up to 24 hours of typical use. Specific activities like binge-watching can provide up to 19 hours, and gaming up to 10 hours.

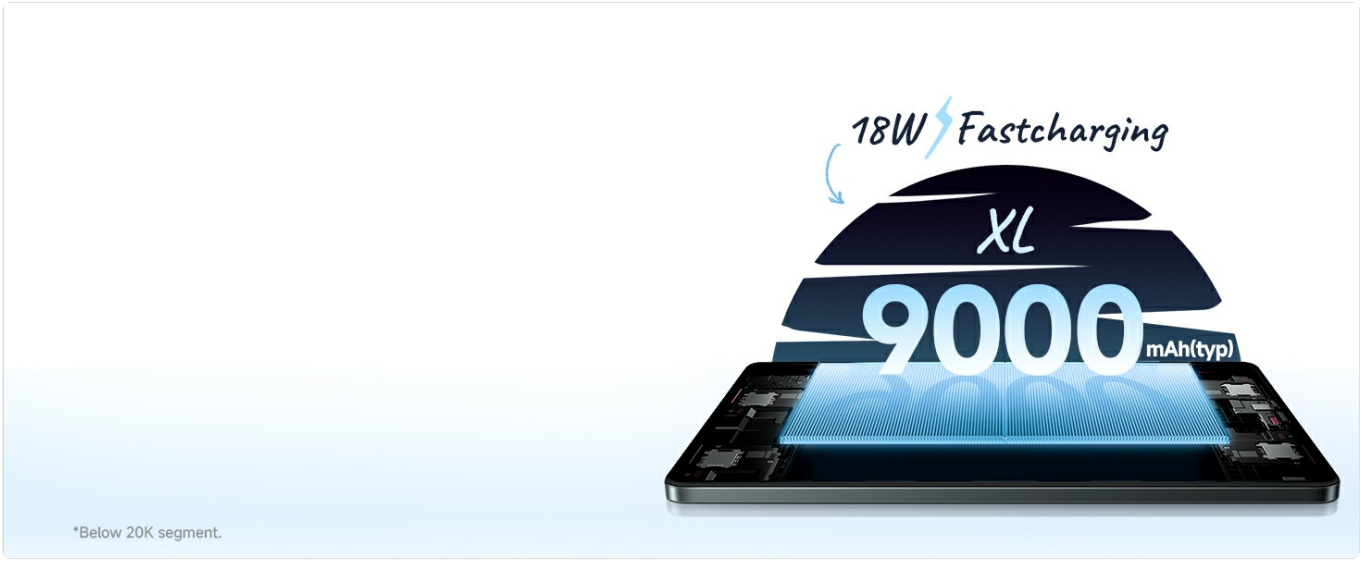


Image: Diagram illustrating the large 9000mAh battery capacity of the Redmi Pad 2.

11. Maintenance

11.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the finish.

11.2 Software Updates

Regularly check for and install system updates to ensure optimal performance, security, and access to new features. Go to Settings > About tablet > System update.

11.3 Storage Management

The tablet comes with 128GB of internal storage and supports expandable storage up to 2TB via a microSD card (sold separately). Regularly manage your files and applications to maintain performance.

12. Troubleshooting

If you encounter issues with your Redmi Pad 2, refer to the following common solutions:

- **Device not powering on:** Ensure the battery is charged. Connect the tablet to the charger for at least 30 minutes before attempting to power it on again.
- **Screen unresponsive:** Try restarting the device by holding the power button for approximately 10-15 seconds until it reboots.
- **Wi-Fi/Cellular connectivity issues:** Check if Wi-Fi or mobile data is enabled in settings. Restart your router or check your SIM card installation.
- **Applications crashing:** Clear the cache of the problematic app (Settings > Apps > [App Name] > Storage > Clear cache) or reinstall the app.
- **Slow performance:** Close unnecessary background applications, clear storage space, or restart the tablet.

For persistent issues, contact customer support.

13. Specifications

Detailed technical specifications for the Redmi Pad 2 Wi-Fi + Cellular tablet:

Feature	Specification
Brand	Redmi
Model Name	Redmi Pad 2 Wi-Fi + Cellular
Memory Storage Capacity	128 GB
Screen Size	11 Inches
Display Resolution Maximum	2560x1600 Pixels
Display Type	LCD
Maximum Display Brightness	600 Nit
Display Refresh Rate	90 Hz
RAM Memory Installed	6 GB
Processor Brand	MediaTek
Processor Description	MediaTek Helio G100-Ultra
Processor Speed	2.2 GHz
Graphics Coprocessor	Mali-G57 MC2
Operating Systems	Android, HyperOS 2
Battery Capacity	9000 mAh
Battery Average Life	24 Hours
Wireless Technology Type	Cellular, Wi-Fi (802.11a/b/g/n/ac)
Human Interface Types	Touchscreen with Stylus Support
Rear Facing Camera Photo Sensor Resolution	8 MP
Front Photo Sensor Resolution	5 MP
Item Weight	519 Grams
Item Dimensions (L x W x Thickness)	25.5L x 16.6W x 0.7Th Centimeters
Colour	Graphite Grey

14. Warranty and Support

14.1 Warranty Information

Your Redmi Pad 2 Wi-Fi + Cellular tablet comes with a**1-year manufacturer warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

14.2 Manufacturer Contact Information

For warranty service, technical support, or further inquiries, please contact the manufacturer:

Manufacturer: BYD (India) Private Limited, Developed Plot No. OZ 7, Sipcot, Oragadam, Sriperambudur, Kancheepuram, Tamil Nadu 602105, India, Xiaomi

Packer Contact: DBG Technology (India) Private Limited, Plot No. 2, N. H. No. 8, ICD Bawal, Sector – 8, Bawal, District – Rewari, Haryana 123501, India

Please visit the official Redmi or Xiaomi support website for the most up-to-date contact details and support resources.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question