Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AEROZY 200Y

AEROZY Gale 200Y Portable Evaporative Air Cooler User Manual

Model: 200Y

1. Important Safety Instructions

Please read all instructions carefully before using this appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug from the outlet when not in use, before adding water, and before cleaning.
- Keep the appliance out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not block air inlets or outlets.
- Use only on a flat, stable surface to prevent tipping.
- Do not use outdoors or in wet environments.
- Do not place objects on top of the unit.
- Only use the provided ice packs or regular ice cubes. Do not add other substances to the water tank.


2. Product Components

The AEROZY Gale 200Y evaporative air cooler includes the following components:

- AEROZY Gale 200Y Air Cooler Unit (1)
- Remote Control (1)
- Ice Packs (4)
- User Manual (1)

Unit Overview

Familiarize yourself with the main parts of your air cooler.

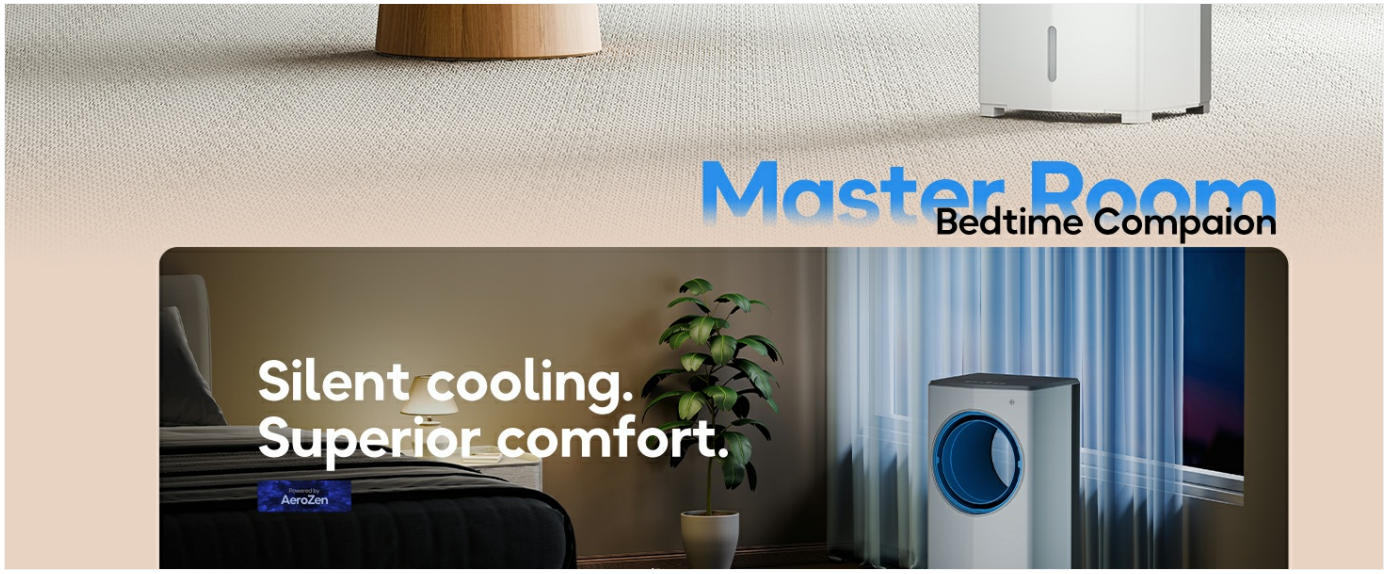

Internal components of the AEROZY Gale 200Y air cooler, highlighting the unique conch design, motor, water pump, and honeycomb cooling pad.



Detailed view of the unit's features: top handle for portability, powerful water pump, dual water tank for easy refilling, and confirmation of no assembly required.

3. Setup and First Use

Follow these steps to set up your AEROZY Gale 200Y air cooler for the first time.

3.1 Unpacking

1. Carefully remove the air cooler from its packaging.
2. Check for any damage during transit. If damaged, do not operate and contact customer support.
3. Ensure all included components are present.

3.2 Positioning the Unit

- Place the air cooler on a firm, level surface.
- Ensure there is adequate space around the unit for proper airflow (at least 8 inches from walls or furniture).

3.3 Filling the Water Tank

The unit features a dual water tank system for convenience.


1. Locate the water tank access point, typically at the top or side of the unit.
2. Carefully pour clean, cool water into the tank. Do not exceed the 'MAX' fill line.
3. For enhanced cooling, place the provided ice packs in a freezer until frozen. Once frozen, add them directly into the water tank or the designated ice box compartment.

4. Close the water tank cover securely.

4. Operating Instructions

Your AEROZY Gale 200Y air cooler can be operated using the control panel on the unit or the included remote control.

4.1 Control Panel and Remote Control

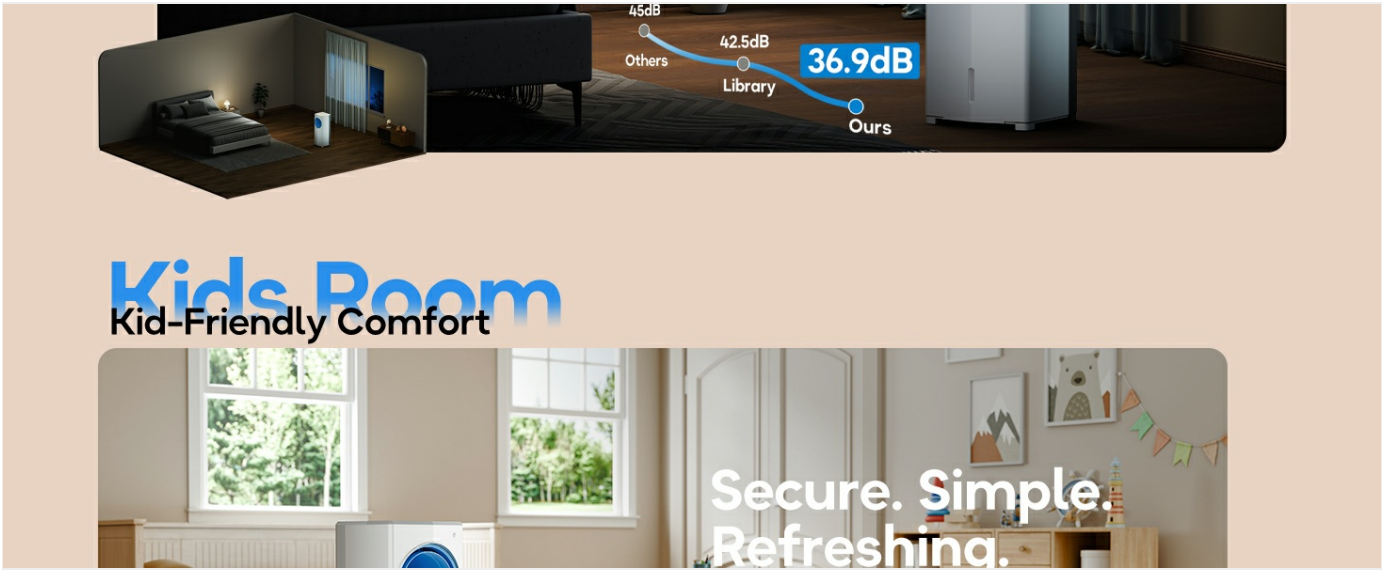

The air cooler can be operated via its top-mounted control panel or the remote control, offering functions such as power, speed, mode, oscillation, and timer.

Ensure batteries are installed in the remote control (batteries not included).

4.2 Power On/Off

- Plug the power cord into a suitable electrical outlet.
- Press the **Power** button on the control panel or remote to turn the unit on or off.

4.3 Speed Settings

The unit offers 3 fan speed settings.

- Press the **Speed** button to cycle through Low, Medium, and High fan speeds.

4.4 Operating Modes

Select from 4 operating modes:


- **Cool Mode:** Provides evaporative cooling. Ensure the water tank is filled.
- **Natural Mode:** Simulates a natural breeze by varying fan speed.
- **Sleep Mode:** Operates at a lower, quieter speed for undisturbed rest.
- **Eco Mode:** Optimizes energy consumption while maintaining comfort.

Press the **Mode** button to switch between these settings.

4.5 Timer Function

Set the unit to automatically turn off after a specified period, up to 7 hours.

- Press the **Timer** button repeatedly to select the desired operating duration (e.g., 1H, 2H, ..., 7H).
- The unit will automatically shut off once the set time expires.

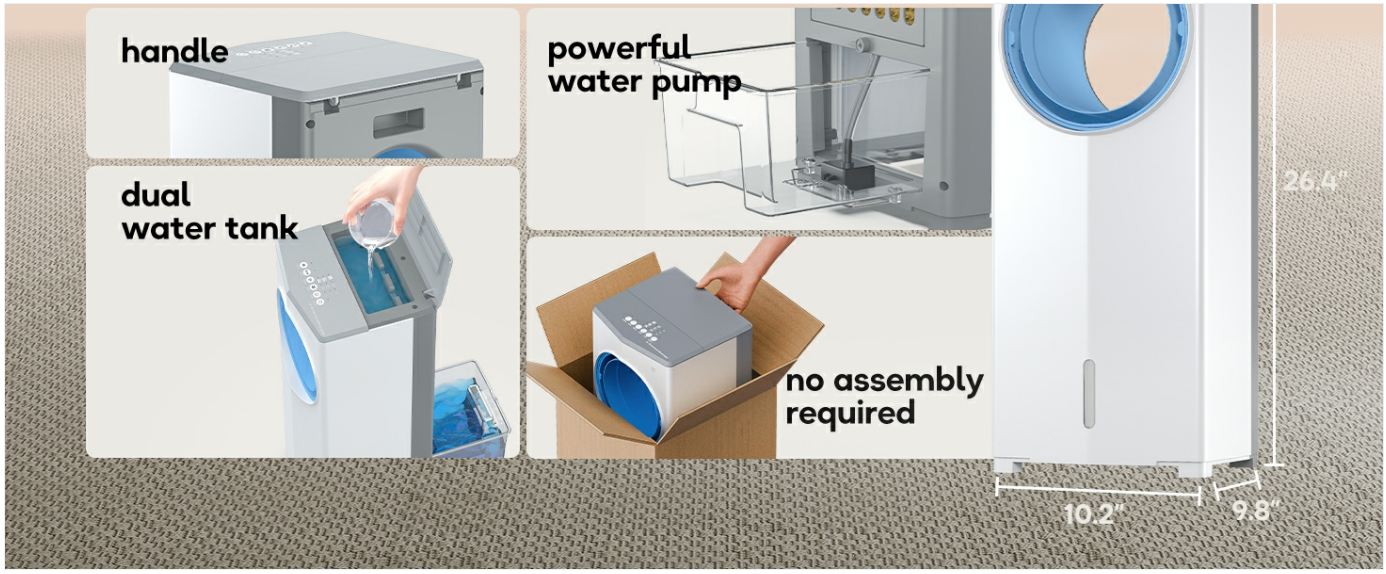

The unit features a timer function, allowing users to set it to operate for up to 7 hours before automatically shutting off.

4.6 Oscillation and Tilt

Distribute airflow more widely with oscillation and adjust the vertical angle.

- Press the **Oscillation** button to activate or deactivate the 360° vertical oscillation feature.
- The unit also allows for a 60° manual tilt to direct airflow.



The air cooler provides targeted airflow with 360° vertical oscillation and a 60° manual tilt feature for uniform comfort.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your air cooler.

5.1 General Cleaning

1. Always unplug the unit from the power outlet before cleaning.
2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. Ensure no water enters the control panel or other electrical components.

5.2 Water Tank Cleaning

To prevent mold and mildew growth, clean the water tank regularly, especially if the unit is not used daily.

1. Empty any remaining water from the tank.
2. Remove the water tank (refer to the product diagram for access).
3. Wash the tank with mild soap and water. Rinse thoroughly.
4. Allow the tank to air dry completely before reassembling or refilling.
5. For thorough drying, operate the unit in fan-only mode for a few hours after cleaning.

5.3 Cooling Pad Maintenance

The honeycomb cooling pad should be inspected and cleaned periodically.

- Access the cooling pad compartment (consult the product diagram for specific instructions).
- Gently rinse the cooling pad under running water to remove dust and mineral deposits.
- Do not use harsh chemicals or scrub the pad vigorously, as this may damage it.
- Allow the cooling pad to dry completely before placing it back into the unit.

6. Troubleshooting

If you encounter issues with your AEROZY Gale 200Y, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Unit does not turn on	No power supply Power button not pressed	Check if the power cord is securely plugged in. Ensure the power outlet is functional. Press the Power button on the unit or remote.
No cooling effect	Water tank empty Cooling mode not selected Cooling pad dry	Fill the water tank with water and ice packs. Select 'Cool Mode'. Ensure the water pump is operating and wetting the cooling pad.
Weak airflow	Fan speed too low Air inlets/outlets blocked	Increase the fan speed setting. Clear any obstructions from the air inlets and outlets.
Unusual noise	Unit not on a level surface Foreign object inside Water pump issue	Place the unit on a flat, stable surface. Unplug and inspect for any foreign objects. Contact support if noise persists. Check water level; ensure pump is submerged.
Remote control not working	Batteries depleted or incorrectly installed Obstruction between remote and unit	Replace batteries and ensure correct polarity. Remove any objects blocking the signal path.

If the problem persists after trying these solutions, please contact customer support.

7. Specifications

Technical specifications for the AEROZY Gale 200Y Portable Evaporative Air Cooler.

Feature	Detail

Feature	Detail
Model Name	Gale
Model Number	200Y
Brand	AEROZY
Type	Evaporative Air Cooler
Mounting Type	Freestanding
Color	White
Controls Type	Remote, On-unit buttons
Speed Settings	3 (Low, Medium, High)
Operating Modes	Cool, Natural, Sleep, Eco
Timer	Up to 7 hours
Oscillation	360° Vertical
Manual Tilt	60°
Noise Level	Approximately 40 Decibels (as low as 36.9dB in Sleep Mode)
Product Dimensions (D x W x H)	9.84" x 10.24" x 26.38"
Item Weight	15.27 pounds (6.94 kg)
Power Source	Corded Electric
Batteries Required for Remote	Yes (not included)



Dimensions of the AEROZY Gale 200Y unit, included ice boxes, and remote control.

8. Warranty Information

The AEROZY Gale 200Y Portable Evaporative Air Cooler comes with a**1 Year Limited Warranty** from the date of purchase.

This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, unauthorized repair, or commercial use.

Please retain your proof of purchase for warranty claims.

9. Customer Support

For technical assistance, warranty claims, or general inquiries, please contact AEROZY customer support.

Please have your model number (200Y) and proof of purchase ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FBW78F6D

More documents and user manuals: **https://manuals.plus/**