Samsung EF-AF766CTEGUS

Samsung Galaxy Z Flip7 Clear Case Instruction Manual

Model: EF-AF766CTEGUS

Introduction

This manual provides essential information for the proper installation, use, and maintenance of your Samsung Galaxy Z Flip7 Clear Case. Designed to protect your device while showcasing its original design, this clear case offers slim and secure protection.
The case is engineered to be thin and transparent, allowing the phone's aesthetic to remain visible without adding significant bulk. Its design includes raised edges to help secure the camera and screen areas.

Setup: Case Installation

Follow these steps to correctly install the Clear Case on your Samsung Galaxy Z Flip7:

1. **Clean Your Device:** Before installation, ensure your Galaxy Z Flip7 is clean and free of dust or smudges. Use a soft, lint-free cloth to wipe down the front and back surfaces.
2. **Align the Top Piece:** Gently place the top half of the clear case onto the upper section of your phone, aligning it with the camera cutout and buttons. Press firmly around the edges until it snaps securely into place.
3. **Align the Bottom Piece:** Similarly, place the bottom half of the clear case onto the lower section of your phone. Ensure proper alignment with the charging port and speakers. Press firmly around the edges until it snaps securely into place.
4. **Verify Fit:** Once both halves are installed, gently check all edges to ensure the case is fully seated and secure, with no gaps. The case should fit snugly around your device.







Image: Samsung Galaxy Z Flip7 with the clear case installed, demonstrating the precise fit and transparent design.

Operating Your Device with the Case

The Samsung Galaxy Z Flip7 Clear Case is designed to allow full functionality of your device while providing protection.

- **Folding Mechanism:** The case is engineered to accommodate the unique folding mechanism of the Galaxy Z Flip7, allowing for smooth opening and closing without obstruction.
- **Button Access:** All buttons (power, volume) remain easily accessible and responsive through the case's precise cutouts.
- **Port Access:** The charging port, speakers, and microphones are fully accessible without needing to remove the case.
- **Camera Protection:** The raised edges around the camera module provide additional protection against scratches when the phone is placed on flat surfaces.

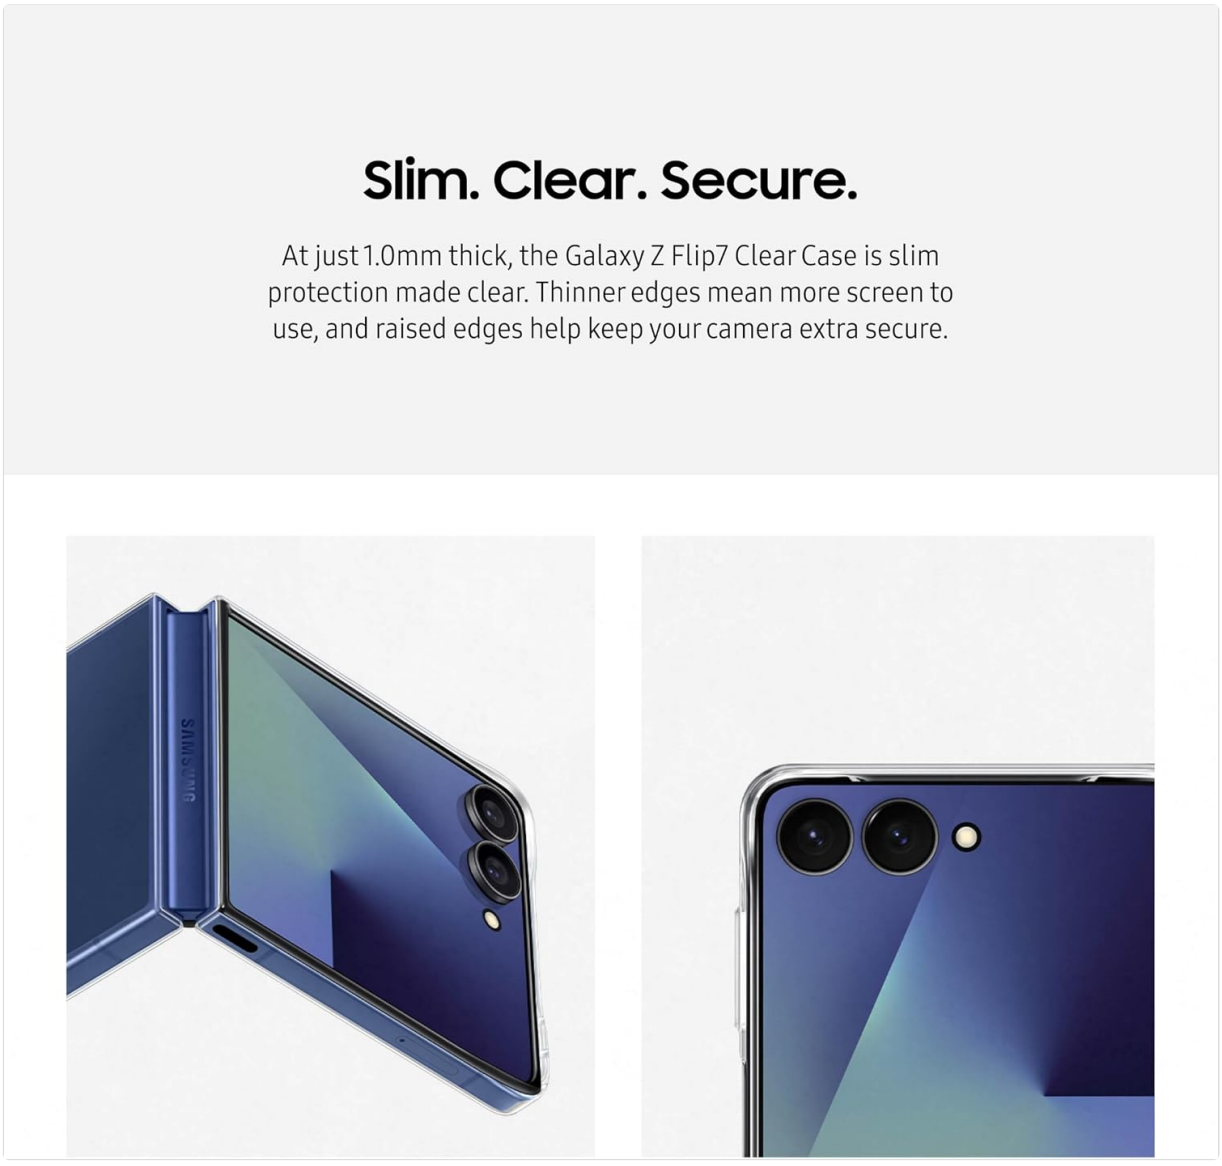


Image: The Samsung Galaxy Z Flip7 in its folded state, protected by the clear case, highlighting its seamless integration.

Maintenance and Care

To keep your clear case looking new and maintain its transparency, follow these simple cleaning guidelines:

- **Regular Cleaning:** Wipe the case regularly with a soft, damp cloth to remove dust, fingerprints, and light smudges.
- **Deep Cleaning:** For more stubborn dirt, remove the case from your phone. Use a small amount of mild soap (like dish soap) mixed with water on a soft cloth. Gently clean the case, then rinse thoroughly with clean water.
- **Drying:** Ensure the case is completely dry before reattaching it to your phone. Air dry or use a clean, dry, lint-free cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, alcohol, or strong chemical solvents, as these can damage the case material and cause discoloration or cloudiness.





Image: A detailed view of the clear case, illustrating its transparent quality which requires proper maintenance to preserve.

Troubleshooting

Here are solutions to common issues you might encounter with your clear case:

- **Case Feels Loose:** Ensure both top and bottom halves of the case are correctly aligned and fully snapped onto the phone. Apply gentle pressure around all edges to secure. If the issue persists, inspect the case for any damage or deformation.
- **Case Becomes Slippery:** Clear cases can sometimes feel slick due to natural oils from hands or environmental factors. Regularly clean the case as described in the Maintenance section to restore its grip.
- **Discoloration/Yellowing:** Over time, clear polycarbonate cases may show signs of yellowing due to UV exposure. While regular cleaning helps, this is a natural material characteristic. If significant, consider replacing the case.
- **Scratches on Case:** The case is designed to protect your phone, and minor scratches on the case itself are normal wear and tear. These do not typically affect the phone's protection.

Specifications

Feature	Detail
Brand	Samsung
Compatible Phone Models	Galaxy Z Flip7

Color	Transparent
Material	Polycarbonate
Water Resistance Level	Not Water Resistant
Additional Features	Lightweight
Pattern	Clear Case
Item Dimensions	6.6 x 2.93 x 0.38 inches
Model Number	EF-AF766CTEGUS
Item Weight	0.6 Ounces
UPC	198957125898

Warranty Information

This Samsung Galaxy Z Flip7 Clear Case comes with a**1 Year Manufacturer Warranty**. For detailed terms and conditions, please refer to the official Samsung warranty documentation included with your product or visit the official Samsung website.
The warranty covers manufacturing defects and material flaws under normal use. It typically does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Support

For further assistance, technical support, or warranty claims, please contact Samsung Customer Service:

- **Online Support:** Visit the official Samsung support website for FAQs, troubleshooting guides, and contact options.
- **Phone Support:** Refer to your product packaging or the Samsung website for regional customer service phone numbers.
- **Service Centers:** Locate authorized Samsung service centers in your area for in-person assistance.

When contacting support, please have your product model number (EF-AF766CTEGUS) and proof of purchase readily available.

© 2026 Samsung. All rights reserved.