Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

OTTOCAST Wireless Air Mouse Remote Control

OTTOCAST Wireless Air Mouse Remote Control User Manual

Model: Wireless Air Mouse Remote Control

1. Introduction

Thank you for purchasing the OTTOCAST Wireless Air Mouse Remote Control. This device is designed to enhance your experience with OTTOCAST OttoAibox series products, including models E2, P3, i3, P3 Lite, and NANO. It provides a convenient alternative control method, especially useful in vehicles where touch panels are not available or for easy operation by rear-seat passengers.
Please read this manual thoroughly before use to ensure proper operation and to maximize the product's functionality.



Image 1: OTTOCAST Wireless Air Mouse Remote Control and its retail packaging.

2. Product Overview

The OTTOCAST Wireless Air Mouse Remote Control features an ergonomic design with clearly labeled buttons for intuitive control. Below is a diagram illustrating the various buttons and their functions.

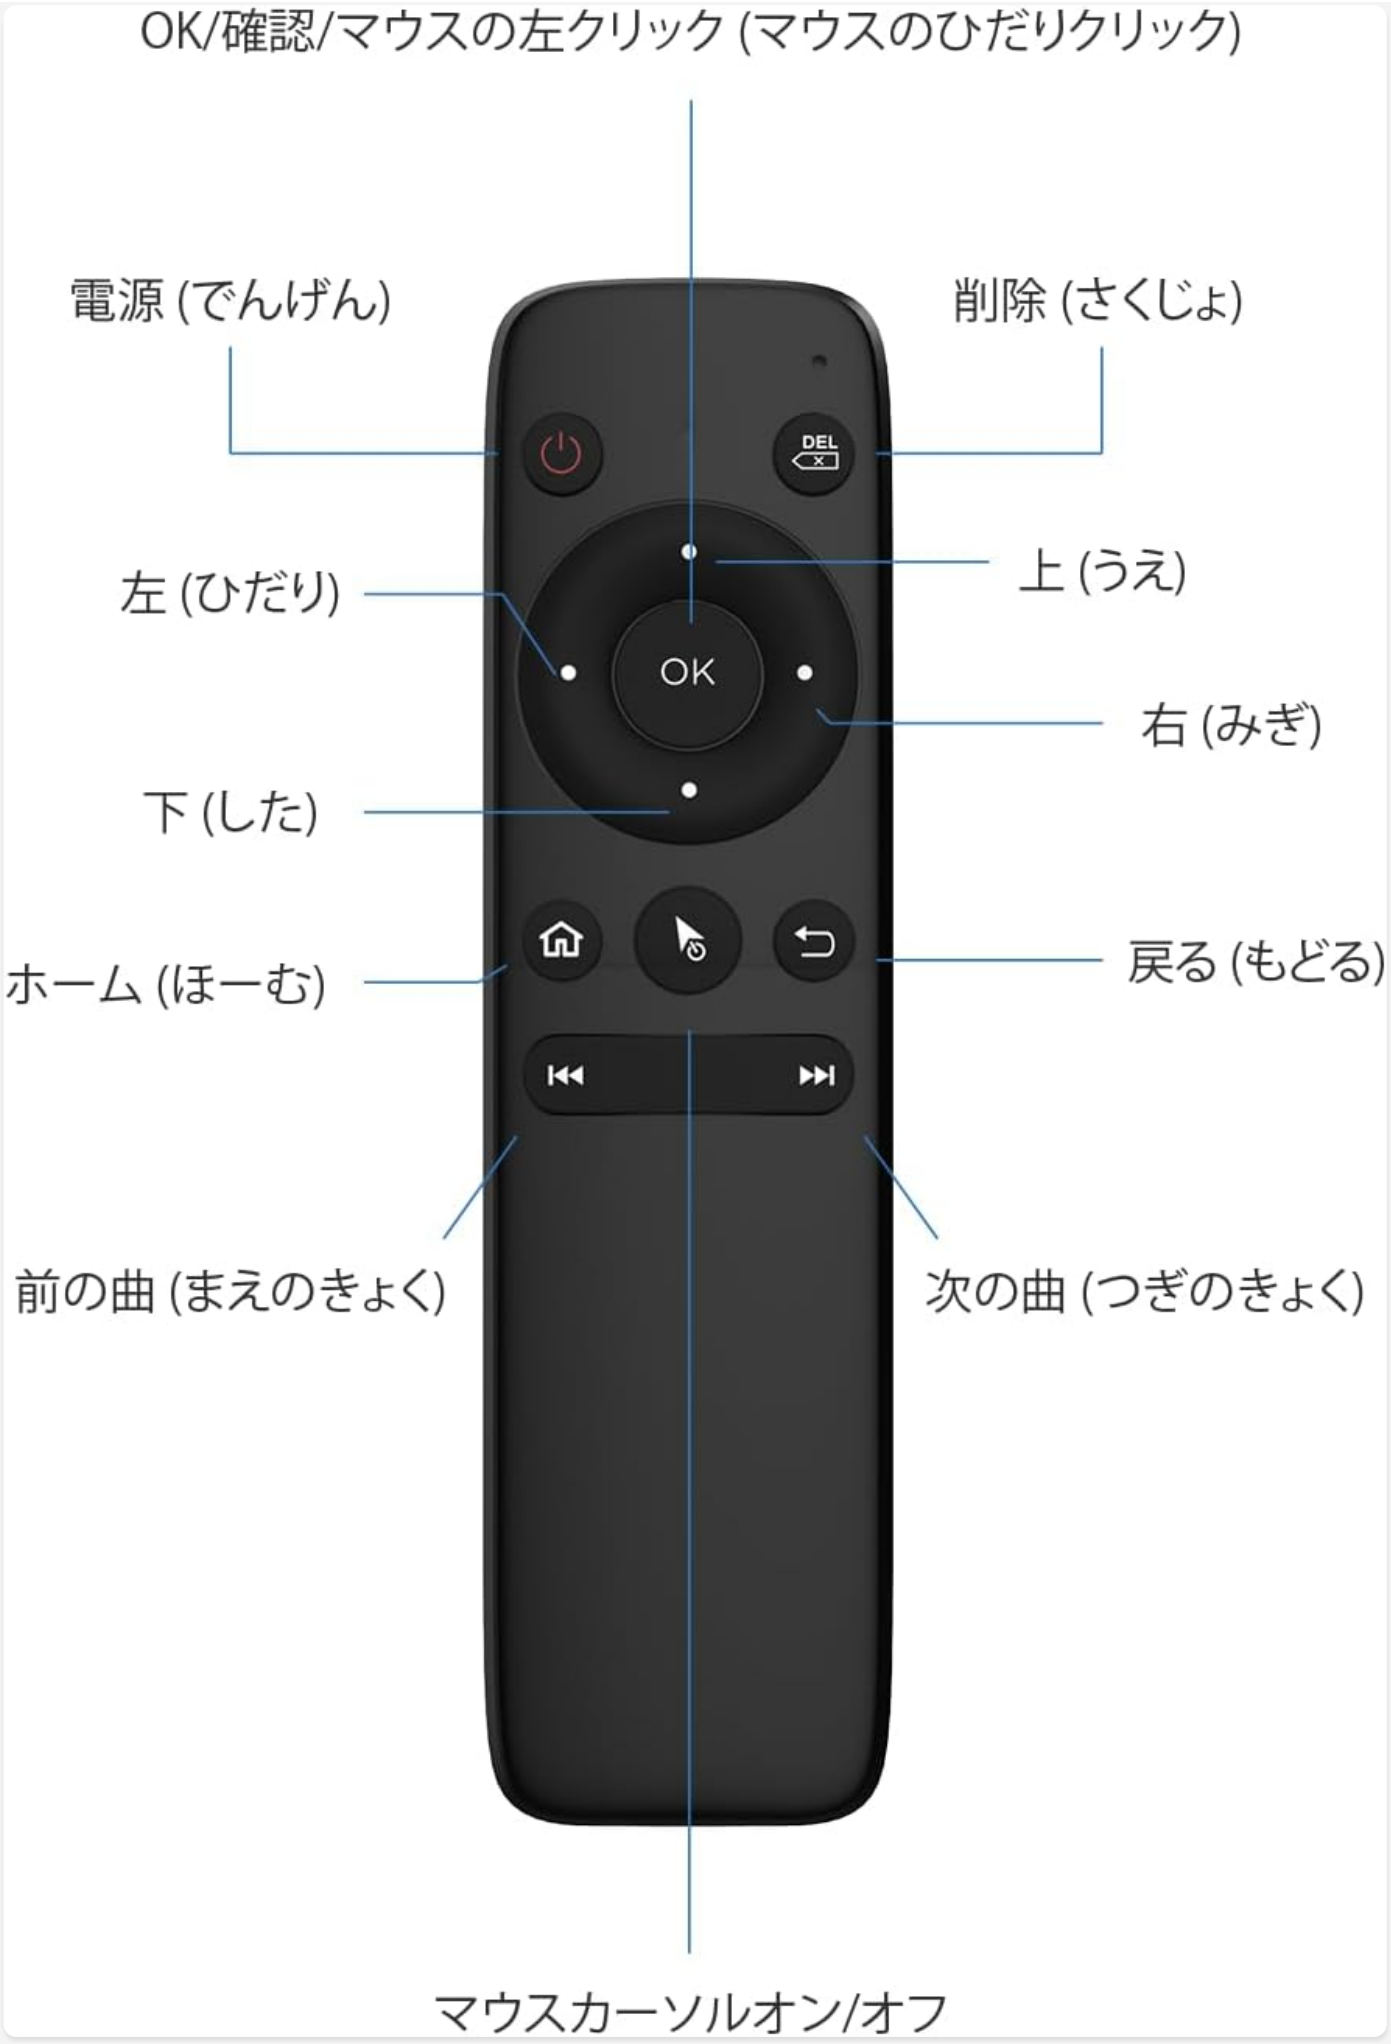


Image 2: Labeled diagram of the OTTOCAST Wireless Air Mouse Remote Control buttons.

- **Power Button:** Turns the device on or off.
- **Delete Button:** Used for deleting characters or functions.
- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and selections.
- **OK Button:** Confirms selections or acts as a mouse left-click.
- **Home Button:** Returns to the main home screen.
- **Back Button:** Returns to the previous screen or menu.
- **Previous Track Button:** Skips to the beginning of the current track or the previous track.
- **Next Track Button:** Skips to the next track.
- **Mouse Cursor On/Off Button:** Toggles the air mouse cursor functionality.

3. Specifications

Feature	Detail
Brand	OTTOCAST
Model	Wireless Air Mouse Remote Control
Compatibility	OTTOCAST OttoAibox E2, P3, i3, P3 Lite, NANO (supports up to 5 devices)
Power Source	AAA Batteries (not included)
Dimensions (Approx.)	132.7mm (Length) x 35.1mm (Width) x 15.5mm (Thickness)
UPC	725414684867
ASIN	B0FC27F3V1
Country of Origin	China



Image 3: Approximate dimensions and battery compartment location.

4. Setup

4.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide open the battery cover.
3. Insert two AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery cover securely.

Note: AAA batteries are not included and must be purchased separately.

4.2 Pairing with Your OTTOCAST Device

The remote control typically connects via Bluetooth or a USB receiver. Follow these general steps to pair it with your OTTOCAST OttoAibox device:

1. Ensure your OTTOCAST OttoAibox device is powered on and functioning.
2. Turn on the remote control by pressing the **Power Button**.
3. If your OttoAibox device uses a USB receiver for the remote, plug the receiver into an available USB port on the OttoAibox. The remote should connect automatically.
4. If your OttoAibox device uses Bluetooth for the remote, navigate to the Bluetooth settings on your OttoAibox. Put the remote control into pairing mode (refer to specific instructions if provided with the remote, often involves holding two buttons simultaneously). Select the remote control from the list of available Bluetooth devices on your OttoAibox to complete pairing.
5. Once successfully paired, you should be able to control your OttoAibox device using the remote.

5. Operating Instructions

5.1 Basic Navigation

- Use the **Directional Pad (Up, Down, Left, Right)** to move between menu items, icons, or text fields.
- Press the **OK Button** to select an item or confirm an action.
- Press the **Back Button** to return to the previous screen or exit a menu.
- Press the **Home Button** to quickly navigate to the main home screen of your OttoAibox device.

5.2 Air Mouse Function

1. Press the **Mouse Cursor On/Off Button** to activate the air mouse function. A cursor will appear on your screen.
2. Move the remote control in the air to control the cursor's movement on the screen.
3. Press the **OK Button** to perform a left-click action with the air mouse.
4. Press the **Mouse Cursor On/Off Button** again to deactivate the air mouse function and return to directional pad navigation.

5.3 Media Control

- Use the **Previous Track Button** to go back to the start of the current media track or to the previous track.
- Use the **Next Track Button** to skip to the next media track.

5.4 Text Input

When a text input field is active on your OttoAibox device, you can use the directional pad to select characters on an on-screen keyboard. The **Delete Button** can be used to remove characters.

6. Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Always use

new AAA batteries and dispose of old batteries responsibly.

- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

7. Troubleshooting

Problem	Possible Cause	Solution
Remote not responding.	Low or dead batteries. Not paired correctly. Out of range.	Replace batteries. Re-pair the remote control (see Section 4.2). Ensure the remote is within operating range of the OttoAibox device.
Air mouse cursor is erratic or not moving smoothly.	Interference. Sensor obstruction.	Ensure no obstructions between the remote and the OttoAibox. Try re-calibrating the air mouse (if feature exists, otherwise restart the OttoAibox).
Specific buttons are not working.	Software incompatibility. Physical damage.	Ensure your OttoAibox software is up to date. If the issue persists, contact customer support.

8. Warranty and Support

8.1 Warranty Information

This OTTOCAST Wireless Air Mouse Remote Control comes with a**2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.
Please retain your proof of purchase for warranty claims.

8.2 Customer Support

If you encounter any issues or have questions regarding your OTTOCAST Wireless Air Mouse Remote Control that are not addressed in this manual, please contact OTTOCAST customer support.
For more information and support, you can visit the official OTTOCAST store on Amazon:OTTOCAST Amazon Store.

9. Official Product Videos

No official product videos created by the seller were found for this specific product in the provided data.

© 2026 OTTOCAST. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FC27F3V1

More documents and user manuals: **https://manuals.plus/**