TECURS Bluetooth Keyboard for Surface Pro 11/10/9/8/X

TECURS Bluetooth Keyboard for Surface Pro 11/10/9/8/X User Manual

Model: Bluetooth Keyboard for Surface Pro 11/10/9/8/X

1. INTRODUCTION

This manual provides detailed instructions for the TECURS Bluetooth Keyboard, designed for use with Microsoft Surface Pro 11, 10, 9, 8, and X (13-inch models). Please read this manual carefully before using the product to ensure proper operation and to maximize its features.

2. COMPATIBILITY

IMPORTANT: Before use, verify your device model. This Bluetooth keyboard is exclusively compatible with Microsoft Surface Pro 11, Surface Pro 10, Surface Pro 9, Surface Pro 8, and Surface Pro X (13-inch models). It is not compatible with other Surface models.
To check your device model, navigate to **Settings > System > About** on your Surface Pro device.

COMPATIBLE MODELS!

✅

Fits for Surface Pro 11

Fits for Surface Pro 10

Fits for Surface Pro 9

Fits for Surface Pro 8

Fits for Surface Pro X

❌ Not For Surface Pro 12   ❌ Not For Surface Pro 4

❌ Not For Surface Pro 7+   ❌ Not For Surface Pro 3

❌ Not For Surface Pro 7   ❌ Not For Surface GO 4/3/2/1

❌ Not For Surface Pro 6   ❌ Not For Surface Book

❌ Not For Surface Pro 5

Figure 2.1: Compatible Surface Pro Models. This image illustrates which Surface Pro models are compatible (Surface Pro 11, 10, 9, 8, X) and which are not (e.g., Surface Pro 12, 7+, 7, 6, 5, 4, 3, Go, Book).
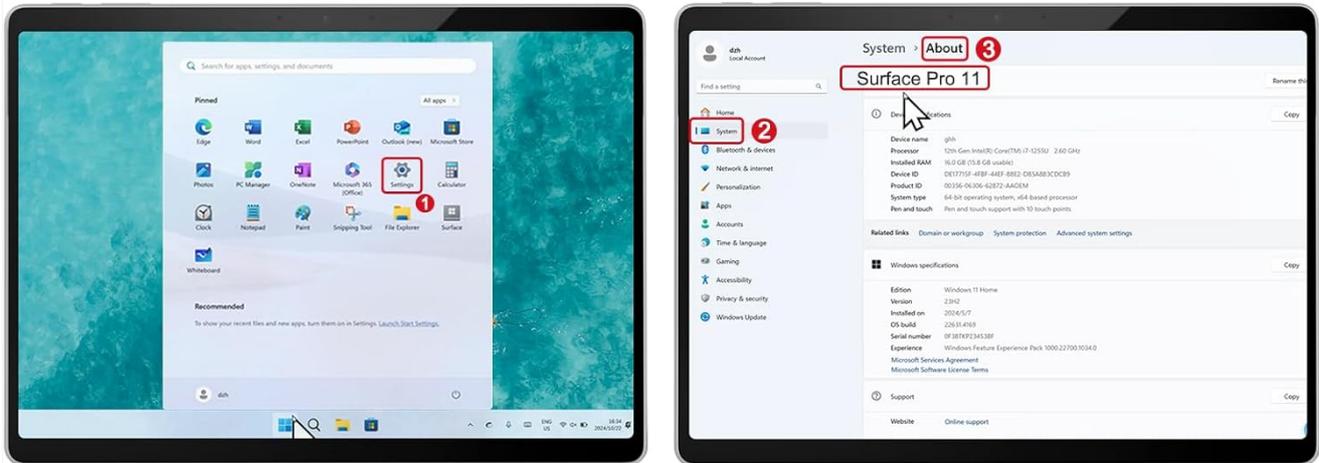
Figure 2.2: Steps to check your Surface Pro model. This image displays the steps: 1. Settings, 2. System, 3. About, to confirm your device model.

3. PACKAGE CONTENTS

The package includes the following items:

- 1 x TECURS Bluetooth Keyboard
- 1 x Type-C Charging Cable
- 1 x User Manual

4. SETUP & CONNECTION

4.1 Physical Attachment

The keyboard attaches to your Surface Pro via a magnetic strip. This strip is designed to securely fix the keyboard to the tablet and allows for two different typing angles:

1. **Fold Magnetic Stripe:** Fold the magnetic stripe to elevate the keyboard for a more ergonomic typing position.
2. **Attach Directly:** Attach the keyboard directly to the Surface Pro for a flat typing surface.

Note: The magnetic strip is for physical attachment only and does not provide charging or data connection to the tablet.

Figure 4.1: Two typing angles. This image demonstrates how to position the keyboard for an elevated angle by folding the magnetic strip, or for a flat angle by attaching it directly.

4.2 Bluetooth Pairing

This keyboard supports Bluetooth manual pairing only. Magnetic automatic connection is not supported.

1. **Turn on the Power Switch:** Locate the power switch on the keyboard and slide it to the ON position.
2. **Activate Keyboard Bluetooth:** Press the **FN + C** keys simultaneously on the keyboard to activate its Bluetooth pairing mode. The Bluetooth indicator light will flash.
3. **Enable Bluetooth on Device:** On your Microsoft Surface Pro, go to **Settings > Bluetooth & devices** and ensure Bluetooth is turned ON.
4. **Select Keyboard for Pairing:** In the list of available Bluetooth devices on your Surface Pro, select "Bluetooth Keyboard" to initiate pairing.
5. **Confirm Connection:** Once paired, the Bluetooth indicator light on the keyboard will stop flashing and remain solid, and your device will show the keyboard as connected.
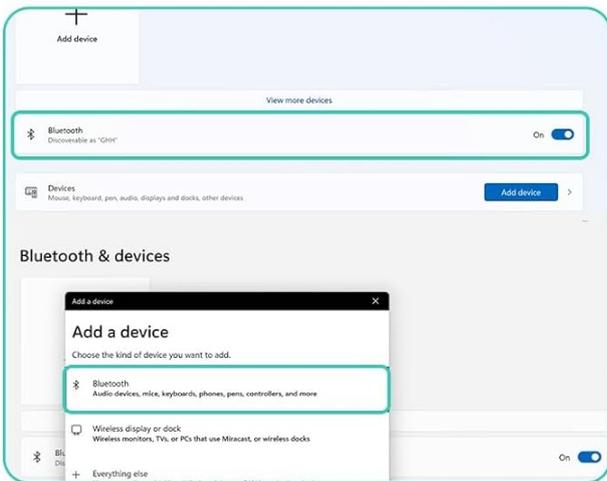
Bluetooth Keyboard Connection Steps

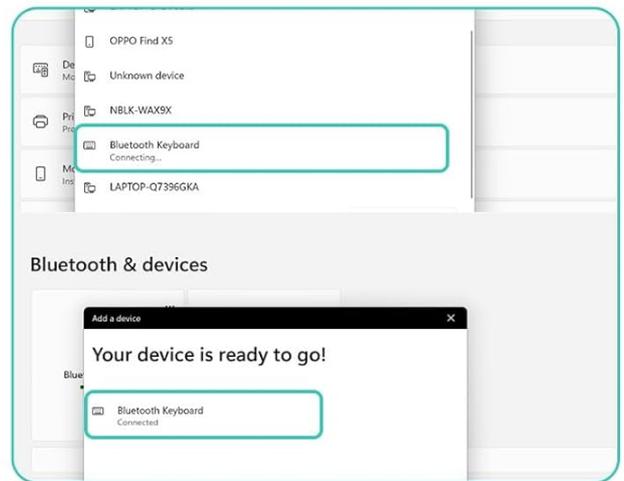⚠️ **Note: Bluetooth connection only! Not Magnetic/Auto pairing!**

1 Turn on the power Switch

2 Press **FN+C** key to active Bluetooth of Keyboard

3 Turn Bluetooth on in Settings on your device

4 Select "Bluetooth Keyboard'for pairing

Figure 4.2: Bluetooth Keyboard Connection Steps. This image visually guides through turning on the keyboard, pressing FN+C, enabling Bluetooth on the device, and selecting "Bluetooth Keyboard" for pairing.

5. CHARGING

The keyboard is equipped with a rechargeable battery. Use the included Type-C charging cable to charge the device.

- Connect the Type-C cable to the charging port on the keyboard and the other end to a USB power source.
- A full charge typically takes 2-3 hours.
- The keyboard provides approximately 50 hours of continuous operation on a full charge.

Note: The keyboard cannot be charged via the magnetic strip; it must be charged using the provided Type-C cable.

Figure 5.1: Keyboard dimensions and charging port. This image highlights the Type-C charging port and indicates the charging time (2 hours) and working time (50 hours).

6. OPERATING INSTRUCTIONS

6.1 Adjustable Backlight

The keyboard features a 7-color adjustable backlight with 3 brightness levels for comfortable typing in various lighting conditions.

- To change backlight colors, press **FN +** (light bulb icon key).
- To adjust brightness levels, press **FN +** ⬆ (up arrow with light bulb) or **FN +** ⬇ (down arrow with light bulb).

Figure 6.1: Backlight adjustment. This image displays the keyboard with different backlight colors and illustrates the three brightness levels.
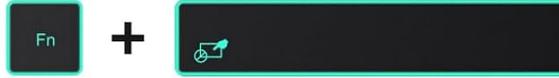
6.2 Precision Touchpad & Media Shortcuts

The responsive touchpad supports multi-touch gestures for effortless navigation. Cursor sensitivity can be adjusted in your device's settings (**Settings > Bluetooth & devices > Touchpad > Cursor speed**).

Customizable hotkeys allow you to adjust volume, media playback, and screen brightness without interrupting your workflow.

Comfortable Typing Sensitive Control

Touchpad ON/OFF [Fn] **+**

Scissor Swiths Silent and Comfortable Typing

Responsive Touchpad Convenient and Fast Operation

Pen Holder--Not Charing

Left button   Right button

Figure 6.2: Touchpad and Pen Holder. This image highlights the touchpad area, indicating left and right click zones, and the integrated pen holder (non-charging).

6.3 Function Keys

The top row of keys provides various function shortcuts. Press the **FN** key in combination with the desired function key (F1-F12) to activate its secondary function.

- **FN + F1:** Decreases or increases keyboard backlight, including off.
- **FN + F2:** Mute audio.
- **FN + F3:** Decreases volume.
- **FN + F4:** Increases volume.
- **FN + F5:** Play/Pause media.
- **FN + F6:** Dims the screen.
- **FN + F7:** Brightens the screen.
- **FN + F8:** Print Screen.
- **FN + F9:** Home.

- **FN + F10:** End of the Line.
- **FN + F11:** Page Up.
- **FN + F12:** Page Down.
- **Del:** Delete.

Friendly Reminder: The first key on the bottom left of the keyboard is the **FN** key, not the **Ctrl** key. When using **Ctrl + C** for copying, ensure you press the correct combination to avoid accidentally triggering **FN + C**, which initiates Bluetooth reconnection and can cause the keyboard to disconnect.

7. MAINTENANCE

To ensure the longevity and optimal performance of your TECURS Bluetooth Keyboard, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the keyboard surface. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the keyboard in a clean, dry environment away from extreme temperatures, direct sunlight, and excessive moisture.
- **Avoid Spills:** Keep liquids away from the keyboard to prevent damage to internal components.
- **Handle with Care:** Avoid dropping the keyboard or subjecting it to strong impacts.

8. TROUBLESHOOTING

If you encounter issues with your keyboard, refer to the following troubleshooting steps:

- **Keyboard Not Connecting:**

  - Ensure the keyboard is powered on.
  - Confirm Bluetooth is enabled on your Surface Pro.
  - Re-initiate pairing mode on the keyboard by pressing **FN + C**.
  - Remove any previously paired