TOTO SW3946#01

TOTO WASHLET KS6 Electronic Bidet Toilet Seat Instruction Manual

Model: SW3946#01

1. Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your TOTO WASHLET KS6 Electronic Bidet Toilet Seat. Please read this manual thoroughly before installation and use to ensure proper function and safety. Keep this manual for future reference.

The TOTO WASHLET KS6 is an advanced electronic bidet toilet seat designed to provide enhanced personal hygiene and comfort. It features instantaneous water heating, various cleansing functions, a heated seat, warm air dryer, and an automatic deodorizer.



Image 1.1: TOTO WASHLET KS6 Electronic Bidet Toilet Seat with its remote control.

2. Safety Information

Please observe the following safety precautions to prevent injury or damage to the product.

- **Electrical Safety:** Ensure the product is connected to a properly grounded 120V GFCI outlet. Do not use extension cords unless absolutely necessary and ensure they are rated for the product's power requirements. Do not handle the plug with wet hands.
- **Water Supply:** Ensure water supply connections are secure to prevent leaks. Use only potable water.
- **Installation:** Installation should be performed by a qualified individual if you are unsure about plumbing or electrical connections. Follow all local plumbing and electrical codes.
- **Cleaning:** Disconnect power before cleaning. Do not use abrasive cleaners or harsh chemicals that could damage surfaces or internal components.
- **Children and Individuals with Reduced Capabilities:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

3. Product Features

The TOTO WASHLET KS6 offers a range of features designed for comfort and hygiene:

- **Instantaneous Water Heating:** Provides a continuous supply of warm water for cleansing.
- **Heated Seat:** Adjustable temperature settings for comfort.
- **PREMIST:** Mists the toilet bowl with water before each use to help prevent waste from sticking.
- **EWATER+ Wand Cleaning:** Electrolyzed water cleans the wand inside and out before and after each use.
- **Nightlight:** Illuminates the toilet bowl for convenience in low light conditions.
- **Automatic Deodorizer:** Neutralizes odors using an air filter.
- **Warm Air Dryer:** Adjustable temperature warm air for drying after cleansing.
- **Adjustable Spray Settings:** Includes Rear, Soft Rear, Front, Oscillating, and Pulsating spray options with adjustable pressure and wand position.



Image 3.1: Overview of key comfort and hygiene features.



Image 3.2: Instantaneous water heating system for continuous warm water.



Image 3.3: Clean Resin material for easier cleaning of the wand and seat.



Image 3.4: Integrated night light for visibility in the dark.



Image 3.5: Adjustable water spray and pressure options.

4. Installation and Setup

4.1 Pre-Installation Checklist

- Verify toilet type: This WASHLET is designed for elongated toilets.
- Ensure a 120V GFCI electrical outlet is available within 3 feet of the toilet.
- Confirm access to the toilet's water supply valve.
- Gather required tools: Phillips-head screwdriver and measuring tape.

4.2 What's Included and Required



Image 4.1: Components included with the WASHLET and tools required for installation.

4.3 Fit Guide

Ensure your toilet dimensions are compatible with the WASHLET KS6. This model is designed for elongated toilets.

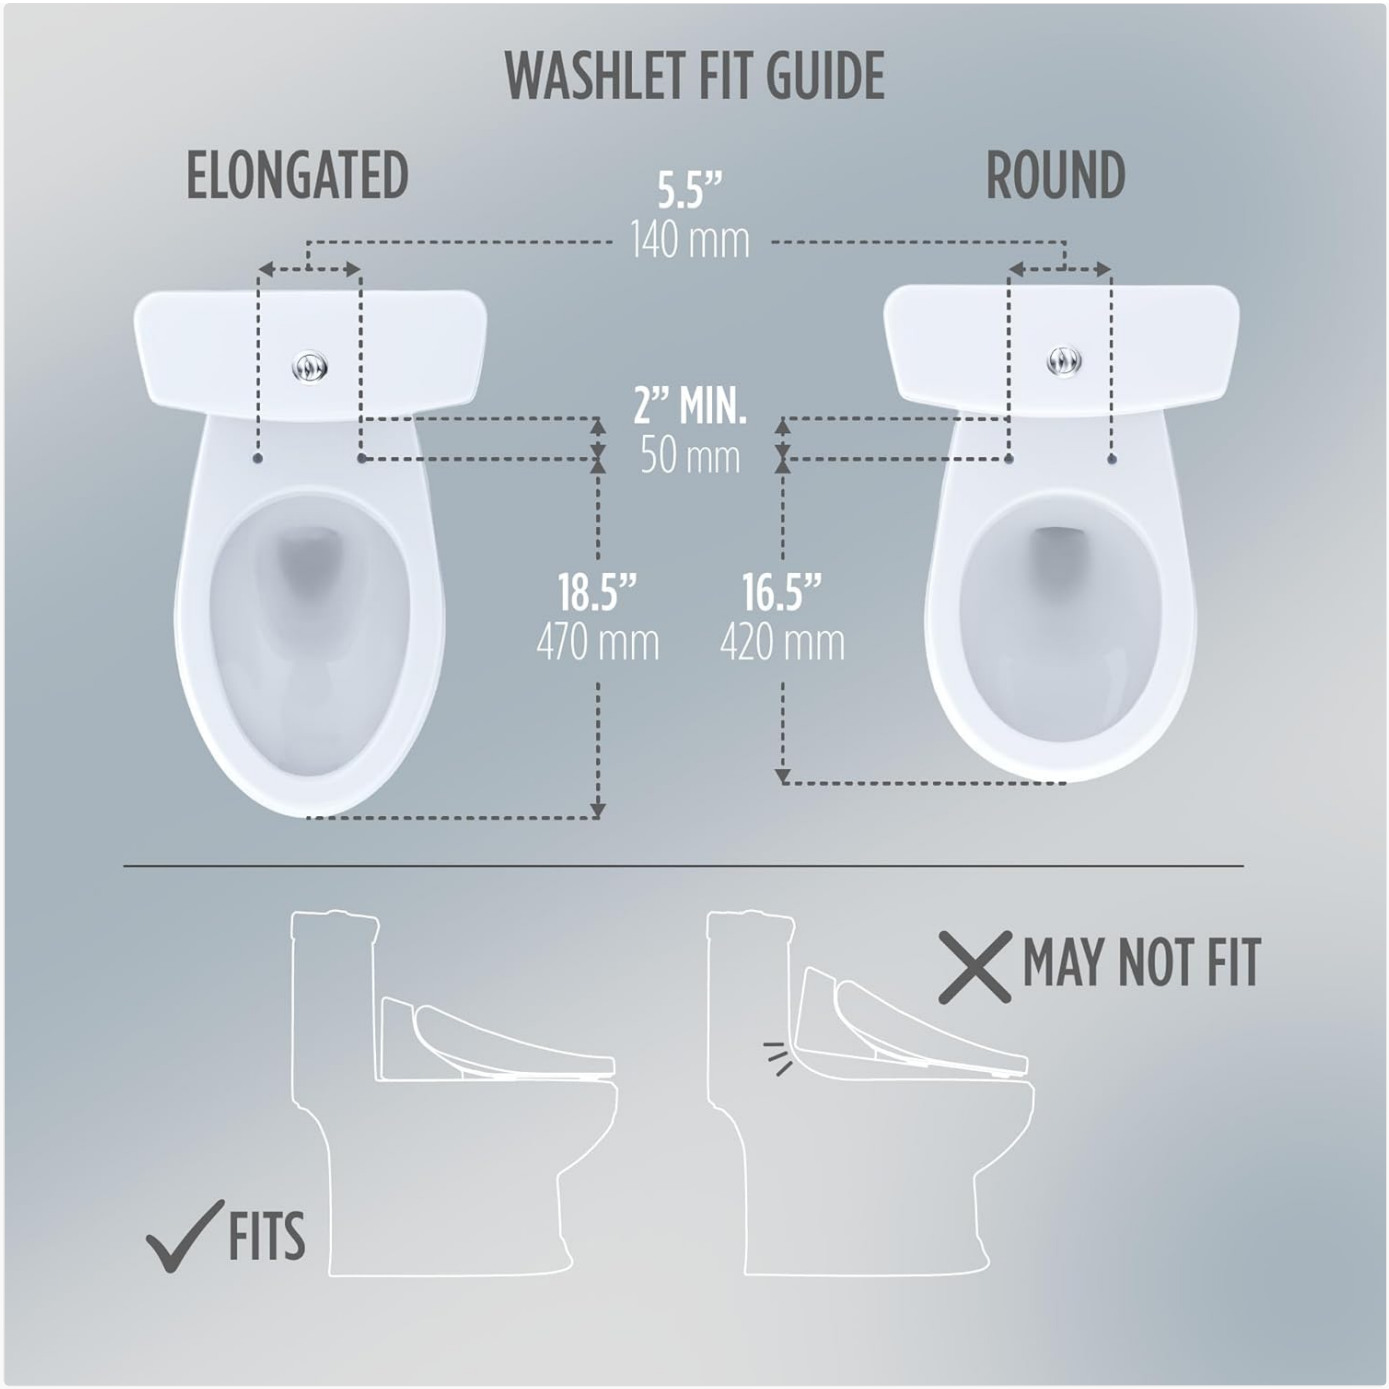


Image 4.2: WASHLET fit guide for elongated toilets.

4.4 General Installation Steps

1. **Remove Existing Toilet Seat:** Detach your current toilet seat from the toilet bowl.
2. **Install Mounting Bracket:** Secure the WASHLET mounting bracket onto the toilet bowl using the provided hardware.
3. **Connect Water Supply:** Turn off the water supply to the toilet. Install the T-connector to the toilet's fill valve. Connect the WASHLET's water supply hose to the T-connector.
4. **Attach WASHLET:** Slide the WASHLET onto the mounting bracket until it clicks into place.
5. **Connect Power:** Plug the WASHLET into the grounded 120V GFCI outlet.
6. **Restore Water Supply:** Slowly turn on the water supply and check for leaks.
7. **Test Functions:** Verify all functions of the WASHLET are operating correctly.

For detailed, step-by-step interactive 3D instructions, you can download the BILT Intelligent Instructions app.



Image 4.3: BILT Intelligent Instructions app for guided installation.

5. Operation

The WASHLET KS6 is operated using the included remote control. Ensure the remote control batteries are installed correctly.

5.1 Remote Control Functions

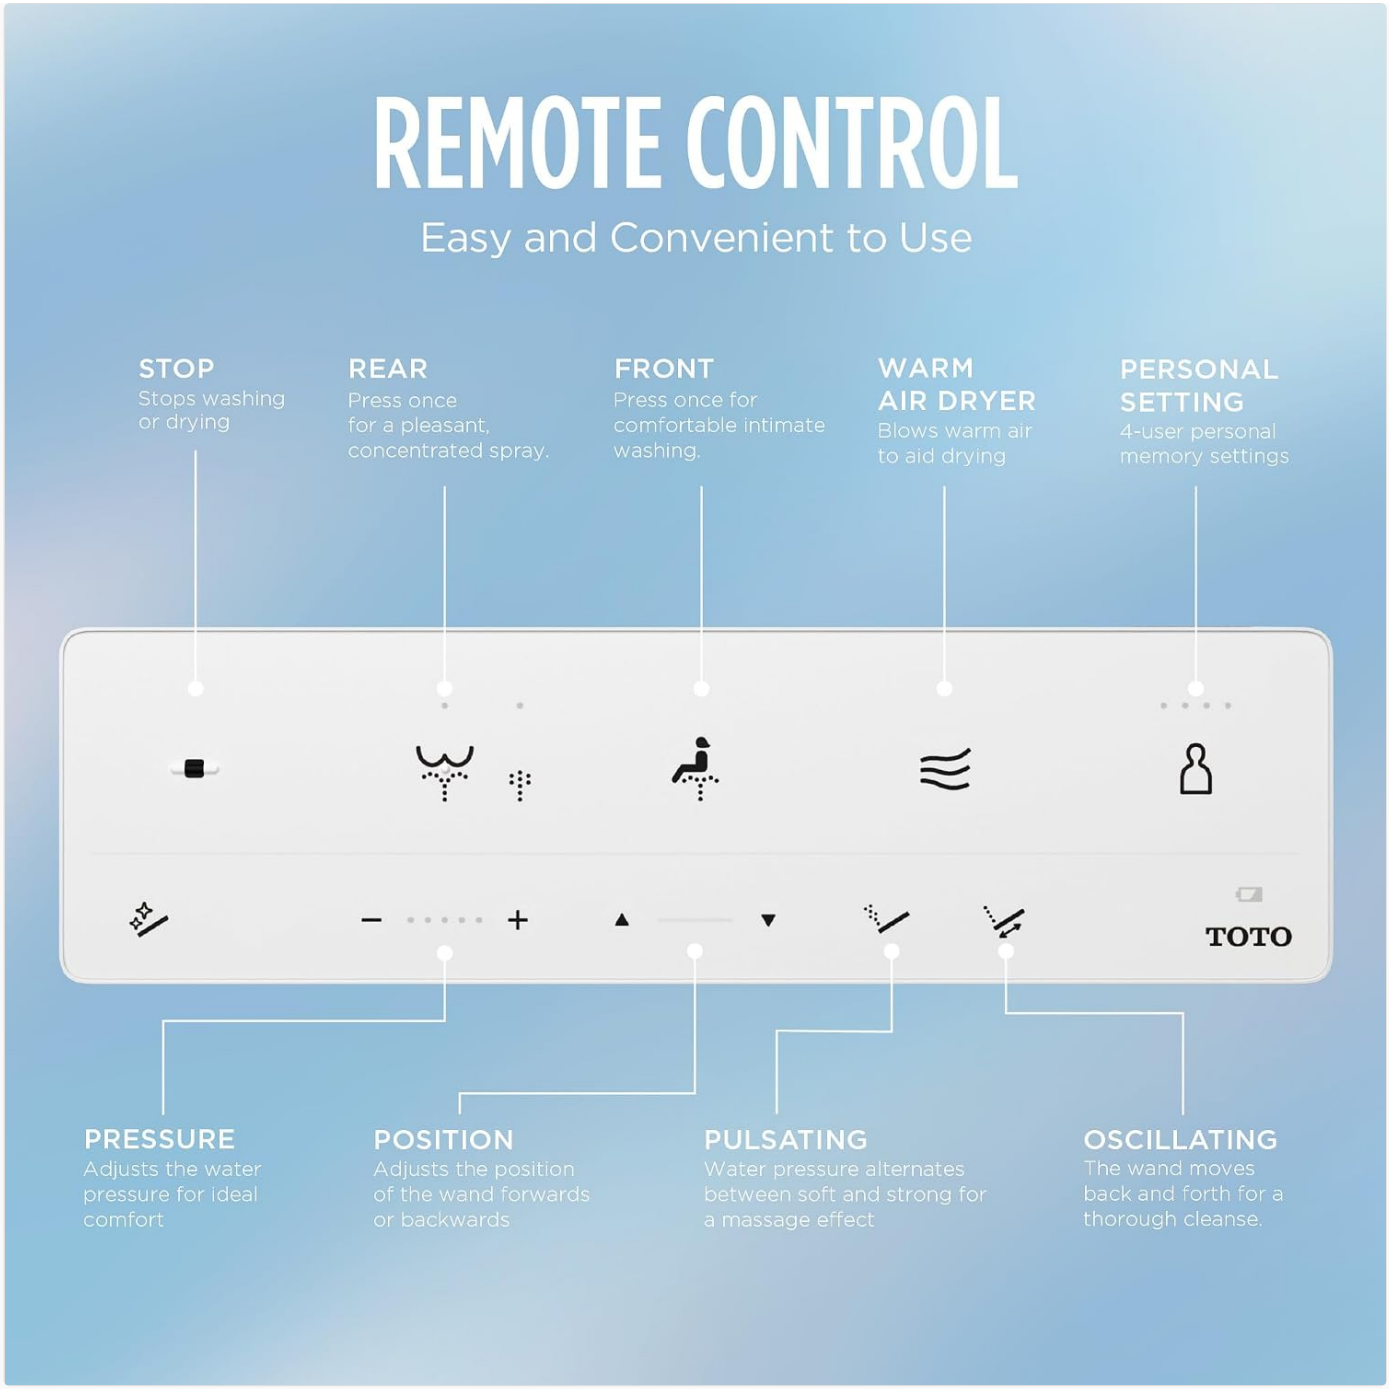


Image 5.1: Remote control layout and function descriptions.

- **STOP:** Stops washing or drying.
- **REAR:** Activates the rear cleansing spray.
- **FRONT:** Activates the front cleansing spray for delicate areas.
- **WARM AIR DRYER:** Initiates the warm air drying function.
- **PERSONAL SETTING:** Allows for saving and recalling up to 4 individual user settings.
- **PRESSURE (+/-):** Adjusts the water spray pressure.
- **POSITION (arrows):** Adjusts the wand position forward or backward.
- **PULSATING:** Alternates water pressure between soft and strong for a massage effect.
- **OSCILLATING:** Moves the wand back and forth for broader spray coverage.

Note: The WASHLET functions will only activate when a user is seated on the toilet seat.

6. Maintenance

Regular cleaning and maintenance will ensure the longevity and optimal performance of your WASHLET KS6.

6.1 General Cleaning

- Disconnect power before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth and mild, non-abrasive cleaner.
- Do not spray water directly onto the unit or remote control.

6.2 PREMIST Function

The PREMIST function automatically mists the toilet bowl with water before each use, making it more difficult for waste to adhere and simplifying subsequent cleaning.

6.3 EWATER+ Wand Cleaning

The cleansing wand automatically cleans itself with EWATER+ (electrolyzed water) before and after every use, and between each setting selection, ensuring hygienic operation.

6.4 Quick Release for Cleaning

The WASHLET features a quick-release button, allowing you to easily remove the entire seat for thorough cleaning of both the WASHLET and the toilet bowl.



Image 6.1: Quick release mechanism for simplified cleaning.

7. Troubleshooting

If you encounter issues with your WASHLET KS6, please refer to the following general troubleshooting tips. For more specific problems, consult the full TOTO WASHLET KS6 user manual or contact customer support.

- **No Power:** Check if the power cord is securely plugged into a working GFCI outlet. Verify the circuit breaker has not tripped.
- **No Water Spray:** Ensure the water supply valve is fully open. Check if the seat sensor is activated (you must be seated for the spray to operate).
- **Water Not Warm:** Allow a few moments for the instantaneous heater to warm the water. Check temperature settings on the remote.
- **Remote Control Not Responding:** Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the WASHLET.

- **Leaks:** Turn off the water supply immediately. Check all water connections for tightness. If leaks persist, contact customer support.

8. Specifications

Specification	Detail
Model Number	SW3946#01
Color	Cotton White
Material	Plastic
Shape	Elongated (Oval)
Product Dimensions (L x W)	20.81" x 15.25" (529mm x 387mm)
Height	5.5" (140mm)
Seat Height	1.30" (33mm)
Item Weight	13.5 Pounds
Power Supply	120V AC, 60Hz
Batteries (Remote)	2 AA batteries (included)
UPC	739268467675



Image 8.1: Product dimensions of the WASHLET KS6.



Image 8.2: Product certifications for quality and safety.

9. Warranty Information

Specific warranty details for the TOTO WASHLET KS6 (Model SW3946#01) are provided with the product packaging. Please refer to the warranty card or visit the official TOTO website for the most current and complete warranty terms and conditions. Retain your proof of purchase for warranty claims.

10. Customer Support

For assistance with installation, operation, troubleshooting, or any other inquiries regarding your TOTO WASHLET KS6, please contact TOTO Technical Support.

TOTO Technical Support: 1-888-295-8134 (Press 4 when prompted)

You may also find support and a network of factory-trained installers on the TOTO website.



Image 10.1: TOTO Factory Trained Installer Network map.

© 2025 TOTO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question