Universal Pictures B0FCYXJL4W

Jurassic World Rebirth DVD Instruction Manual

Model: B0FCYXJL4W

Introduction Setup Operation Special Features Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

This manual provides essential information for the proper use and care of your Jurassic World Rebirth DVD. Jurassic World Rebirth is an action-adventure film that continues the iconic Jurassic series. This DVD edition allows you to experience the film in standard definition with Dolby Digital 5.1 audio.

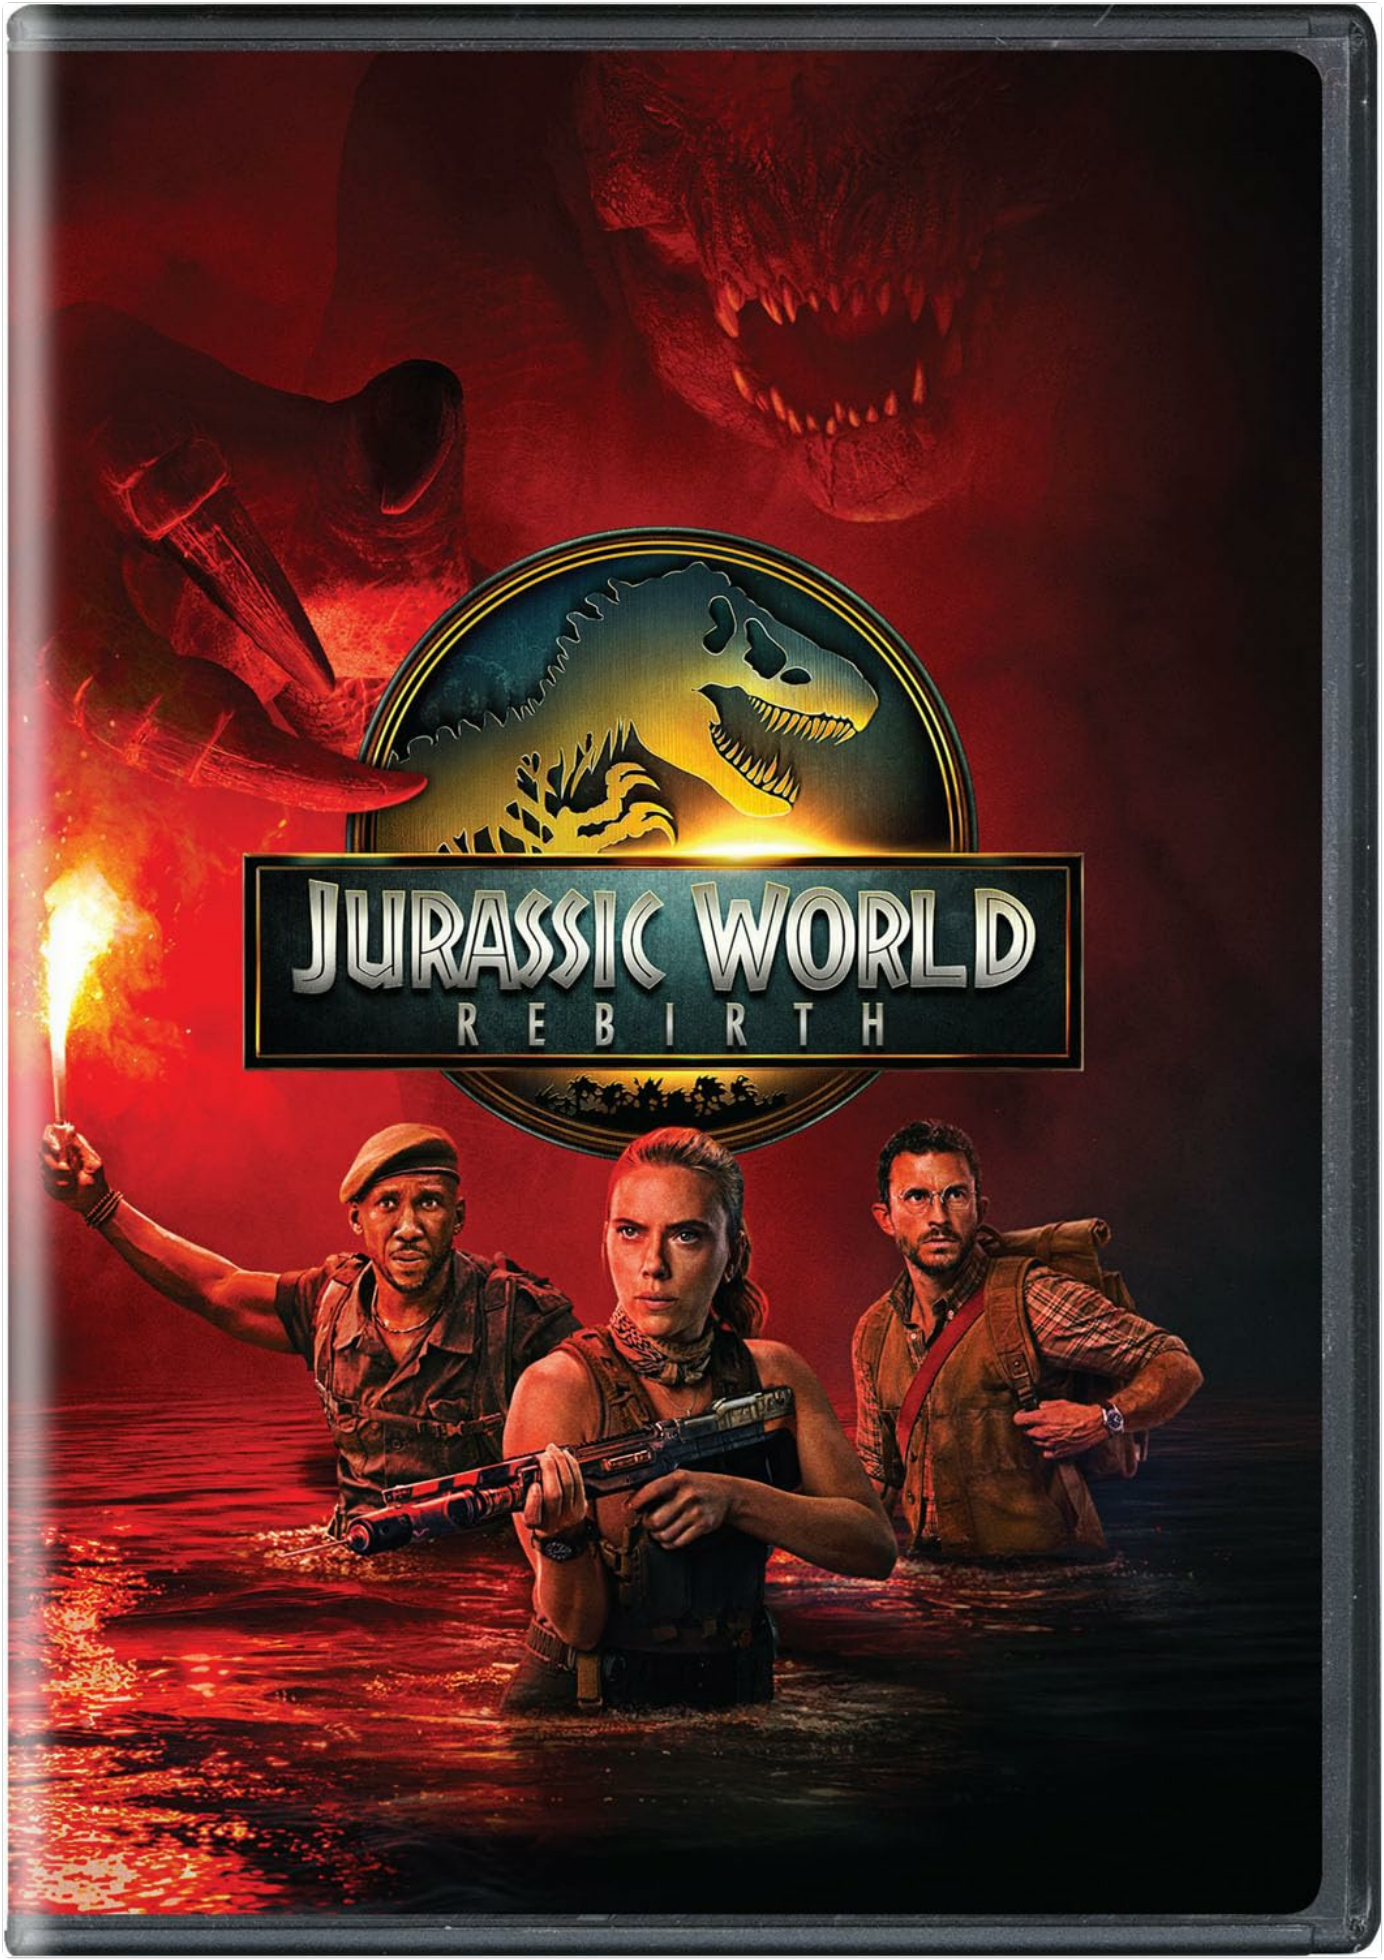


Image 1.1: Front cover of the Jurassic World Rebirth DVD. The cover features the movie title, a dinosaur silhouette, and three main characters in a water setting.



Image 1.2: Back cover of the Jurassic World Rebirth DVD. This image displays the film's synopsis, cast information, MPAA rating, runtime, and a list of exclusive bonus features.

2. Setup

To begin watching your Jurassic World Rebirth DVD, follow these steps:

1. **Connect your DVD Player:** Ensure your DVD player is properly connected to your television or display device using appropriate audio and video cables (e.g., HDMI, composite, component).
2. **Power On:** Turn on your television and your DVD player. Select the correct input source on your television for the DVD player.
3. **Insert the DVD:** Gently open the DVD player tray or slot. Hold the Jurassic World Rebirth DVD by its edges to avoid touching the playing surface. Insert the disc with the label side facing up into the tray or slot.
4. **Close Tray:** Close the DVD player tray or allow the player to automatically draw in the disc. The player will typically begin reading the disc and display the main menu or start playback automatically.

3. Operating Instructions

Navigate and control your DVD playback using your DVD player's remote control.

3.1 Main Menu Navigation

- Upon disc insertion, the main menu will usually appear. Use the arrow keys on your remote to highlight options such as "Play Movie," "Scene Selection," "Special Features," or "Language Settings."
- Press the "Enter" or "OK" button to select a highlighted option.

3.2 Playback Controls

- **Play/Pause:** Press the "Play" button to start playback or "Pause" to temporarily stop. Press "Play" again to resume.
- **Stop:** Press the "Stop" button to end playback and return to the main menu or disc start.
- **Fast Forward/Rewind:** Use the "FF" (Fast Forward) or "RW" (Rewind) buttons to quickly scan through the movie. Multiple presses may increase speed.
- **Skip:** Use the "Next Chapter" or "Previous Chapter" buttons to jump between scenes.

3.3 Language and Subtitle Settings

- Access the "Language" or "Audio Settings" option from the main menu or during playback (if your player supports it).
- Select your preferred audio track (e.g., English Dolby Digital 5.1, Spanish Dolby Digital 5.1).
- Select your preferred subtitle track (e.g., English, Spanish, Off).



Image 3.1: A character holding a lit flare, illuminating a dark, tense scene from the film.



Image 3.2: A character equipped with a specialized weapon, navigating through dense jungle foliage.



Image 3.3: Two characters cautiously observing their surroundings from within a field of tall plants.



Image 3.4: A large dinosaur, likely a Tyrannosaurus Rex, roaring amidst lush jungle vegetation.



Image 3.5: An underwater scene showing a person attempting to evade a large aquatic dinosaur.



Image 3.6: A character climbing a ladder on a boat, narrowly escaping a massive aquatic creature lunging from the water.

4. Special Features

The Jurassic World Rebirth DVD includes exclusive bonus content to enhance your viewing experience. These features can typically be accessed from the main menu of the DVD.

- **Alternate Opening:** An alternative beginning to the film.
- **Deleted Scenes:** Scenes that were filmed but not included in the final theatrical release.
- **Gag Reel:** A compilation of outtakes and humorous moments from the production.
- **Making-of Documentary:** Behind-the-scenes footage and interviews detailing the production of the film.
- **And More!:** Additional bonus content may be included.



Image 4.1: Promotional banner highlighting "Over One Hour of Special Features" available on the DVD, including deleted scenes, an alternate opening, and a making-of documentary.

5. Maintenance and Care

Proper care of your DVD will ensure its longevity and optimal playback quality.

- **Handling:** Always hold the DVD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playing surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards. Do not use abrasive materials or harsh cleaning chemicals.
- **Storage:** Store the DVD in its original case when not in use to protect it from dust, scratches, and direct sunlight.
- **Environment:** Keep the DVD away from extreme temperatures, high humidity, and direct heat sources.

6. Troubleshooting

If you encounter issues while playing your DVD, refer to the following common solutions:

Problem	Solution
Disc does not play or load.	• Ensure the disc is inserted correctly (label side up). • Check the disc for visible scratches or smudges. Clean if necessary. • Try playing another DVD to confirm the player is functioning correctly. • Restart your DVD player and television.
No audio or poor sound quality.	• Verify all audio cables between the DVD player and TV/audio system are securely connected. • Check the volume level on both your TV and DVD player. • Ensure the correct audio track is selected in the DVD's language settings. • Try a different audio input on your TV.
No video or distorted picture.	• Verify all video cables between the DVD player and TV are securely connected. • Ensure your TV is set to the correct input source for the DVD player. • Check the disc for severe damage.
Disc skips or freezes during playback.	• Clean the disc thoroughly with a soft, lint-free cloth. • Ensure the DVD player is on a stable surface to prevent vibrations. • The disc may be damaged; try playing it in another DVD player if available.

7. Specifications

Key technical details for the Jurassic World Rebirth DVD (Model B0FCYXJL4W):

- **Model Number (ASIN):** B0FCYXJL4W
- **Media Format:** DVD
- **MPAA Rating:** PG-13 (Parents Strongly Cautioned)
- **Run Time:** 2 hours and 14 minutes
- **Release Date:** September 9, 2025
- **Actors:** Scarlett Johansson, Jeff Goldblum, Bryce Dallas Howard, Chris Pratt, Laura Dern
- **Languages:** English (Dolby Digital 5.1), Spanish (Dolby Digital 5.1)
- **Studio:** STUDIO DISTRIBUTION SERVICES
- **Product Dimensions:** 1 x 1 x 1 inches
- **Item Weight:** 3.2 ounces
- **Genre:** Action & Adventure, Science Fiction, Thriller
- **UPC:** 0191329275535

8. Warranty and Support

For issues related to manufacturing defects or damaged discs, please contact the retailer from whom you purchased the product. Most retailers offer a return or exchange policy for defective media within a specified period.
For general inquiries about the film content or Universal Pictures products, please refer to the official Universal Pictures website or customer service channels.

© 2025 Universal Pictures. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question