WINGBO SYCF5410

WINGBO 54 Inch Ceiling Fan without Light - White and Oak Instruction Manual

Model: SYCF5410

Introduction

Welcome to your new WINGBO 54-inch ceiling fan. This manual provides detailed instructions for safe installation, operation, and maintenance of your fan. Please read all instructions carefully before beginning installation and retain this manual for future reference. This ceiling fan features 5 carved solid wood blades, a 6-speed reversible DC motor, and remote control operation, designed for quiet and efficient air circulation in indoor spaces.

Safety Information

Important Safety Instructions:

- Always disconnect power at the circuit breaker before installation or servicing.
- Ensure the installation site can support the fan's weight (approximately 15-20 kg).
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- Do not operate the fan if any part is damaged.
- Maintain a minimum clearance of 7 feet from the floor to the bottom of the fan blades.
- Ensure blades are securely fastened before operation.

Package Contents

Verify that all components are present before beginning installation:

- Fan Motor Housing
- 5 Solid Wood Blades
- Mounting Bracket
- Downrods (4.5-inch and 12-inch)
- Canopy
- Remote Control with Wall Stand

- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual



Image: Key components of the WINGBO 54 Inch Ceiling Fan, showing the solid wood blades, the reversible DC motor, the high-quality canopy, and the two included downrod sizes (4.5 and 12 inches).

Setup and Installation

Professional installation is recommended. Ensure power is OFF at the circuit breaker before proceeding.

1. Pre-Installation

- Identify a suitable location for the fan, ensuring adequate clearance from walls and obstructions.
- Confirm the electrical box is securely mounted and capable of supporting a ceiling fan.

2. Mounting Bracket Installation

- Attach the mounting bracket to the ceiling electrical box using the provided screws and washers.

3. Downrod and Motor Assembly

- Select either the 4.5-inch or 12-inch downrod based on your ceiling height.
- Feed the electrical wires from the fan motor through the chosen downrod.
- Secure the downrod to the fan motor housing.

4. Hanging the Fan

- Carefully lift the fan assembly and place the downrod ball into the mounting bracket.

5. Wiring Connections

- Connect the fan's electrical wires to the household wiring according to the wiring diagram in the detailed instruction manual (included in the box). Ensure all connections are secure with wire nuts.

6. Blade Attachment

- Attach each of the 5 solid wood blades to the fan motor using the provided screws. Ensure they are tightened securely.

7. Canopy Installation

- Slide the canopy up to the ceiling and secure it to the mounting bracket, covering the wiring connections.

Your browser does not support the video tag.

Video: This video demonstrates the installation process for the WINGBO 54-inch Ceiling Fan without Light, guiding users through each step from mounting to wiring.



Image: An overview of the easy installation process, emphasizing that the fan comes with all necessary hardware, detailed instructions, and can be installed in approximately 30 minutes.

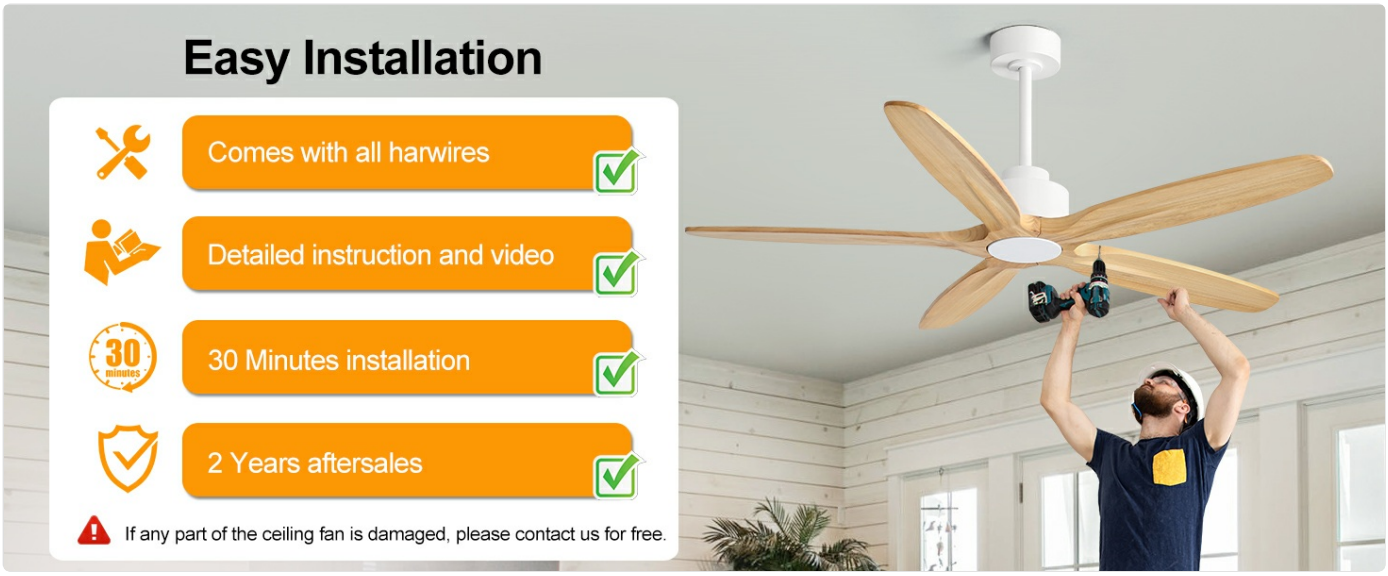


Image: This image illustrates the two available mounting methods for the fan: flush mounting for flat ceilings and angled mounting for sloped ceilings up to 15 degrees. It also shows the two included downrod lengths: 4.5 inches and 12 inches.

Operating Instructions

Your WINGBO ceiling fan is operated using the included remote control.

Remote Control Functions:

- **Fan ON/OFF:** Press the power button to turn the fan on or off.
- **Fan Speed (1-6):** Use the numbered buttons (1-6) to adjust the fan speed. Speed 1 is the lowest, and Speed 6 is the highest.
- **Forward/Reverse (F/R):** Press this button to change the direction of blade rotation.
- **Natural Wind:** Activates a mode that simulates natural breezes by varying fan speed.
- **Fan Timer (1H/4H/8H):** Set the fan to automatically turn off after 1, 4, or 8 hours.

Seasonal Operation:

- **Summer Mode (Counter-clockwise):** Blades rotate counter-clockwise to create a downward airflow, producing a cooling effect.
- **Winter Mode (Clockwise):** Blades rotate clockwise to create an upward airflow, circulating warm air trapped near the ceiling without creating a direct draft.



Image: The remote control for the WINGBO ceiling fan, showing buttons for power, 6 fan speeds, forward/reverse function, natural wind mode, and timer settings (1H, 4H, 8H).

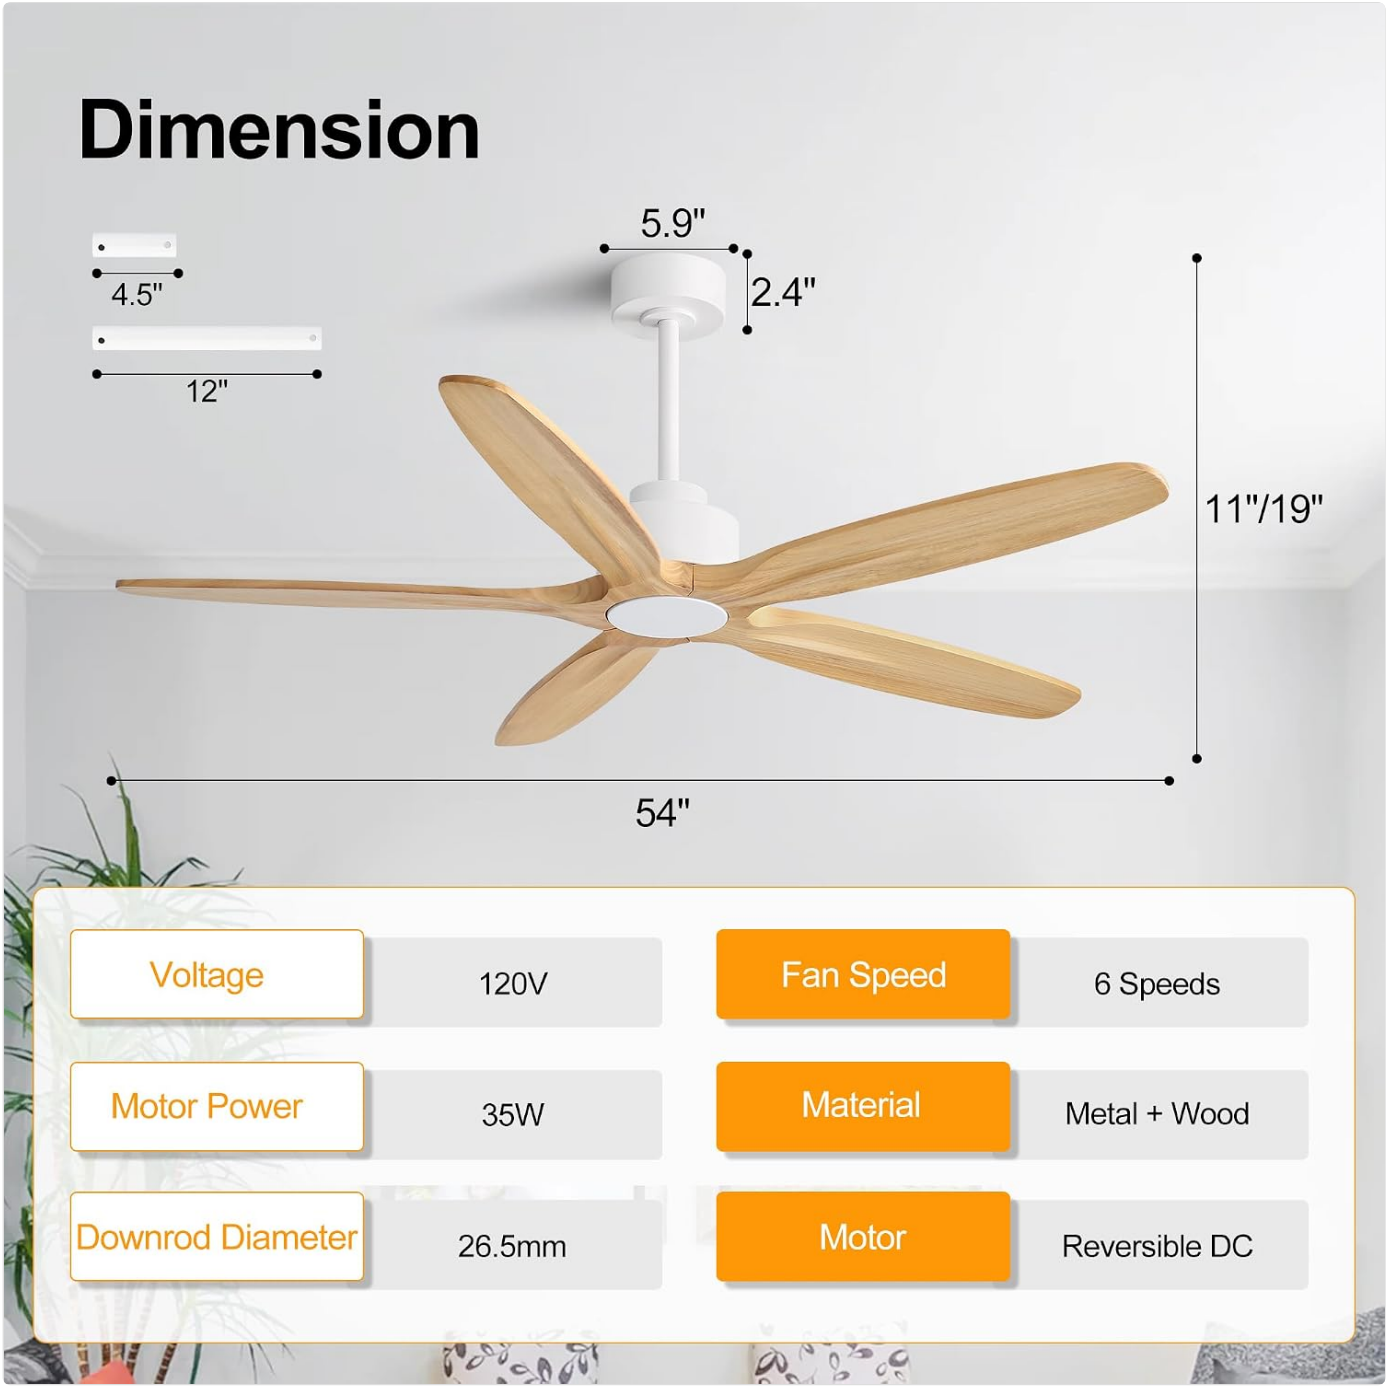


Image: This diagram explains the 6-speed DC motor's reversible function, demonstrating how counter-clockwise rotation provides cooling in summer and clockwise rotation circulates warm air in winter.

Your browser does not support the video tag.

Video: A demonstration of the WINGBO 54-inch Ceiling Fan without Light in White and Oak, showcasing its quiet operation and various speed settings.

Maintenance

Regular maintenance helps ensure the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing periodically with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Check the blade screws annually to ensure they are tight. Loose blades can cause wobbling and noise.
- **Electrical Connections:** Periodically check all electrical connections for tightness.

Troubleshooting

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control not paired or batteries dead.	Check circuit breaker; Ensure all wires are securely connected; Replace remote batteries or re-pair remote (refer to remote pairing instructions in the full manual).
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Ensure blades are installed correctly; Check mounting bracket for secure attachment.
Noisy operation	Loose screws; Blades rubbing against housing; Motor issues.	Check and tighten all screws; Ensure blades are not touching any part of the fan housing; If noise persists, contact customer support.
Remote control not working	Dead batteries; Remote not paired; Obstruction between remote and receiver.	Replace batteries; Re-pair remote control; Ensure clear line of sight to the fan's receiver.

Specifications

Feature	Detail
Brand	WINGBO
Model Number	SYCF5410
Product Dimensions	54"D x 54"W x 19"H
Number of Blades	5
Blade Material	Wood
Motor Type	DC (Brushless)
Number of Speeds	6
Power Source	DC
Wattage	35 watts
Air Flow Capacity	3663 Cubic Feet Per Minute
Control Method	Remote Control
Mounting Type	Downrod Mount
Downrod Lengths Included	4.5 Inches, 12 Inches
Indoor/Outdoor Usage	Indoor
Color	White and Oak

Warranty and Support

WINGBO stands behind the quality of its products.

- **Motor Warranty:** 10 Years
- **Accessories Warranty:** 3 Years

For technical assistance, troubleshooting, or warranty claims, please contact WINGBO customer support. Our technical support team is available 24/7 to assist you.



Image: WINGBO's After-Sales Assurance details, including a 10-year motor warranty, 24/7 technical support, and a 3-year warranty on accessories.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question