Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit Replacement Remote Control

ZdalaMit Replacement Remote Control for Samsung Smart TVs

Model: Replacement Remote Control

Brand: ZdalaMit

Introduction

This manual provides instructions for the ZdalaMit Replacement Remote Control, designed for use with various Samsung Smart TV models. This remote control operates using infrared technology and does not require programming. Simply insert batteries to begin use. Please note that voice control functionality is not supported by this remote.

For a list of compatible Samsung TV models, please refer to the "Compatibility" section.

Package Contents

- 1x Replacement Remote Control

Note: 2x 1.5V AAA Alkaline Batteries are not included and must be purchased separately.

Setup

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

The remote control is now ready for use.

Operating Instructions

This replacement remote control functions identically to the original infrared remote for compatible Samsung Smart TVs. Point the remote directly at your television's infrared receiver for optimal performance.

Basic Functions

- **Power Button:** Turns the TV on or off.

- **Number Pad (123):** Accesses the on-screen number pad for direct channel input.
- **Home Button:** Navigates to the TV's Smart Hub or home screen.
- **Directional Pad (Up, Down, Left, Right) & Enter Button:** Used for menu navigation and selection.
- **Return/Back Button:** Returns to the previous screen or menu.
- **Play/Pause Button:** Controls media playback.
- **Volume Up/Down:** Adjusts the television's volume.
- **Channel Up/Down:** Changes television channels.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services (e.g., Netflix, Prime Video, Disney+) and a general web browser (WWW).

Note: Voice control functionality is not available with this infrared remote.

Compatibility

This remote control is compatible with the following Samsung Smart TV models:

- UN85CU7000, UN58CU7000D, UN55CU7000, UN50CU7000, UN43CU7000D, UN75CU7000D, UN55CU7000D, UN43CU7000, UN65CU7000, UN58CU7000, UN75CU7000, UN85CU7000D
- UN65CU7000D, UN70CU7000D, UN50CU7000D, UN70CU7000
- UN55CU7000FXZA, UN50CU7000DXZA, UN43CU7000DXZA, UN55CU7000DXZA, UN50CU7000FXZA, UN85CU7000DXZA, UN75CU7000FXZA, UN65CU7000FXZA, UN75CU7000DXZA, UN58CU7000DXZA, UN58CU7000FXZA, UN65CU7000DXZA, UN70CU7000DXZA, UN85CU7000FXZA, UN43CU7000FXZA, UN70CU7000FXZA
- UN85CU7000F, UN58CU7000DF, UN55CU7000F, UN50CU7000F, UN43CU7000DF, UN75CU7000DF, UN55CU7000DF, UN43CU7000F, UN65CU7000F, UN58CU7000F, UN75CU7000F, UN85CU7000DF, UN65CU7000DF, UN70CU7000DF, UN50CU7000DF, UN70CU7000

If your TV model is not listed, please verify compatibility before use.

Maintenance

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's finish or internal components.

Battery Care

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

Troubleshooting

Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh 1.5V AAA alkaline batteries.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared receiver.

Obstructions can block the signal.

- **Distance:** Operate the remote within a reasonable distance from the TV.
- **Interference:** Strong light sources (e.g., direct sunlight, fluorescent lights) can sometimes interfere with infrared signals. Try operating the remote in a different lighting condition.

Specific Buttons Not Working

- Clean the remote control surface, especially around the non-responsive buttons, to remove any dirt or debris that might be obstructing them.
- If only specific quick access buttons (e.g., Netflix) are not working, ensure your TV is connected to the internet and the corresponding app is installed and updated.

Voice Control Not Working

- This remote control does not support voice control functionality. This is an infrared-only remote.

Specifications

Feature	Detail
Brand	ZdalaMit
Model	Replacement Remote Control
Power Supply	2x 1.5V AAA Alkaline Batteries (Not Included)
Connectivity	Infrared (IR)
Special Feature	Pre-Programmed
Color	Black
Product Dimensions	6.35 x 1.39 x 0.55 inches
Item Weight	1.41 ounces
Compatible Devices	Samsung Smart Televisions
Voice Control	Not Supported

Product Images





Front view of the ZdalaMit Replacement Remote Control, showing all buttons clearly arranged.



Angled view of the remote control, highlighting the ergonomic design and button layout.



A different angled perspective of the remote control, showcasing its sleek profile.



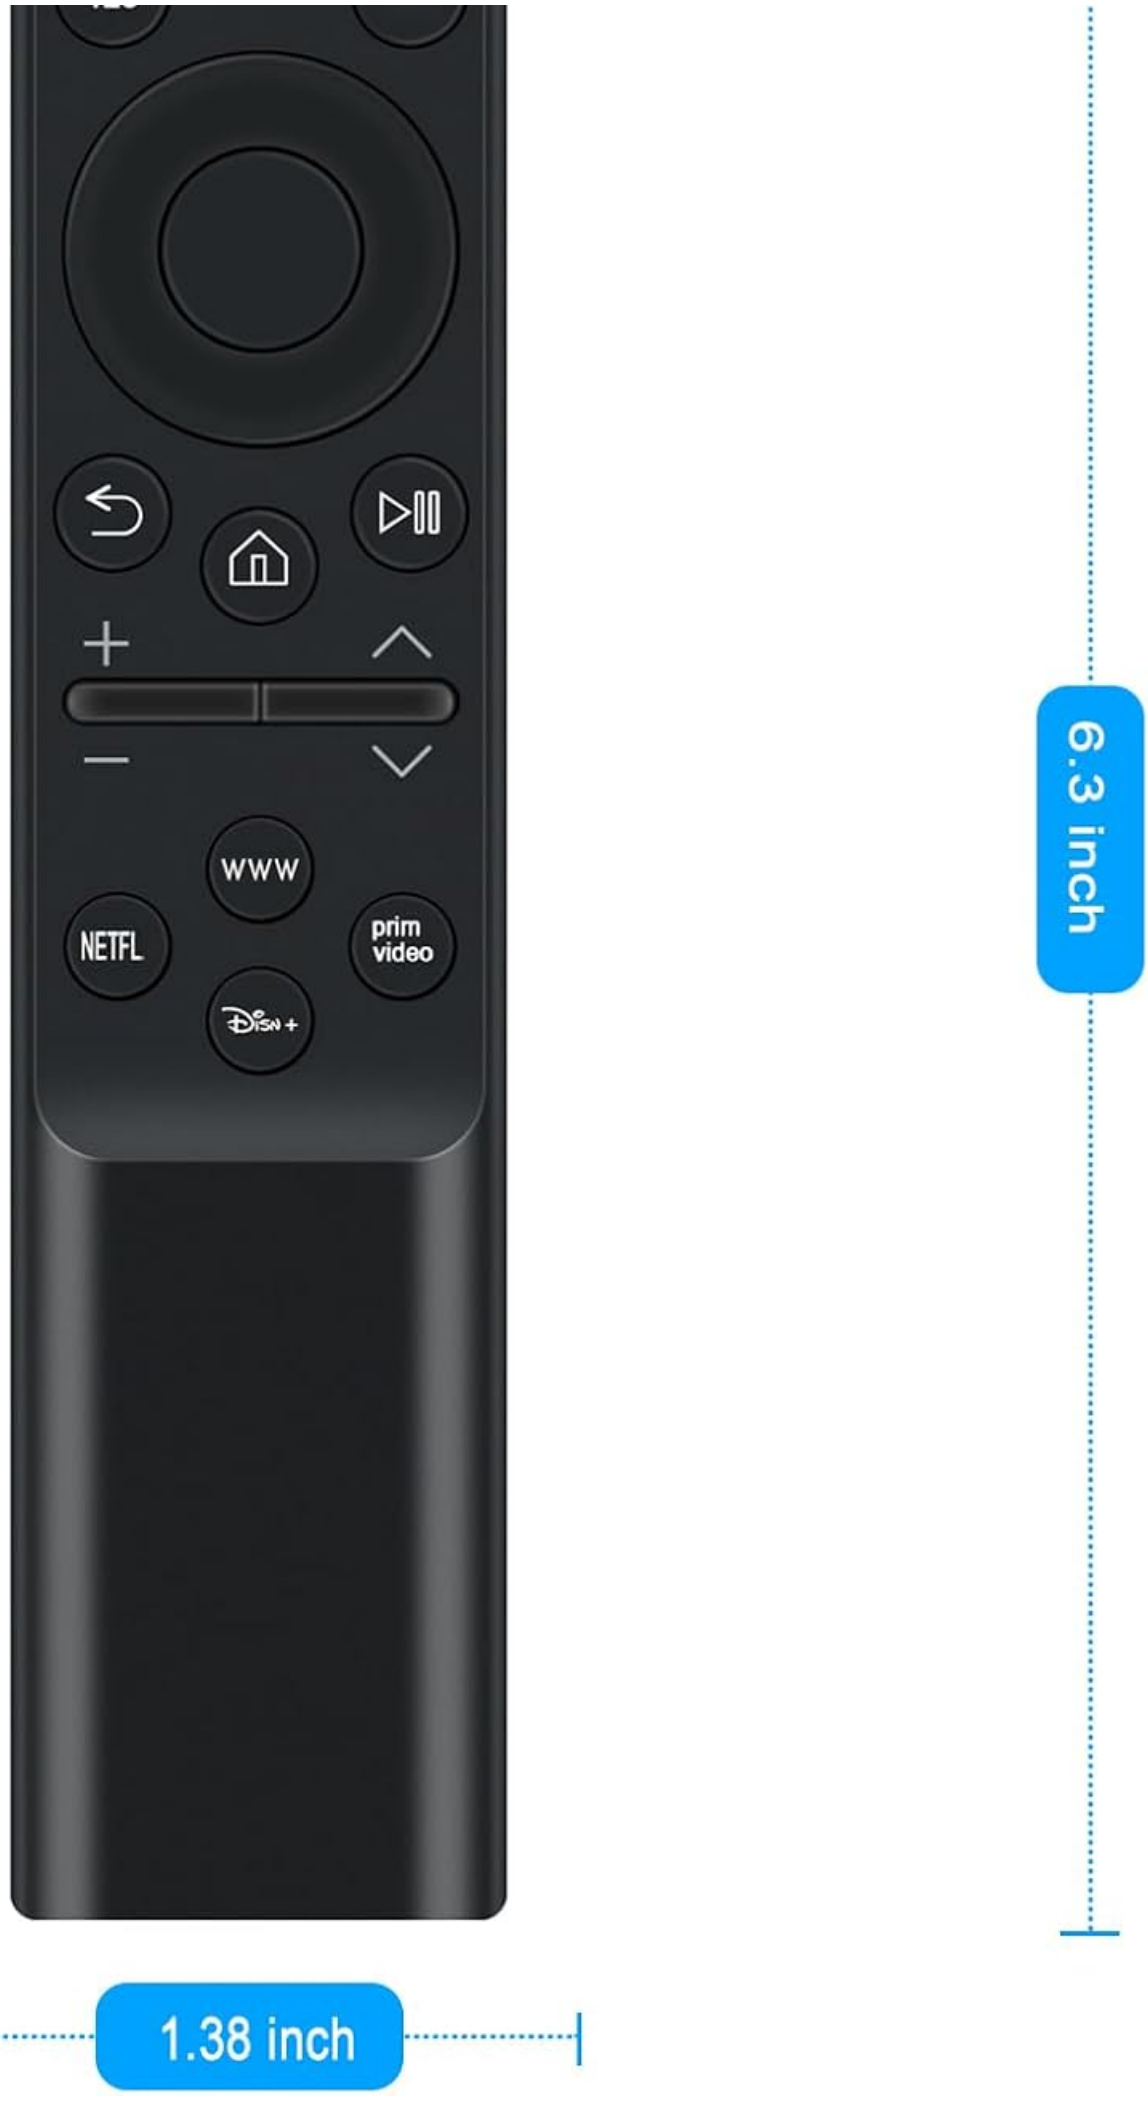

6.3 inch
1.38 inch
WWW
NETFL
prim video

Image illustrating the dimensions of the remote control: approximately 6.3 inches in length and 1.38 inches in width.



The remote control displayed in a typical living room environment, demonstrating its intended use with a television.

Warranty and Support

Specific warranty information for this ZdalaMit Replacement Remote Control is not provided in the product details. For support or warranty inquiries, please refer to the retailer or manufacturer's customer service channels.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FD6M53YB

More documents and user manuals: **https://manuals.plus/**