DOSS Extreme Boom Pro D300

DOSS Extreme Boom Pro D300 Bluetooth Speaker Instruction Manual

Introduction

Thank you for choosing the DOSS Extreme Boom Pro D300 Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read it thoroughly before use.

What's in the Box

- DOSS Extreme Boom Pro D300 Speaker
- USB-C Charging Cable
- User Manual

Product Overview



The DOSS Extreme Boom Pro D300 Bluetooth Speaker, shown in black, featuring its robust design and integrated carry handle.



The DOSS Extreme Boom Pro D300 highlighting its compact dimensions (11.9"D x 2.54"W x 5.37"H) and lightweight design (4.85 pounds) for maximum portability, with a built-in carry strap.

Key Features

- **80W Immersive Stereo Sound:** Delivers powerful audio with deep bass.
- **3-Mode Pro EQ:** Easily switch between Normal, Bass, and Treble modes for personalized sound.
- **20H Playtime:** Enjoy extended music playback on a single charge.
- **Beat-Driven Lights:** Integrated LED lights pulse to the rhythm of your music.
- **IPX6 Waterproof:** Designed to withstand splashes, spills, and rain.
- **Built-in Power Bank:** Recharge your phone or tablet on the go via the USB-A port.
- **Wireless Stereo Pairing:** Connect two D300 speakers for an enhanced stereo experience.
- **Bluetooth 5.4:** Provides stable wireless connectivity up to 33 feet.

Setup

1. Charging Your Speaker

Before first use, fully charge your DOSS Extreme Boom Pro D300. Connect the provided USB-C cable to the charging port on the back of the speaker and to a compatible USB power adapter (not included). The LED indicator lights will show the charging status.



The back panel of the DOSS Extreme Boom Pro D300, illustrating the USB-A port for power bank function and the USB-C port for charging the speaker.

2. Bluetooth Pairing

1. Power on the speaker by pressing the power button. The Bluetooth indicator light will flash, indicating it's in pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Extreme Boom Pro D300" from the list. Once connected, the Bluetooth indicator light will turn solid.

3. Wireless Stereo Pairing (TWS)

To achieve true stereo sound, you can pair two DOSS Extreme Boom Pro D300 speakers together:

1. Turn on both speakers.
2. Select one speaker as the primary speaker and press its TWS button. The TWS light on the primary speaker will turn solid orange.
3. The second speaker's TWS light will flash slowly. Once paired, the TWS light on both speakers will turn solid orange.
4. Connect your Bluetooth device to the primary speaker ("Extreme Boom Pro D300").

Video demonstrating the unboxing, features, and setup of the DOSS Extreme Boom Pro D300 Bluetooth Speaker. This video provides a visual guide to initial use and connectivity.

Operating Your Speaker

Controls




A close-up of the intuitive top-panel controls on the DOSS Extreme Boom Pro D300, including power, mode, play/pause, volume, lighting effects, 3-mode EQ, and TWS pairing buttons.

- **Power Button:** Press and hold to turn the speaker on/off.
- **M (Mode) Button:** Press to switch between Bluetooth mode and USB drive playback (if a USB drive is inserted).
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Buttons (+/-):** Press to adjust volume. Press and hold to skip tracks (next/previous).
- **Light Button:** Press to cycle through different beat-driven light presets or turn lights off.
- **EQ Button:** Press to switch between Normal, Bass, and Treble EQ modes.
- **TWS Button:** Press to initiate or disconnect Wireless Stereo Pairing.

EQ Modes

The D300 offers three distinct EQ modes to optimize your listening experience:

- **Normal:** Balanced sound profile suitable for most music genres.
- **Bass:** Enhances low frequencies for a deeper, punchier bass. Ideal for hip-hop and EDM.
- **Treble:** Boosts high frequencies for clearer vocals and crisp details. Recommended for podcasts and audiobooks.

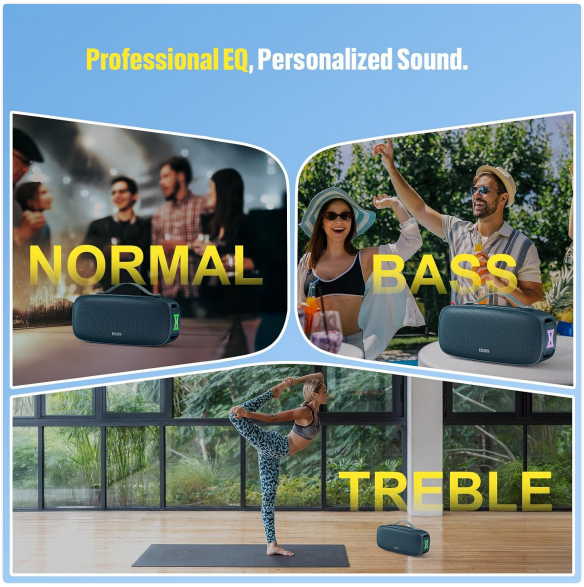

Visual representation of the three Pro EQ modes: Normal, Bass, and Treble, allowing for personalized sound experiences.



A woman practicing yoga with the speaker, emphasizing the Treble EQ mode for clear audio, suitable for listening to podcasts or audiobooks.

Party Lights

The DOSS Extreme Boom Pro D300 features dynamic LED lights on its passive radiators that synchronize with your music. Press the Light button to cycle through various presets and create an engaging visual experience.



Multiple DOSS Extreme Boom Pro D300 speakers displaying four different beat-driven light presets: Flame, Energy, Ambient, and Flash, enhancing the party atmosphere.

Video showcasing the DOSS Extreme Boom Pro D300's waterproofing and its built-in lights and bass capabilities, highlighting its durability and dynamic features.


Maintenance

Cleaning and Care

- Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the charging port cover is securely closed when near water to maintain IPX6 waterproof rating.
- Avoid exposing the speaker to extreme temperatures or direct sunlight for prolonged periods.


Waterproof Information (IPX6)

The DOSS Extreme Boom Pro D300 is IPX6 rated, meaning it is protected against high-pressure water jets from any direction. It is suitable for use outdoors, by the pool, or at the beach. However, it is not designed for submersion in water.

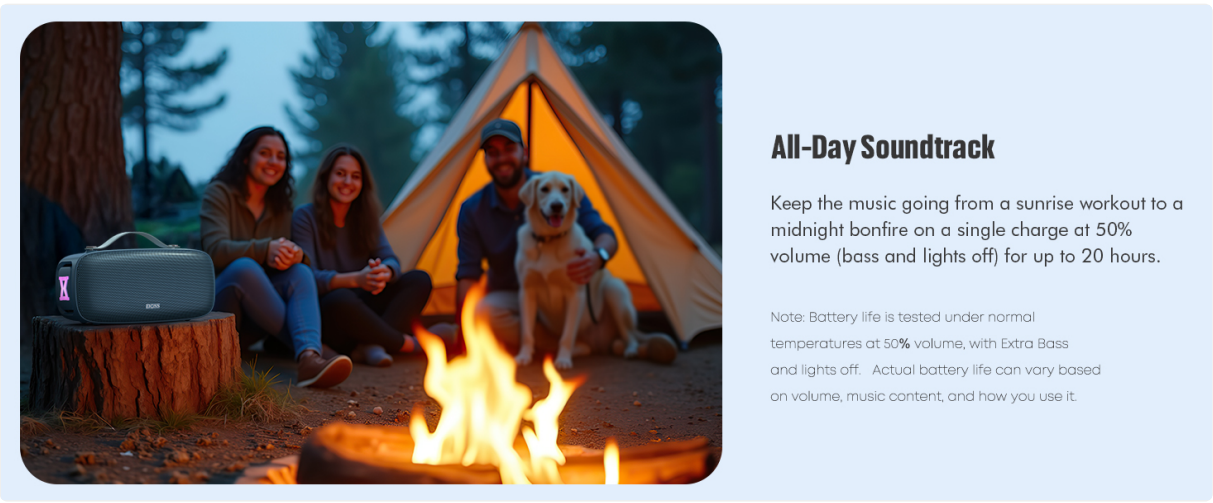

The DOSS Extreme Boom Pro D300 demonstrating its IPX6 waterproof capability, ensuring music continues through spills, surf, and rain.

Troubleshooting

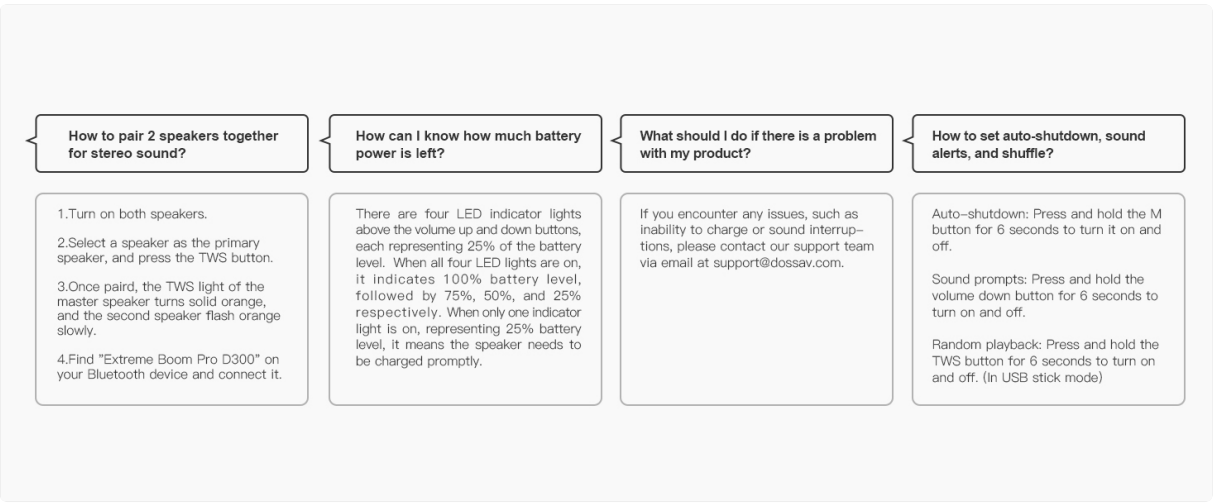

A visual guide to frequently asked questions and troubleshooting steps for the DOSS Extreme Boom Pro D300, covering pairing, battery, and sound issues.

Common Issues and Solutions

- **Speaker will not turn on:** Ensure the speaker is charged. Connect it to a power source using the USB-C cable.
- **Unable to pair via Bluetooth:** Make sure the speaker is in pairing mode (flashing Bluetooth indicator). Turn off and on your device's Bluetooth, then try pairing again. Ensure no other devices

are currently connected to the speaker.

- **No sound or low volume:** Check the volume levels on both the speaker and your connected device. Ensure the speaker is not muted.
- **Sound interruptions:** Ensure the speaker is within the Bluetooth range (up to 33 feet) of your device. Avoid obstacles that may interfere with the signal.
- **TWS pairing issues:** Ensure both speakers are DOSS Extreme Boom Pro D300 models and are powered on. Follow the TWS pairing steps carefully.

Specifications

Brand	DOSS
Model Name	Extreme Boom Pro D300
Speaker Maximum Output Power	160 Watts (Peak)
Connectivity Technology	Bluetooth 5.4, USB
Water Resistance Level	IPX6
Playtime	Up to 20 hours (at 50% volume, lights off)
Product Dimensions	11.9"D x 2.54"W x 5.37"H
Item Weight	4.84 pounds (2.2 Kilograms)
Included Components	Speaker, USB-C cable
Special Features	Bass Boost, Built-In Powerbank, Lightweight, Stereo Pairing, Waterproof

Warranty and Support

Warranty Information

The DOSS Extreme Boom Pro D300 comes with a One Year Limited Warranty, covering any quality-related concerns from the date of purchase.

Customer Support

If you encounter any issues with your product, please contact our support team for assistance. We are committed to providing you with prompt support.



Contact DOSS Customer Support via phone at 1-833-275-3677 or email at support@dossav.com for any product-related inquiries or issues.