Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MERISHOPP PZINVC68034676

MERISHOPP Android 10.0 Smart Box Rk3228A User Manual

Model: PZINVC68034676

Introduction

This manual provides instructions for the setup, operation, and maintenance of your MERISHOPP Android 10.0 Smart Box Rk3228A. This device is designed to provide access to 4K Ultra HD content and various streaming services, enhancing your home entertainment experience.



Figure 1: MERISHOPP Android Smart Box with its remote control. The box is black with a glossy top panel and a textured side, and the remote is black with purple navigation buttons.

1. Setup

1.1 Package Contents

Verify that all items are present in the package:

- 1 x MERISHOPP Android Smart Box
- 1 x HD Line (HDMI Cable)
- 1 x Remote Control
- 1 x Power Adapter
- 1 x User Manual (this document)

1.2 Connecting the Device

Follow these steps to connect your Smart Box:

1. **Connect HDMI Cable:** Insert one end of the provided HD Line (HDMI cable) into the HDMI port on the Smart Box and the other end into an available HDMI input on your television.
2. **Connect Power Adapter:** Plug the power adapter into the DC port on the Smart Box, then plug the adapter into a wall outlet.
3. **Connect to Network (Optional):** For a wired internet connection, connect an Ethernet cable from your router to the Ethernet port on the Smart Box. For Wi-Fi, refer to Section 2.2.



Figure 2: Diagram illustrating the interface ports of the MERISHOPP Smart Box, including USB1, USB2, Recovery, HD (HDMI), Ethernet, and DC power input. The device dimensions are 90mm x 90mm x 17mm.

1.3 Initial Power On

After connecting all cables, turn on your television and select the correct HDMI input. The Smart Box should power on automatically. If not, press the power button on the remote control.

2. Operating Instructions

2.1 Remote Control Usage

The included remote control allows navigation through the Smart Box interface. Use the directional pad and 'OK' button for selection. The remote also features dedicated buttons for power, home, back, and volume control.

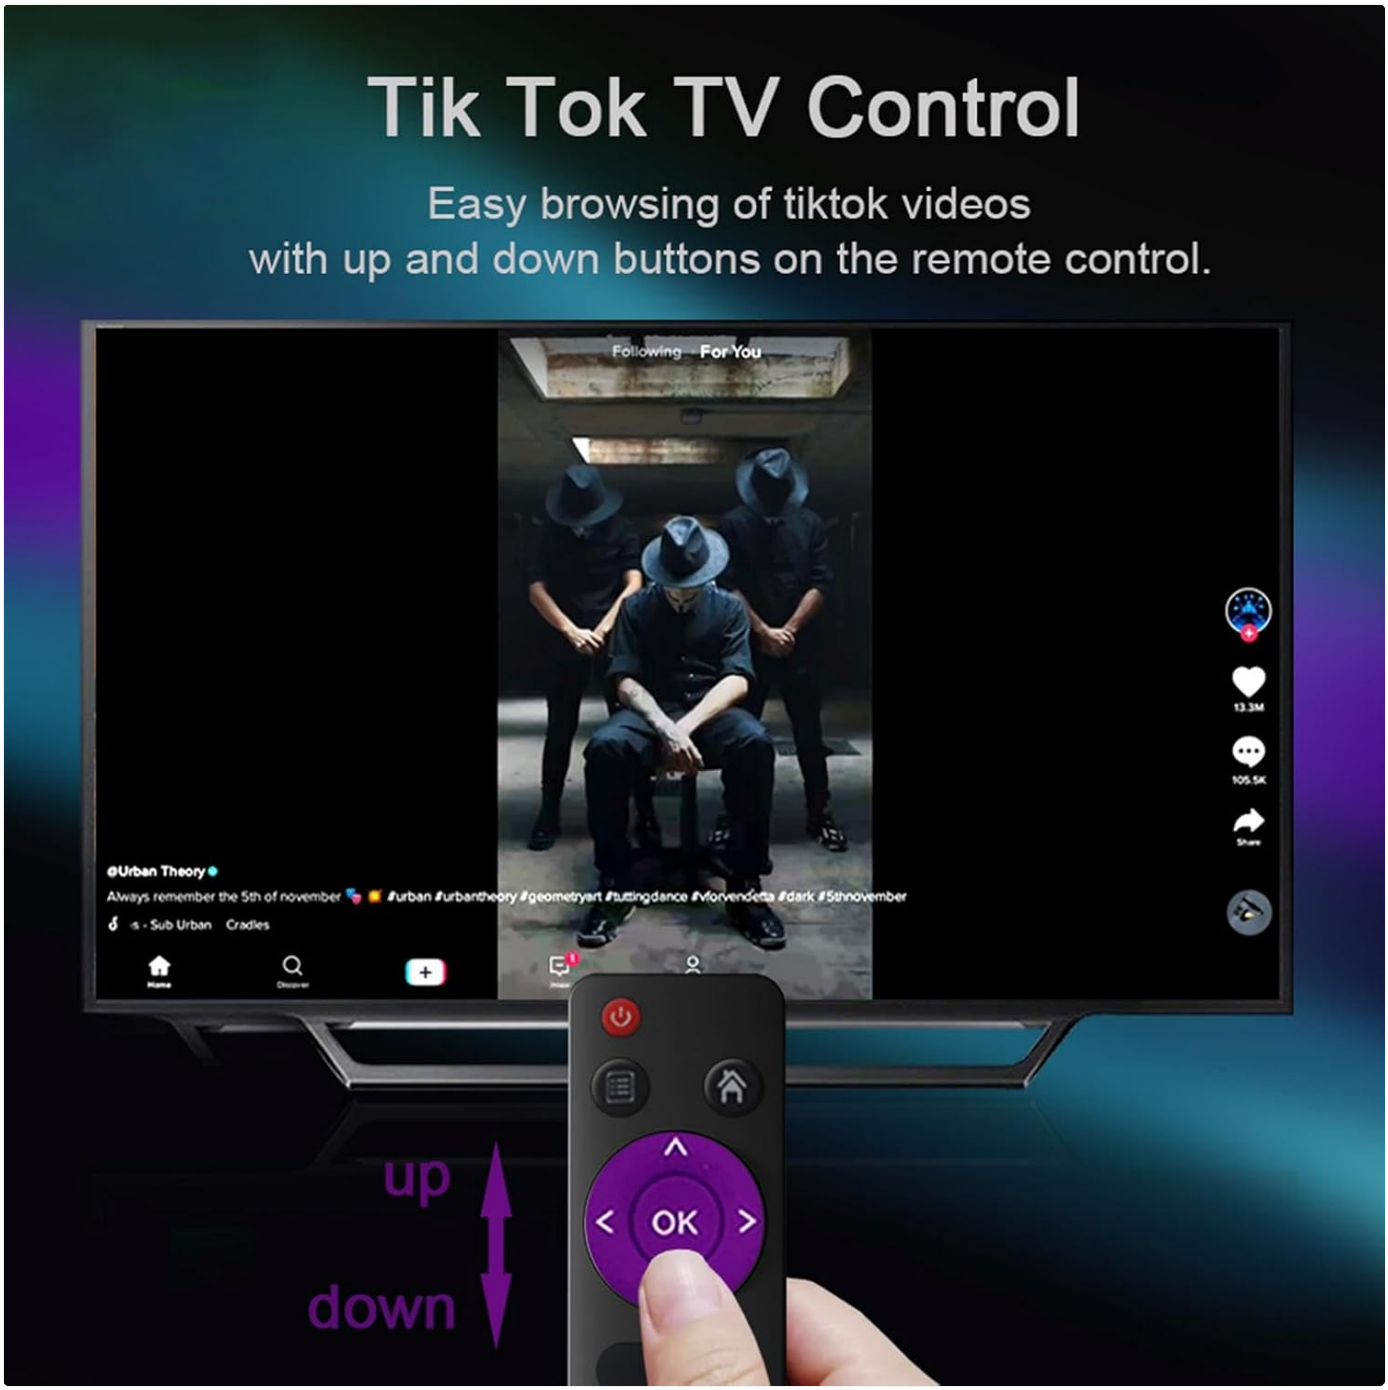


Figure 3: The remote control being used to navigate a TikTok TV interface, demonstrating the use of up and down buttons for browsing content.

2.2 Connecting to Wi-Fi

To connect to a wireless network:

1. Navigate to the 'Settings' menu on the Smart Box.
2. Select 'Network & Internet'.
3. Choose 'Wi-Fi' and turn it on.
4. Select your desired Wi-Fi network from the list.

5. Enter the network password if prompted and select 'Connect'.

The device supports both 2.4G and 5.0G Wi-Fi bands for optimal network performance.

2.3 Accessing Applications and Media

The Smart Box runs on Android 10.0, providing access to a wide range of applications. The home screen typically displays pre-installed apps and allows access to the Google Play Store for additional downloads.

- **Google Play:** Access movies, TV shows, music, and games.
- **YouTube:** Stream videos.
- **Browser:** Browse the internet.



Figure 4: The Smart Box home screen displaying icons for YouTube, Google Play, a web browser, and other applications, indicating various media and app functionalities.

2.4 Screen Mirroring

The Smart Box supports DLNA, Miracast, and Airplay protocols, allowing you to cast content from compatible mobile

devices to your television screen.



Figure 5: An illustration showing a smartphone screen being mirrored to a large television display, with icons for DLNA, Airplay, and Miracast, indicating support for these screen sharing technologies.

2.5 Gaming

Connect a compatible game controller via USB to enjoy gaming on your television through the Smart Box. Download games from the Google Play Store.



Figure 6: A scene depicting two cars racing on a television screen, with the MERISHOPP Smart Box and a game controller in the foreground, illustrating the device's gaming capability.

3. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the Smart Box. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure the device is placed in a well-ventilated area to prevent overheating. Do not block ventilation openings.
- **Storage:** When not in use for extended periods, disconnect the power adapter and store the device in a cool, dry place.

4. Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty.	Ensure the power adapter is securely connected to the device and a working power outlet. Try a different outlet.
No picture on TV	Incorrect HDMI input selected or HDMI cable loose.	Verify your TV is set to the correct HDMI input. Check that the HDMI cable is securely connected at both ends.
No internet connection	Wi-Fi not connected or Ethernet cable loose.	For Wi-Fi, check network settings (Section 2.2). For wired, ensure the Ethernet cable is properly connected to the router and Smart Box. Restart your router.
Remote control not responding	Batteries are low or depleted. Obstruction between remote and device.	Replace the batteries in the remote control. Ensure there is a clear line of sight between the remote and the Smart Box.

5. Specifications

Feature	Detail
Brand	MERISHOPP
Model	PZINVC68034676
Processor	Rk3228A
System Requirements	Android 10.0
Output Resolution	1920x1080 (Supports 4K Ultra HD content)
Wireless Connectivity	2.4G / 5.0G WiFi
Support Memory Card	TF (MicroSD)
Product Dimensions	90 x 90 x 17 mm (approx. 3.54 x 3.54 x 0.61 inches)
Item Weight	322 g
Material	High Quality

6. Warranty Information

Specific warranty details for this product are not provided in the available information. Please refer to your purchase documentation or contact MERISHOPP customer support for warranty terms and conditions.

7. Customer Support

For technical assistance or customer service, please contact:

- **Manufacturer:** LR DECOR ENTERPRISE LLP
- **Customer Care WhatsApp:** +91-7291860014
- **Email:** lrdecor2nd@gmail.com

© 2025 MERISHOPP. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FDB5GNTH

More documents and user manuals: **https://manuals.plus/**