CareVac+ P017

CareVac+ Cordless Stick Vacuum Cleaner

Model P017 User Manual

1. Introduction

Thank you for choosing the CareVac+ Cordless Stick Vacuum Cleaner, Model P017. This lightweight and versatile vacuum is designed for efficient cleaning across various surfaces, from carpets to hard floors, and is effective in picking up dust, crumbs, and pet hair. Its cordless design offers freedom of movement, and the powerful motor ensures thorough cleaning. This manual provides essential information for safe operation, assembly, maintenance, and troubleshooting to ensure optimal performance of your vacuum cleaner.



Image 1.1: The CareVac+ Cordless Stick Vacuum Cleaner, highlighting its adjustable metal tube, lightweight design (2.6 lbs), and quiet operation (under 60dB).

2. Important Safety Instructions

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Recharge only with the charger specified by the manufacturer.
- Do not incinerate the appliance even if it is severely damaged. Batteries can explode in a fire.

3. Package Contents

Please check the package contents to ensure all items are present and in good condition:

- 1x Main Motor (Motor & Dust Cup)
- 1x Motorized Brush Head with Roller Brush
- 1x Retractable Metal Tube
- 1x Power Adapter
- 1x Wall Mount with Screws
- 1x Accessory Holder
- 1x Sofa Brush
- 1x Long Crevice Brush
- 1x HEPA Filter (pre-installed or spare)
- 1x User Manual (this document)



Image 3.1: An exploded view illustrating the main components included in the CareVac+ P017 package, such as the LED roller brush head, cordless vacuum body, dust brush, adapter, wall mount, pipe crevice tool, accessory holder, and retractable metal tube.

4. Setup

4.1 Assembly

1. **Attach the Retractable Metal Tube:** Insert the top end of the retractable metal tube into the main motor unit until it clicks securely into place.
2. **Attach the Motorized Brush Head:** Insert the bottom end of the retractable metal tube into the motorized brush head until it clicks securely into place.
3. **Install Accessories:** For handheld use, attach the sofa brush or long crevice brush directly to the main motor unit. For extended reach, attach them to the retractable metal tube.

4.2 Initial Charging

Before first use, fully charge the vacuum cleaner. The battery takes approximately 4-4.5 hours to fully charge.

- **Direct Charging:** Connect the power adapter directly to the charging port on the main motor unit.
- **Wall Mount Charging:** If using the wall mount, ensure it is securely installed. Place the vacuum cleaner onto the wall mount, then connect the power adapter to the charging port on the wall mount.

The battery level indicator lights will illuminate during charging and show the charging progress. All lights will be solid when fully charged.



Image 4.1: The CareVac+ P017 vacuum cleaner shown charging via its wall mount. The image also depicts the wall mount and screws for installation.

5. Operating Instructions

5.1 Power On/Off and Suction Modes

Press the power button to turn the vacuum cleaner on. It will start in Eco-mode. Press the mode switch button to toggle between Eco-mode and Max mode.

- **Eco-mode:** Provides standard suction (15 KPa) for everyday cleaning and extended battery life (up to 35 minutes).

The suction indicator will show a blue light.

- **Max mode:** Provides maximum suction (23 KPa) for deep cleaning and stubborn dirt. The suction indicator will show a purple light.

Press the power button again to turn the vacuum cleaner off.



Image 5.1: A close-up of the CareVac+ P017 main motor unit, illustrating the two suction modes (Min/Eco with blue light, Max with purple light) and the multi-segment battery indicator.

5.2 Using Attachments

The CareVac+ P017 comes with various attachments for different cleaning needs:

- **Motorized Brush Head:** Ideal for general floor cleaning on carpets, hardwood, marble, and tile floors. The V-shaped rolling brush helps prevent hair entanglement.
- **Sofa Brush:** Suitable for upholstery, pet beds, and other fabric surfaces.
- **Long Crevice Brush:** Designed for reaching into narrow gaps, corners, and tight spaces like car interiors.



Image 5.2: The CareVac+ P017 demonstrating its versatility for cleaning various areas such as stairs, sofas, car interiors, and tight gaps using different attachments.



Image 5.3: The motorized brush head of the CareVac+ P017 shown cleaning different floor surfaces including marble, low-pile carpet, hardwood, and tile.

5.3 Flexible Head and LED Lights

The brush head offers exceptional maneuverability, rotating laterally from 0° to 180° and vertically from 0° to 90°, and can lie flat to 180°. This allows for easy cleaning under furniture and in tight spaces. The integrated 5 LED lights illuminate dark corners, ensuring no dust is missed.

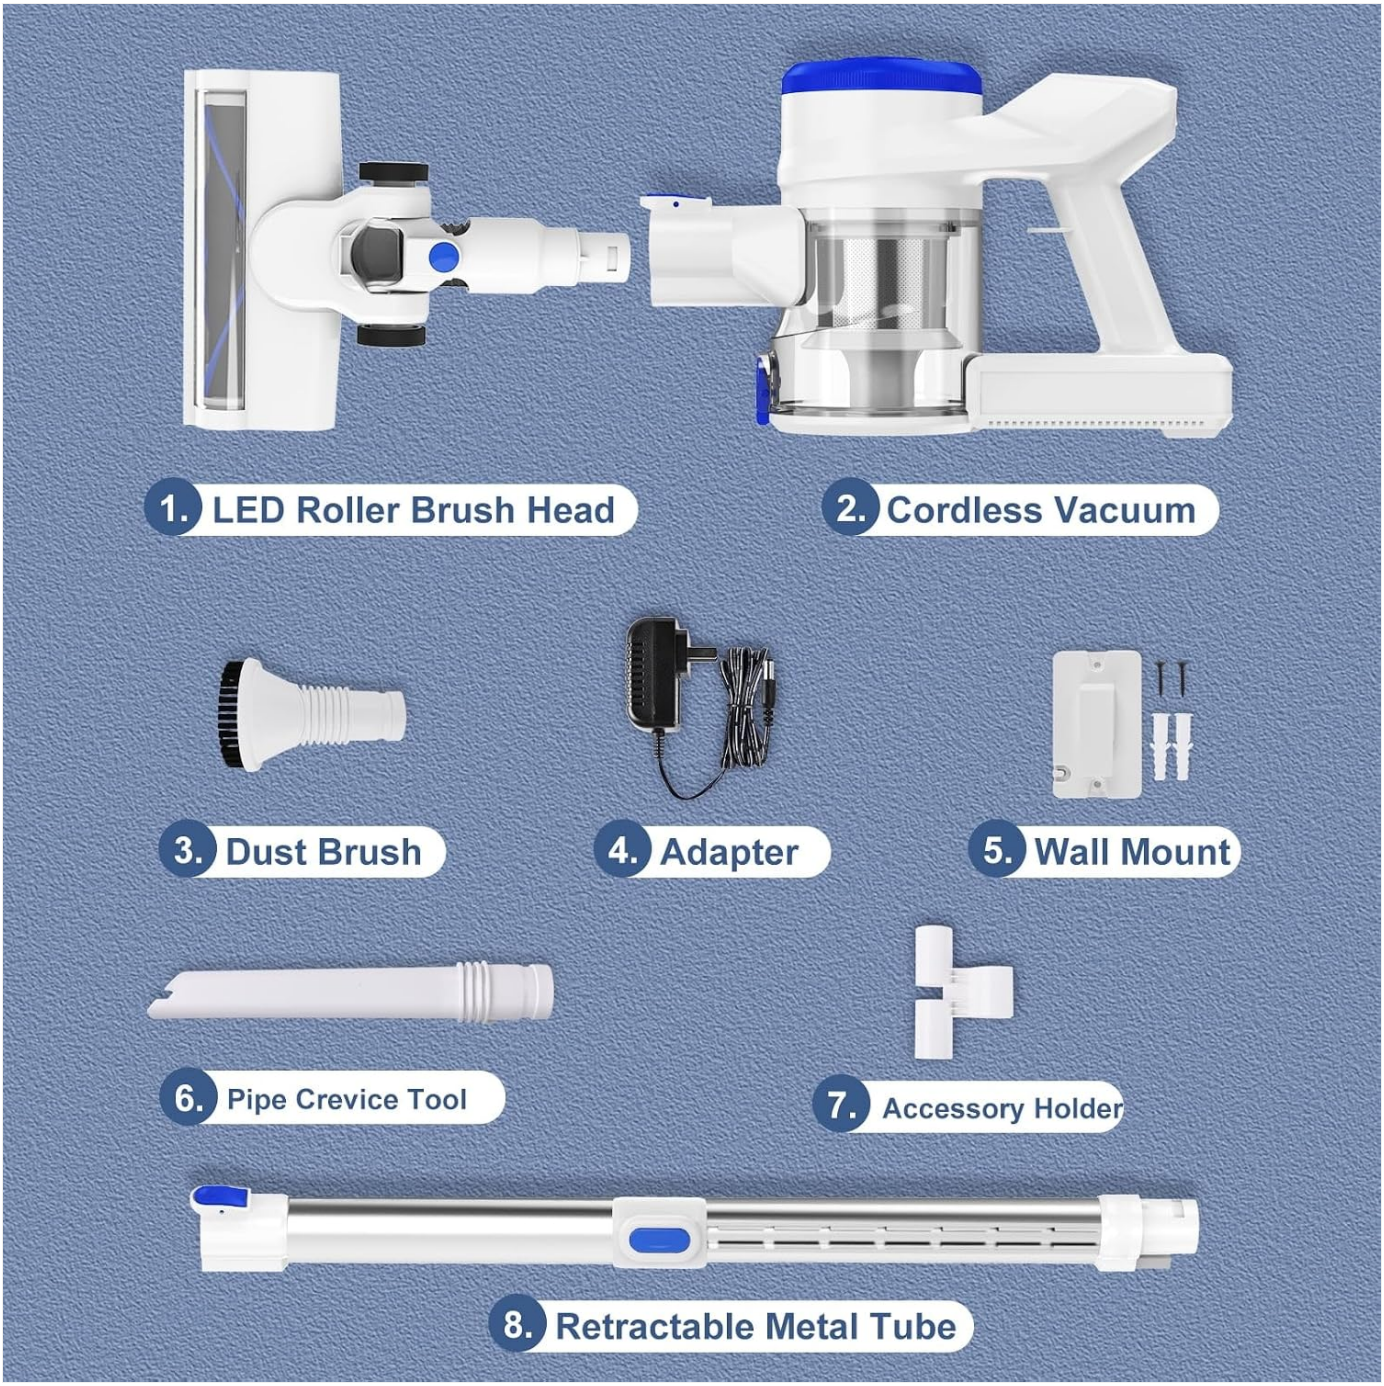


Image 5.4: The flexible brush head of the CareVac+ P017, demonstrating its ability to clean under low furniture and its 180° lateral and 90° vertical rotation, along with its LED headlight for improved visibility.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your CareVac+ P017 vacuum cleaner.

6.1 Emptying the Dustbin

The 1.3L dustbin should be emptied regularly, especially when the MAX line is reached. To empty:

1. Ensure the vacuum is turned off.
2. Press the one-touch release button on the dust cup to open the bottom flap.
3. Empty the contents into a trash bin.
4. Close the dust cup flap securely until it clicks.

6.2 Cleaning the HEPA Filter

The HEPA filter traps fine dust and allergens and should be cleaned periodically to maintain suction power. It is recommended to clean the filter every 2-4 weeks, depending on usage.

1. Twist and pull to remove the dust cup from the main motor unit.
2. Remove the HEPA filter from the dust cup.
3. Tap the filter gently over a trash can to remove loose dust.
4. If necessary, rinse the filter under cold running water. Ensure it is completely dry (allow 24-48 hours) before reinserting. Do not use a brush or hot water.
5. Reassemble the filter and dust cup, then reattach to the main motor unit.

6.3 Cleaning the Roller Brush

The V-shaped roller brush can accumulate hair and debris. Inspect and clean it regularly.

1. Ensure the vacuum is turned off and disconnected from power.
2. Locate the release tab or button on the side of the motorized brush head to remove the roller brush.
3. Carefully remove any tangled hair or debris from the roller brush using scissors or a cleaning tool.
4. Wipe the brush head interior with a dry cloth.
5. Reinsert the roller brush until it clicks into place.

7. Troubleshooting

If you encounter issues with your CareVac+ P017, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dustbin is full Filter is clogged Brush head or tube is blocked	Empty the dustbin Clean or replace the HEPA filter Check and clear any blockages in the brush head or metal tube
Roller brush not spinning	Hair or debris tangled in brush Brush head not properly attached	Clean the roller brush Ensure the brush head is securely connected to the tube
Battery not charging	Power adapter not connected Faulty power adapter or outlet	Ensure power adapter is securely plugged into vacuum and outlet Try a different outlet or contact support for a replacement adapter
Unusual noise during operation	Blockage in air path Damaged roller brush	Check for and remove any blockages Inspect roller brush for damage; replace if necessary

If the problem persists after trying these solutions, please contact customer support.

8. Specifications

Brand	CareVac+ (Generic)
Model Number	P017
Battery Type	6-cell 2500mAh rechargeable battery
Runtime	Up to 35 minutes (Eco-mode)
Charging Time	4-4.5 hours
Suction Modes	2 (Eco-mode: 15 KPa, Max mode: 23 KPa)
Main Body Weight	2.6 lbs
Dustbin Capacity	1.3 L
Filter Type	HEPA
Noise Level	Under 60 dB
Voltage	22.2 V
Dimensions (L x W x H)	12.6" x 5.51" x 29.13"
Recommended Surfaces	Bare Floor, Car, Carpet, Hard Floor, Home, Office, Pet Hair



Image 8.1: A detailed view of the CareVac+ P017's high-capacity built-in battery, indicating a runtime of 18-35 minutes, 2500mAh capacity, and a 5-hour charging time.

9. Warranty & Support

9.1 Limited Warranty

The CareVac+ Cordless Stick Vacuum Cleaner Model P017 is backed by a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage caused by misuse, neglect, accident, unauthorized repair, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your CareVac+ P017 vacuum cleaner, please contact our customer support team:

- **Email:** support@carevacplus.com

- **Phone:** 1-800-XXX-XXXX (Monday-Friday, 9 AM - 5 PM EST)
- **Website:** www.carevacplus.com/support

When contacting support, please have your model number (P017) and purchase date available.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question