Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

BOULESENM CDM07.0619

BOULESENM 33W Fast Charger with 2M USB-C Cable User Manual

Model: CDM07.0619

Introduction

Thank you for choosing the BOULESENM 33W Fast Charger. This product is designed to provide efficient and safe charging for your compatible Xiaomi and Redmi devices. Please read this manual carefully before use to ensure optimal performance and safety.

Package Contents

- 1 x BOULESENM 33W Fast Charger Adapter
- 1 x 2-meter USB Type-C Cable



Image: The package includes one 33W charger adapter and one 2-meter USB-C cable.

Product Features

- **33W Fast Charging:** Designed to meet the charging requirements of compatible Xiaomi and Redmi devices, ensuring high-speed charging.
- **Extended Cable Length:** Includes a 2-meter (78.7 inches) USB Type-C cable for convenient use.
- **Intelligent Chip:** Built-in smart chip dynamically adjusts power output for optimal charging.
- **Multiple Protections:** Features 11 levels of protection, including over-voltage, over-current, over-heating, and short-circuit protection.
- **Durable Materials:** Made with flexible TPE material and high-quality components for reliability.
- **Data Transfer:** The copper core cable supports data transfer speeds of up to 480 Mbps.

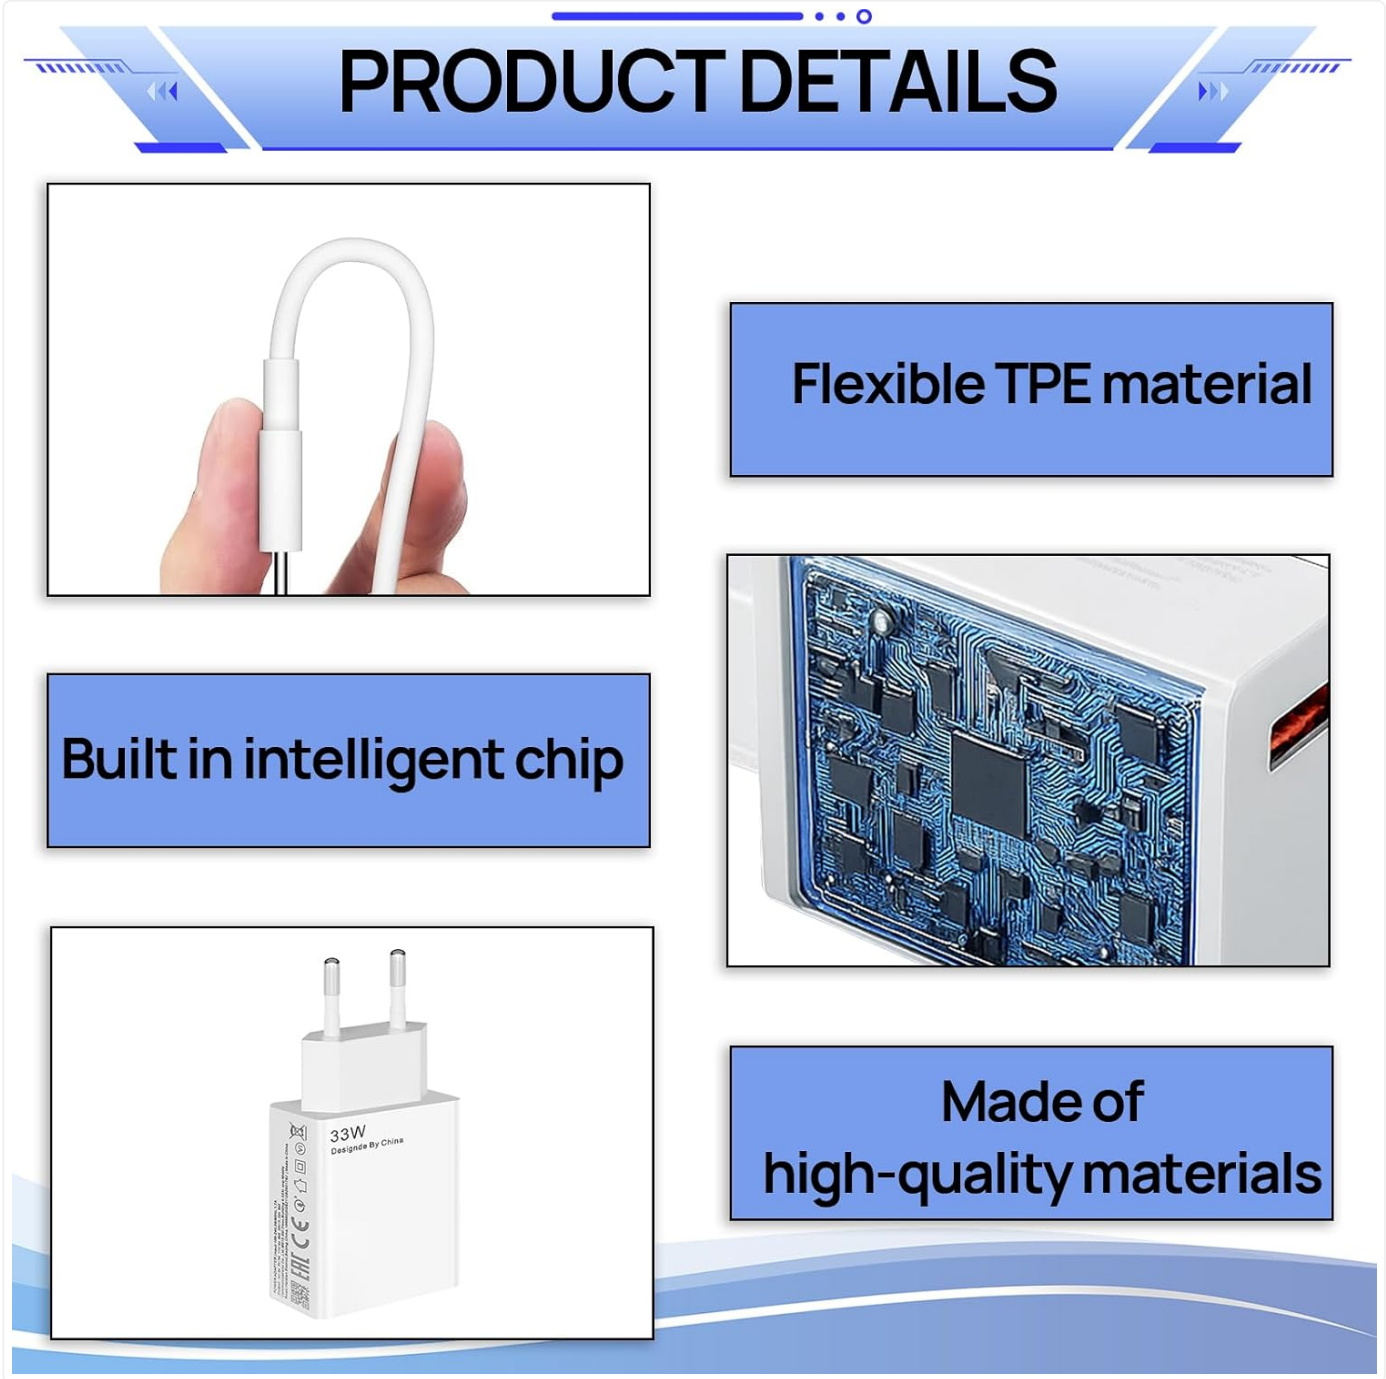


Image: Close-up of the charger and cable highlighting flexible TPE material, built-in intelligent chip, and overall high-quality construction.

Compatibility

This charger and cable are specifically designed for Xiaomi and Redmi devices. It supports various models including:

- **Xiaomi Redmi Note Series:** 13, 13 5G, 12, 12S, 12 5G, 11, 11S, 10, 10S, 10 Pro, 9, 8, 7
- **Xiaomi Mi Series:** 13, 12, 11, 11i, 11 Lite, 11 Lite 5G, 10, 10T, 10T Pro, 10T Lite
- **Xiaomi Mi Pad Series:** 5, 6
- **POCO Series:** X6, X6 Pro, X5, X4, X3, X3 Pro, X3 GT, X3 NFC, F6, F5, F5 Pro, F4, F4 GT, F3, F2, F2 Pro, M6, M6 Pro, M5, M5S, M4, M4 Pro, M4 Pro 5G, M3, M3 Pro, C65

Important Note:
If your Xiaomi device requires more than 33W (e.g., 50W, 55W, 67W, or 120W), this 33W charger will provide standard charging only and will not support the device's turbo charging feature.

Setup

1. **Unpack:** Carefully remove the charger adapter and USB-C cable from the packaging.
2. **Connect Cable:** Insert the USB-C end of the cable into the charging port of your compatible device.
3. **Connect Adapter:** Plug the USB-A end of the cable into the USB port on the 33W charger adapter.
4. **Plug In:** Insert the charger adapter into a standard wall power outlet (AC 100-240V).



Image: A smartphone connected to the 33W charger, which is plugged into a wall outlet, demonstrating typical setup.

Operating Instructions

- **Charging:** Once connected, your device should begin charging automatically. The intelligent chip will adapt the power output to your device's requirements.
- **Data Transfer:** To transfer data, connect the USB-C cable to your device and the USB-A end to a computer's USB port. Ensure your device is unlocked and set to data transfer mode if prompted.
- **Optimal Charging:** For best charging performance, use the charger and cable with compatible Xiaomi/Redmi

devices.

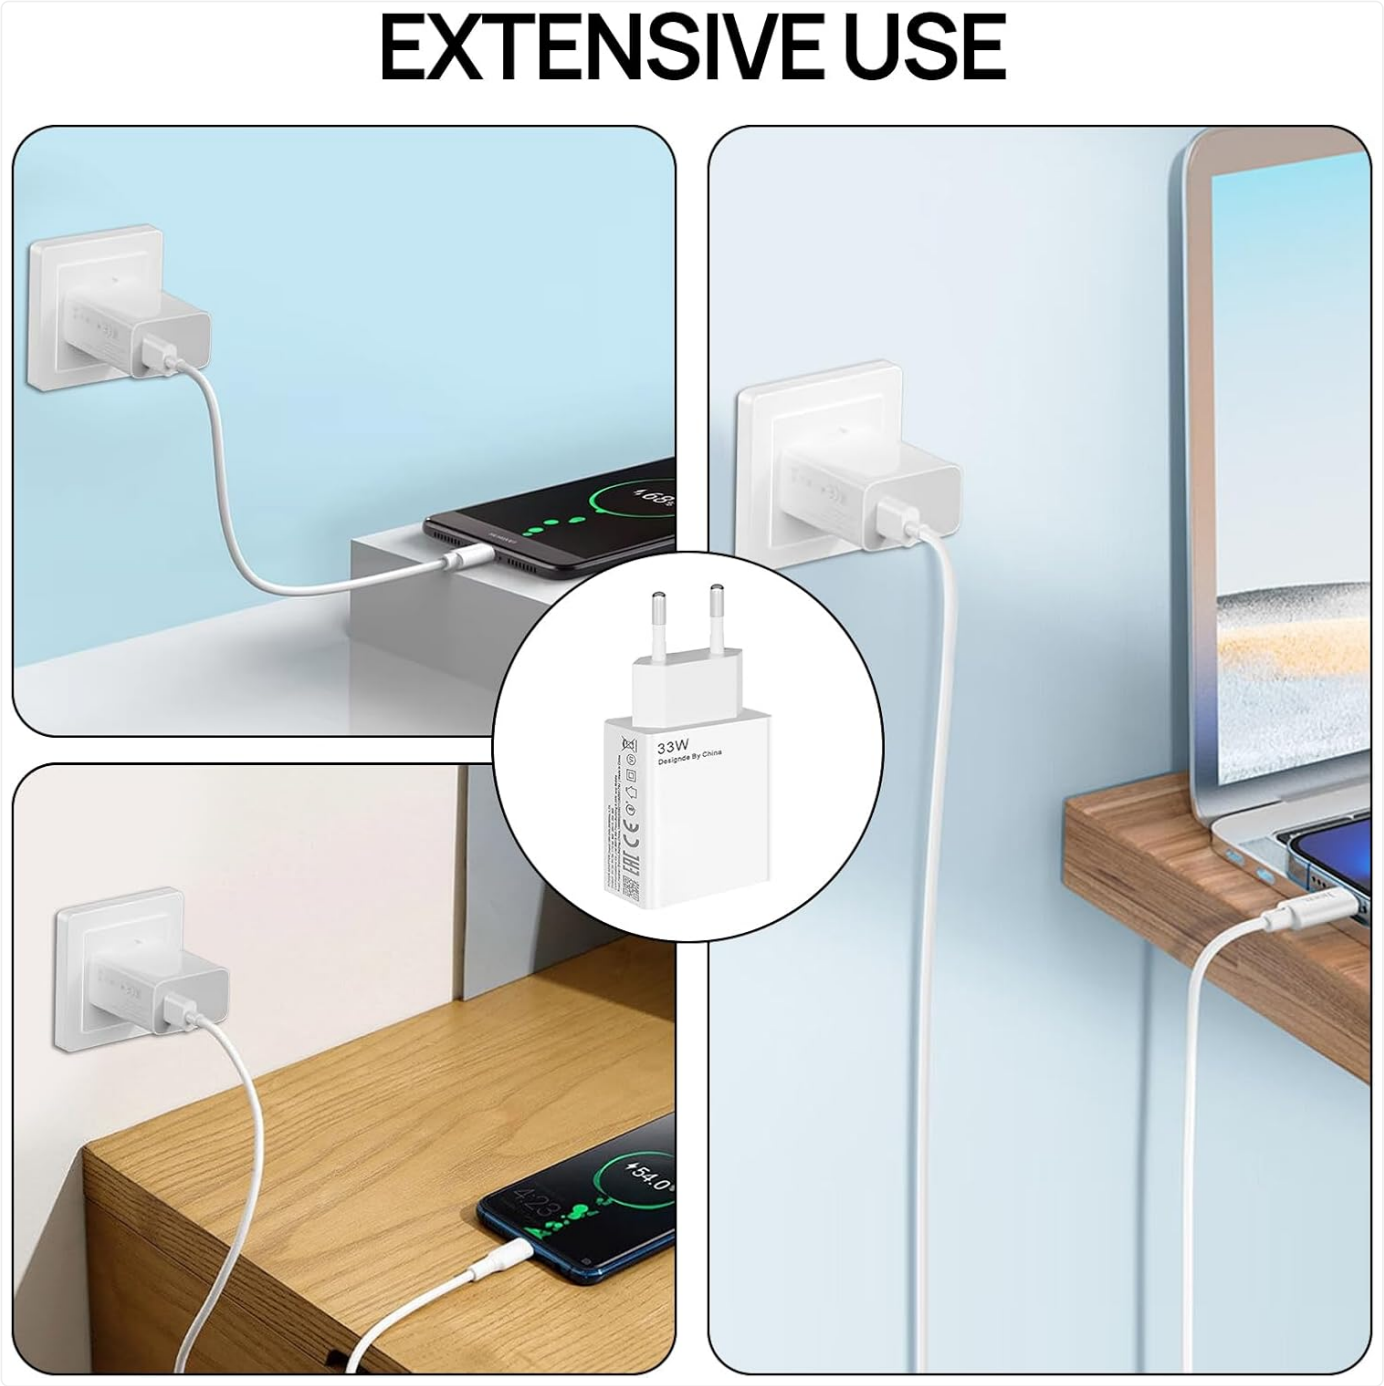


Image: Examples of the charger being used in various settings, such as charging a smartphone and a tablet, demonstrating its extensive use.

Safety Precautions

- Do not expose the charger or cable to water or excessive moisture.
- Avoid using the charger in extreme temperatures.
- Do not disassemble or attempt to repair the charger or cable.
- Keep out of reach of children.
- Unplug the charger from the wall outlet when not in use.
- Ensure the wall outlet is easily accessible for quick disconnection.



Image: An illustration detailing the charger's safety features, including protection against overcurrent, overheating, overvoltage, and short circuits.

Maintenance

- **Cleaning:** Disconnect the charger from the power source and your device before cleaning. Use a soft, dry cloth to wipe the surfaces. Do not use liquid cleaners.
- **Storage:** Store the charger and cable in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or twisting the cable excessively, as this can damage the internal wires.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Device not charging.	◦ Loose connection. ◦ Faulty power outlet. ◦ Incompatible device. ◦ Damaged cable or charger.	◦ Ensure all connections are secure. ◦ Try a different power outlet. ◦ Verify device compatibility (refer to Compatibility section). ◦ Try a different cable or charger to isolate the issue.
Slow charging.	◦ Device requires higher wattage. ◦ Background apps consuming power. ◦ Cable or charger issue.	◦ Confirm your device's required wattage. This charger provides up to 33W. ◦ Close unnecessary applications on your device. ◦ Ensure the cable and charger are not damaged.
Charger or device gets hot.	◦ Normal during fast charging. ◦ Poor ventilation. ◦ Overload or internal fault.	◦ Slight warmth is normal. ◦ Ensure the charger is in a well-ventilated area. ◦ If excessively hot, disconnect immediately and contact support.

Specifications

Feature	Detail
Brand	BOULESENM
Model Number	CDM07.0619
Input Voltage	AC 100-240V
Output Power	33W Max (11V/3A)
Output Voltage (DC)	5V, 9V, 12V
Output Current	3A
Connector Type	USB Type-C
Cable Length	2 meters (78.7 inches)
Fast Charging Technology	QC3.0 compatible
Safety Protections	Over-voltage, Over-current, Over-load, Short-circuit, Over-heating, etc. (11 levels)



Image: Diagram illustrating the physical dimensions of the charger adapter and the length of the USB-C cable.

Warranty and Support

For warranty information or technical support, please refer to the seller's policy on the purchase platform or contact BOULESENM customer service directly. Keep your purchase receipt for warranty claims.

Contact Information: Please check the product packaging or the seller's page for the most up-to-date contact details.

© 2026 BOULESENM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FDQN71TG

More documents and user manuals: **https://manuals.plus/**