Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ACCOHOHO LM089-223DBK

ACCOHOHO 22" Modern Nightstand with Charging Station Instruction Manual

Model: LM089-223DBK

Brand: ACCOHOHO

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your ACCOHOHO 22" Modern Nightstand with Charging Station. Please read all instructions carefully before assembly and use to ensure safe and proper functionality. Keep this manual for future reference.

Safety Information

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Assembly requires care to avoid injury. It is recommended that two people assemble this product.
- Do not exceed the maximum weight limit of**80 pounds (36.3 kg)** on the tabletop.
- Secure the nightstand to a wall using appropriate anti-tip hardware (not included) to prevent tipping, especially in households with children or pets.
- Ensure all electrical connections for the charging station are properly made and that the power cord is not pinched or damaged.
- Keep liquids away from the charging station to prevent electrical hazards.
- Do not attempt to modify the product or its components. Use only original parts for replacement if necessary.

Package Contents

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact ACCOHOHO customer support.

- Nightstand Frame Components (Engineered Wood)
- 3 Drawer Units

- Charging Station Unit (Pre-installed or separate)
- Assembly Hardware (Screws, dowels, cam locks, etc.)
- Assembly Tools (Basic tools may be included, but a screwdriver and hammer are often required and not always included.)
- Instruction Manual

SPECIFICATIONS

Feature	Detail
Brand	ACCOHOHO
Model Number	LM089-223DBK
Product Dimensions (D x W x H)	16" x 22" x 24" (40.6 cm x 55.9 cm x 61 cm)
Item Weight	48.5 lbs (22 kg)
Maximum Weight Recommendation (Tabletop)	80 lbs (36.3 kg)
Frame Material	Engineered Wood (FSC-certified)
Finish	Scratch- and Water-resistant
Number of Drawers	3
Drawer Dimensions (W x D x H)	18.7" x 11.8" x 6.5" (top two) & 18.7" x 11.8" x 7.3" (bottom)
Charging Station	2 AC Outlets (125V/12A), 2 USB Ports (5V/2.1A), 1 Type-C Port
Power Cord Length	4.9 feet (1.5 meters)
Base Type	Pedestal (3.3" thick)
Assembly Required	Yes (Recommended 2 people)
Room Type	Bedroom, Living Room



Image: Detailed dimensions and material information for the nightstand.

Setup and Assembly

Assembly is required for this nightstand. Please follow the steps carefully. It is recommended to have two people for assembly.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Refer to the included parts list to identify each piece and ensure nothing is missing.
2. **Assemble the Main Frame:** Follow the diagrams in your separate assembly guide to connect the side panels, back panel, and base. Ensure all cam locks and screws are tightened securely.
3. **Install Drawer Slides:** Attach the drawer slides to the interior of the nightstand frame and to the sides of the drawer boxes as indicated in the assembly instructions. Ensure they are level and aligned for smooth operation.
4. **Assemble Drawers:** Construct the three drawer boxes. Insert the bottom panels and secure the front and back panels.
5. **Install Push-to-Open Mechanisms:** Mount the push-to-open mechanisms inside the cabinet, ensuring they align with

the drawer fronts. These mechanisms allow for handleless drawer operation.

6. **Insert Drawers:** Carefully slide the assembled drawers into the frame, ensuring they engage with the drawer slides and the push-to-open mechanisms.
7. **Connect Charging Station:** If the charging station is not pre-installed, carefully place it into the designated cutout on the tabletop and secure it. Route the power cord out the back of the unit.
8. **Final Placement and Stability Check:** Position the nightstand in its desired location. Ensure it is stable and level. Consider securing it to a wall with anti-tip hardware for added safety.



More Space. Cleaner Style

3 push-to-open handleless drawers


18.7″W x 11.8″D x 6.5″H

18.7″W x 11.8″D x 7.3″H

Smooth Sliding Track

Smooth and Quiet



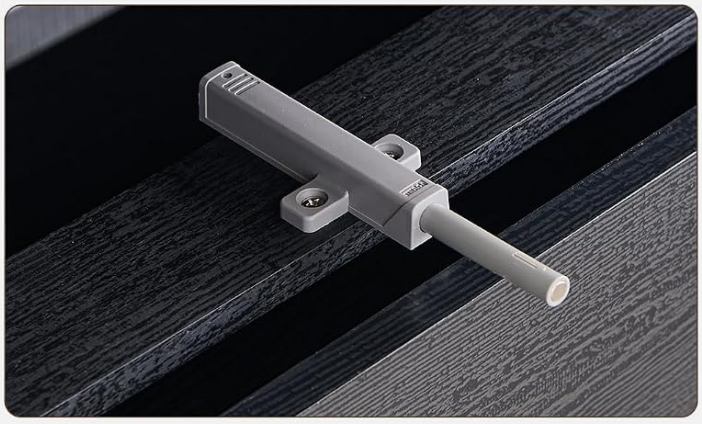

Built-In Mechanism

The push-to-open device is mounted inside the cabinet, keeping the exterior sleek and clutter-free

Image: Details of the drawer interior, smooth sliding track, and the internal push-to-open mechanism.

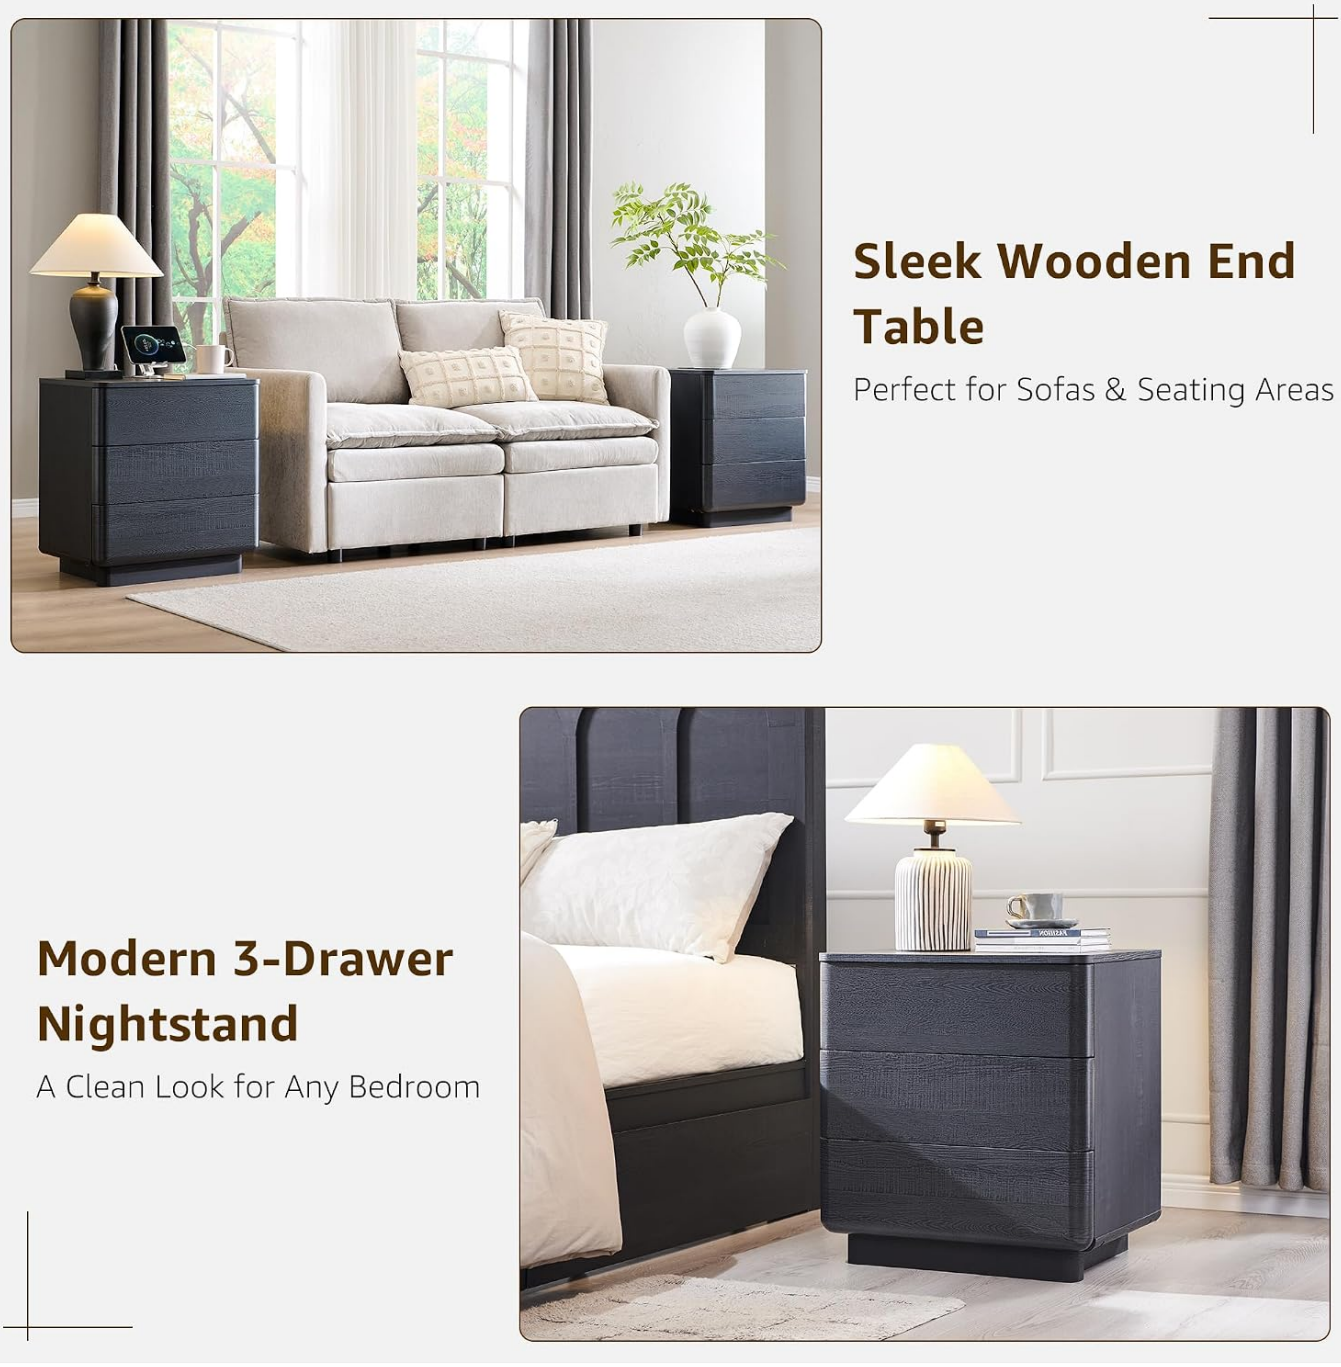


Image: The nightstand in various room settings, highlighting its modern design.

Operating Instructions

Using the Charging Station

The integrated charging station provides convenient power access for your electronic devices.

1. **Plug In:** Connect the nightstand's main power cord into a standard wall outlet.
2. **Connect Devices:**
   - For AC-powered devices (e.g., lamps, laptops), use the 2 AC outlets.
   - For USB-powered devices (e.g., smartphones, tablets), use the 2 USB-A ports or the 1 Type-C port.
3. **Charging Indication:** Devices will begin charging automatically once connected. There are no separate power switches for the charging ports.



Image: The recessed 5-in-1 charging station in use, powering various devices.

Operating Push-to-Open Drawers

The nightstand features handleless drawers with a push-to-open mechanism for a clean aesthetic.

1. **To Open:** Gently press the center of the drawer front. The drawer will spring open slightly, allowing you to pull it out fully.
2. **To Close:** Push the drawer firmly until it clicks into place and is flush with the nightstand frame.
3. **Adjustment:** If a drawer does not open or close smoothly, the internal push-to-open latch may need adjustment. Refer to the troubleshooting section or the assembly guide for details on adjusting the latch by rotating it.



Image: The handle-free drawers in an open position, showcasing the storage capacity.

Your browser does not support the video tag.

Video: Official product video demonstrating the features and operation of the ACCOHOHO 22" Modern Nightstand with Charging Station.

Maintenance

Proper care will help maintain the appearance and longevity of your nightstand.

- **Cleaning:** Wipe the surface with a soft, damp cloth. For tougher spots, use a mild, non-abrasive cleaner. Immediately wipe dry with a clean, dry cloth to prevent water damage, especially around the charging station.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong solvents, or polishes that may damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the engineered wood.
- **Heat and Moisture:** Avoid placing hot items directly on the surface. Use coasters for drinks. Keep the nightstand away from direct sunlight and excessive moisture.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

Troubleshooting

Problem	Possible Cause	Solution
Drawer does not open when pressed.	Push-to-open mechanism misaligned or stuck.	Ensure you are pressing the center of the drawer. Check if the push-to-open latch is obstructed. The latch can be adjusted by rotating it to the left or right to change its extension.
Drawer does not close flush.	Drawer slides are misaligned or push-to-open latch is not retracting fully.	Check drawer slide alignment. Ensure no items are obstructing the drawer. Adjust the push-to-open latch if it's extended too far.
Devices are not charging via the charging station.	Nightstand not plugged in, power outage, or faulty device/cable.	Verify the nightstand's power cord is securely plugged into a working wall outlet. Test with a different device or charging cable. Check if the wall outlet is functional.
Nightstand feels wobbly.	Loose assembly hardware or uneven floor.	Retighten all assembly screws and cam locks. Place the nightstand on a level surface. Use shims if necessary to stabilize.

Warranty and Support

This ACCOHOHO product comes with a limited manufacturer's warranty. For specific details regarding the warranty period and coverage, please refer to the warranty information provided at the time of purchase or contact ACCOHOHO customer service.

For assistance with assembly, missing parts, or any other product-related inquiries, please contact ACCOHOHO customer support directly. You can typically find contact information on the packaging or the seller's website.

Manufacturer: ACCOHOHO

Seller: ACCOHOHO (via Amazon)

© 2026 ACCOHOHO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FF2R2SL2

More documents and user manuals: **https://manuals.plus/**