Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Xflyee B0FF9F2ZQM

Xflyee 14.5" Large Digital Wall Clock Instruction Manual

Model: B0FF9F2ZQM

Brand: Xflyee

1. Product Overview

The Xflyee 14.5" Large Digital Wall Clock is designed for clear visibility and ease of use. It features an expansive HD LCD screen that simultaneously displays time, date, day of the week, and temperature. This battery-operated clock includes automatic Daylight Saving Time (DST) adjustments, a programmable alarm function, and flexible placement options for both desktop and wall mounting.



Image: Overview of the 6-in-1 multifunctional digital wall clock display.

2. Package Contents

- 1 x Xflyee 14.5" Large Digital Wall Clock
- 4 x AA Batteries
- 1 x Screwdriver
- 1 x Mounting Template
- Wall Hanging Nails/Screws
- User Manual

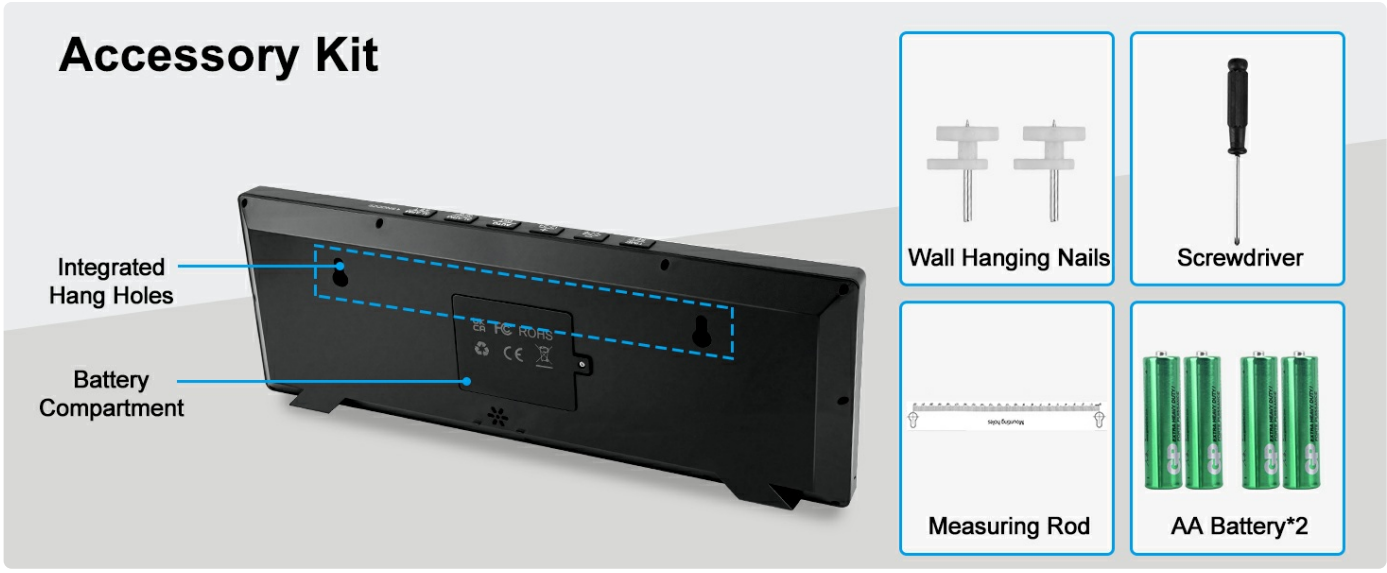


Image: Included accessories for the digital clock.

3. Setup

3.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert 4 AA batteries, ensuring correct polarity (+/-). Remove any plastic wraps from the batteries before insertion.
4. Close the battery compartment cover.

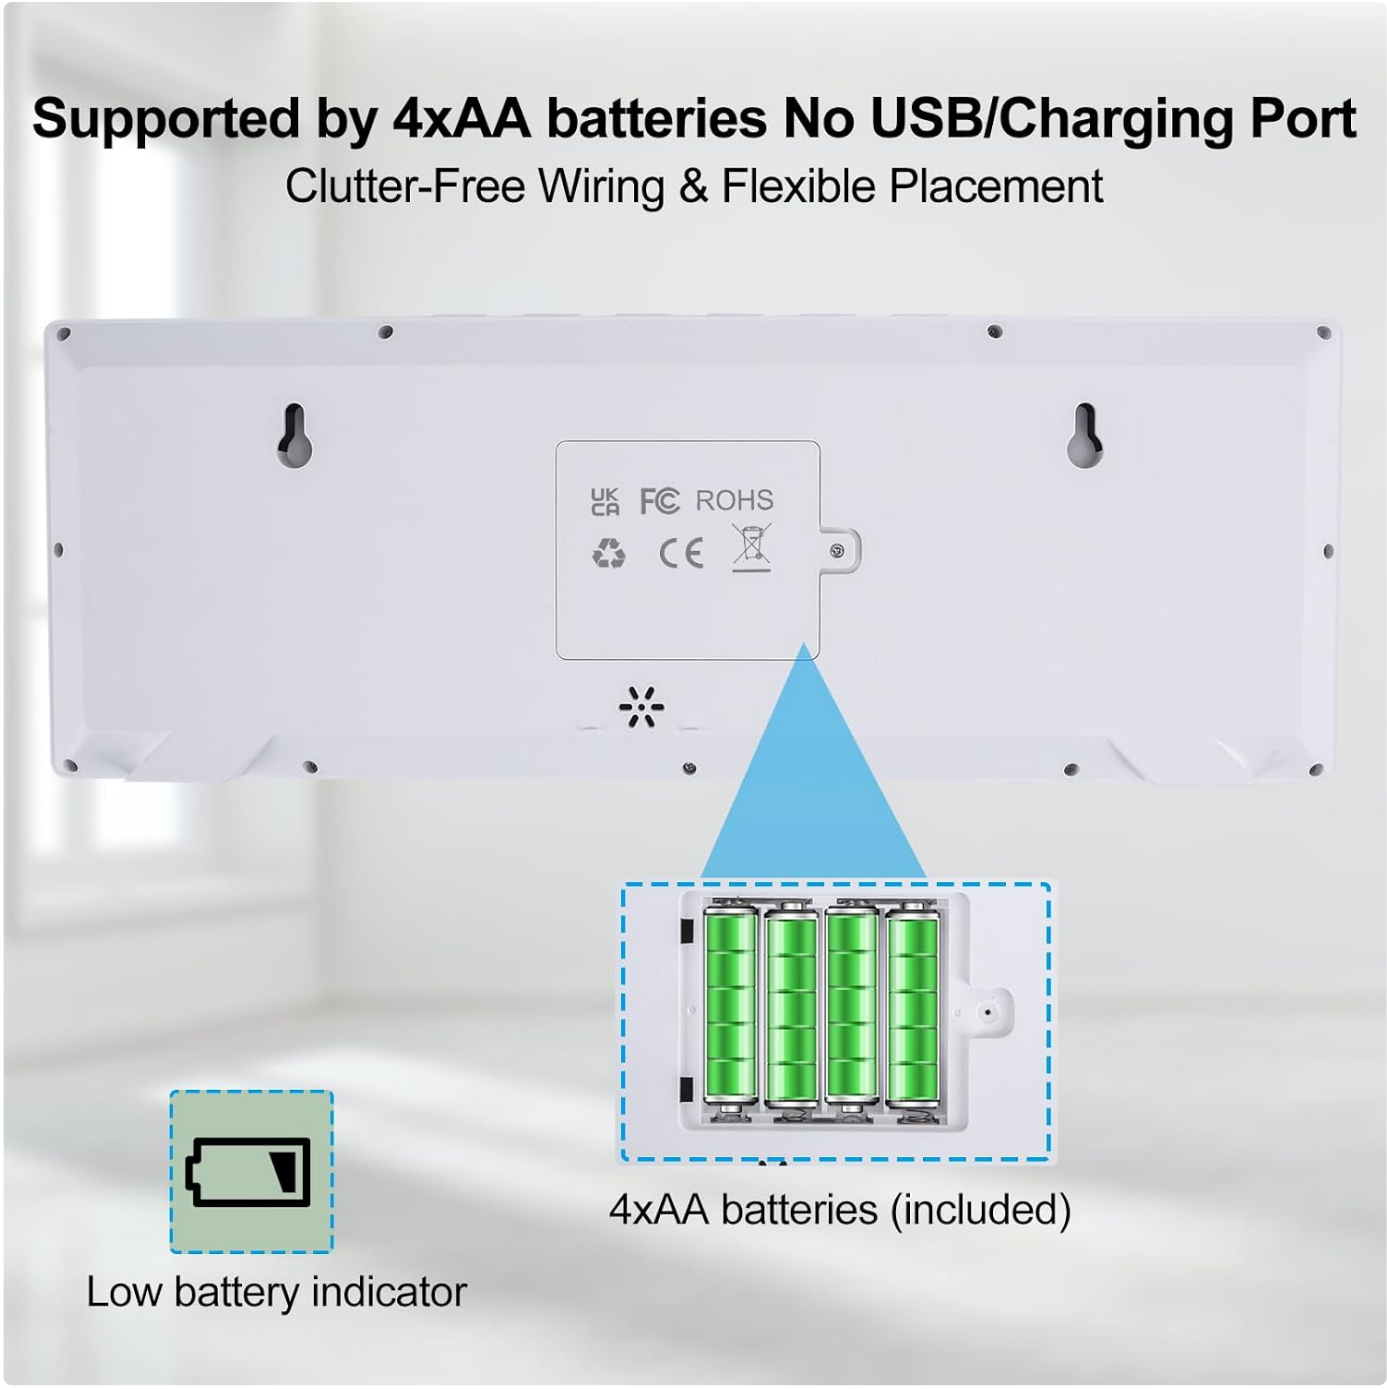


Image: Battery compartment and low battery indicator.

3.2 Placement Options

The clock can be placed on a desktop using its reinforced stand or mounted on a wall using the integrated hanging holes.

Desktop Placement:

- Extend the reinforced stand located on the back of the clock.
- Place the clock on a flat, stable surface.

Wall Mounting:

1. Use the provided mounting template to mark the desired screw positions on the wall.
2. Drill holes and insert the wall anchors if necessary.
3. Insert the wall hanging nails/screws, leaving a small portion exposed.
4. Align the integrated hanging holes on the back of the clock with the screws and securely hang the clock.

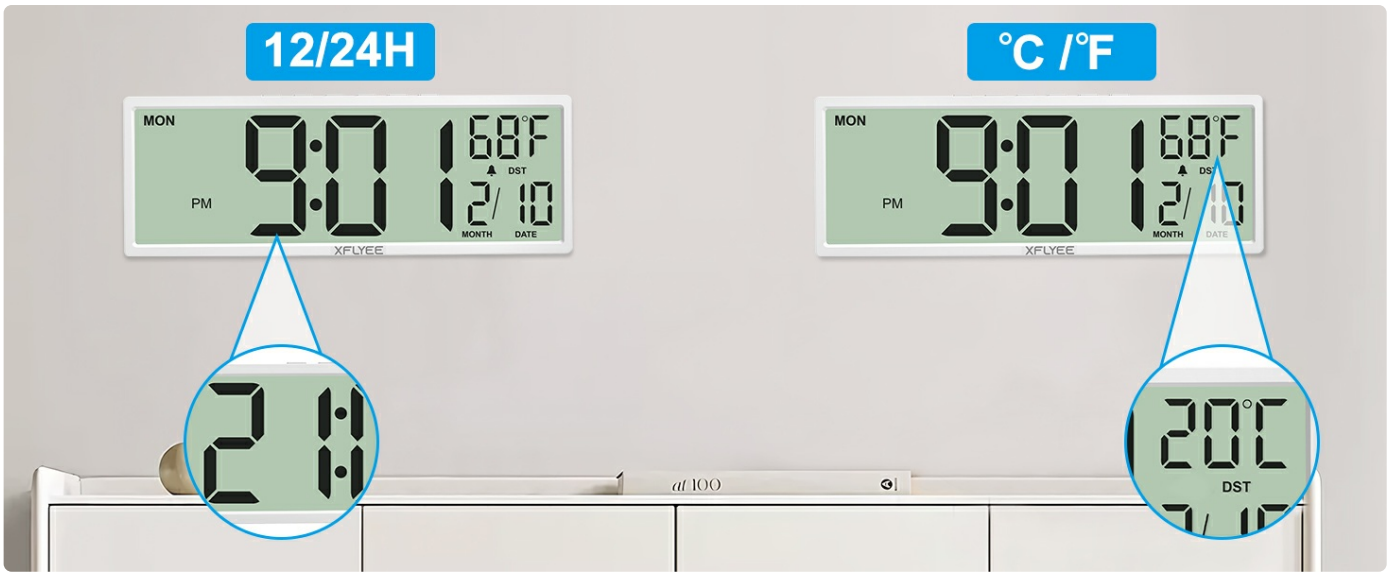


Image: Desktop and wall-mount setup options.

4. Operating Instructions

The clock features several buttons on the top edge for setting and adjusting functions. Refer to the labels above each button for specific functions.

4.1 Setting Time and Date

1. Press the **TIME SET** button to enter time setting mode. The hour display will flash.
2. Use the **+** or **-** buttons to adjust the hour.
3. Press **TIME SET** again to move to minutes, then adjust with **+** or **-**.
4. Continue pressing **TIME SET** to cycle through setting the year, month, and date, adjusting each with the **+** or **-** buttons.
5. After setting the date, press **TIME SET** one last time to exit setting mode. The day of the week will automatically update based on the set date.

Video: Demonstrates setting the time, minute, year, month, and date on the digital clock.

4.2 12/24 Hour Mode Selection

- Press the **12/24H** button to toggle between 12-hour (AM/PM) and 24-hour (military time) display formats.



Image: Switching between standard (AM/PM) and military (24Hr) time modes.

4.3 Temperature Unit Selection

- Press the **°C**/**°F** button to switch the temperature display between Celsius and Fahrenheit.

4.4 Automatic Daylight Saving Time (DST)

- The clock features an automatic DST adjustment function. Press the**AUTO DST** button to activate or deactivate this feature. When active, the clock will automatically adjust for Daylight Saving Time changes.



Image: Automatic Daylight Saving Time function.

4.5 Setting the Alarm

1. Press the **ALARM SET** button to enter alarm setting mode. The alarm hour will flash.
2. Use the **+** or **-** buttons to adjust the alarm hour.
3. Press **ALARM SET** again to move to alarm minutes, then adjust with **+** or **-**.
4. Press **ALARM SET** again to select the alarm mode (Everyday, Working Day, Weekend). Adjust with **+** or **-**.
5. Press **ALARM SET** one last time to confirm and exit alarm setting mode.

4.6 Activating/Deactivating Alarm and Snooze

- Press the **ALARM ON/OFF** button to turn the alarm on or off. An alarm icon will appear on the display when active.
- When the alarm sounds, press any button (except ALARM ON/OFF) to activate the snooze function for 9 minutes.
- To stop the alarm completely, press the **ALARM ON/OFF** button.

Video: Demonstrates setting the alarm and selecting alarm modes (Everyday, Working Day, Weekend).

5. Features

- **Large HD LCD Screen:** 14.5-inch display for comprehensive visibility of time, date, day, and temperature.
- **Battery Operated:** Powered by 4 AA batteries (included), offering flexible placement without cords. Features a built-in low battery indicator.
- **Non-Scrolling Display:** All information (time, temperature, date, day, month) is displayed simultaneously for quick readability.
- **Versatile Placement:** Equipped with a reinforced stand for desktop use and integrated hanging holes for wall mounting.
- **Customer-Friendly Design:** Includes automatic Daylight Saving Time adjustments, switchable 12/24-hour formats, Celsius/Fahrenheit temperature units, and a programmable alarm with snooze function.

6. Specifications

Attribute	Value
Brand	Xflyee

Colour	White
Product Dimensions	35.59 x 3.81 x 12.7 cm
Material	Plastic
Item Weight	544 g
Display Type	Digital
Special Feature	Large Display

7. Troubleshooting

- **Display is blank:** Ensure batteries are correctly inserted and have sufficient charge. Replace batteries if necessary.
- **Incorrect Time/Date:** Follow the instructions in Section 4.1 to manually set the time and date. Check if Auto DST is enabled and functioning correctly for your region.
- **Alarm not sounding:** Verify that the alarm is turned ON (alarm icon visible) and the alarm time is correctly set. Check the selected alarm mode (Everyday, Working Day, Weekend) to ensure it aligns with your desired alarm days.
- **Temperature reading is inaccurate:** Ensure the clock is placed in a location with stable ambient temperature, away from direct sunlight or heat sources.

8. Maintenance

- **Cleaning:** Wipe the clock's surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** When the low battery indicator appears, replace all 4 AA batteries simultaneously to ensure optimal performance. Do not mix old and new batteries.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Xflyee website. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I adjust the display brightness on the Xflyee 14.5" Digital Wall Clock (Model B0FF9F2ZQM)?

Based on the instruction manual for the Xflyee 14.5" Large Digital Wall Clock (Model B0FF9F2ZQM), there is no mention of a manual brightness adjustment or dimming feature. The device uses a standard HD LCD...

Read full answer

Open the live page

https://manuals.plus/asin/B0FF9F2ZQM

More documents and user manuals: **https://manuals.plus/**