Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

amseatec LY-9025

amseatec Ergonomic Office Desk Chair User Manual

Model: LY-9025H-BLK-BLK

Introduction

Thank you for choosing the amseatec Ergonomic Office Desk Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new chair. Please read these instructions carefully before use and retain them for future reference.

Safety Information

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Follow assembly instructions precisely. Incorrect assembly can lead to instability and potential injury.
- Do not stand on the chair. Use it only for sitting.
- Do not exceed the maximum weight capacity (not specified in data, but generally implied for office chairs).
- Keep children and pets away during assembly. Small parts may pose a choking hazard.
- Regularly check all bolts and screws to ensure they are tight. Retighten as necessary.
- Avoid exposing the chair to direct sunlight or extreme temperatures for prolonged periods, as this may damage the materials.

Package Contents

Verify that all the following components are included in your package:

- Mesh Backrest
- Mesh Seat
- Adjustable Armrests (Pair)
- Steel Gas Lift Cylinder
- Tilt Mechanism with Tension Control Knob
- Star Base
- Casters (5 pieces)
- Headrest
- Assembly Hardware (screws, washers, Allen wrench)

Setup and Assembly

Assembly is designed to be straightforward and can typically be completed within 30 minutes by one person. All necessary tools and parts are provided.

1. **Attach Casters to Base:** Insert each of the five casters into the holes at the end of the star base until they click securely into place.
2. **Insert Gas Lift:** Place the steel gas lift cylinder into the center hole of the star base.
3. **Attach Tilt Mechanism to Seat:** Secure the tilt mechanism to the underside of the seat using the provided screws. Ensure the front of the mechanism aligns with the front of the seat.
4. **Attach Armrests:** Fasten the adjustable armrests to the sides of the seat using the designated screws.
5. **Connect Backrest to Seat:** Attach the backrest to the seat assembly, aligning the mounting points and securing with screws.
6. **Install Headrest:** Slide the headrest into the top of the backrest until it is firmly in place.
7. **Assemble Chair onto Gas Lift:** Carefully place the assembled seat and backrest onto the gas lift cylinder, ensuring it is centered and stable.



Image: Exploded view of chair components for assembly. This image illustrates the main parts of the chair, including the base, gas lift, seat, backrest, armrests, and headrest, indicating a simple assembly process.



Image: Detailed view of the Class-4 Gas Lift, Reinforced Base Plate, and Heavy Duty Star Base, highlighting the robust construction of key components.

Operating Instructions

Your amseatec ergonomic chair offers multiple adjustment options to customize your seating experience for optimal comfort and support.

- **Seat Height Adjustment:** Locate the lever on the right side beneath the seat. Pull the lever up to raise the seat. While seated, pull the lever up to lower the seat. Release the lever to lock the height.
- **Armrest Height Adjustment:** Press the button located on the side of each armrest and slide the armrest up or down to your desired height. Release the button to lock.
- **Headrest Adjustment:** The headrest can be adjusted vertically (up/down) to provide optimal neck support. Gently push or pull the headrest to position it.
- **Lumbar Support Adjustment:** The lumbar support can be adjusted vertically (up/down) to align with the natural curve of your lower back. Gently push or pull the lumbar support mechanism on the backrest to adjust its position.
- **Rocking Tilt Function:** The chair features a 90–115° rocking tilt. Use the lever on the left side beneath the seat to engage or disengage the tilt. The tension control knob, usually located at the front center beneath the seat, allows you to adjust the resistance of the tilt mechanism. Turn clockwise to increase tension, counter-clockwise to decrease.



Image: A user demonstrating the 2.4-inch height adjustment of the lumbar support, highlighting its flexibility for personalized back support.

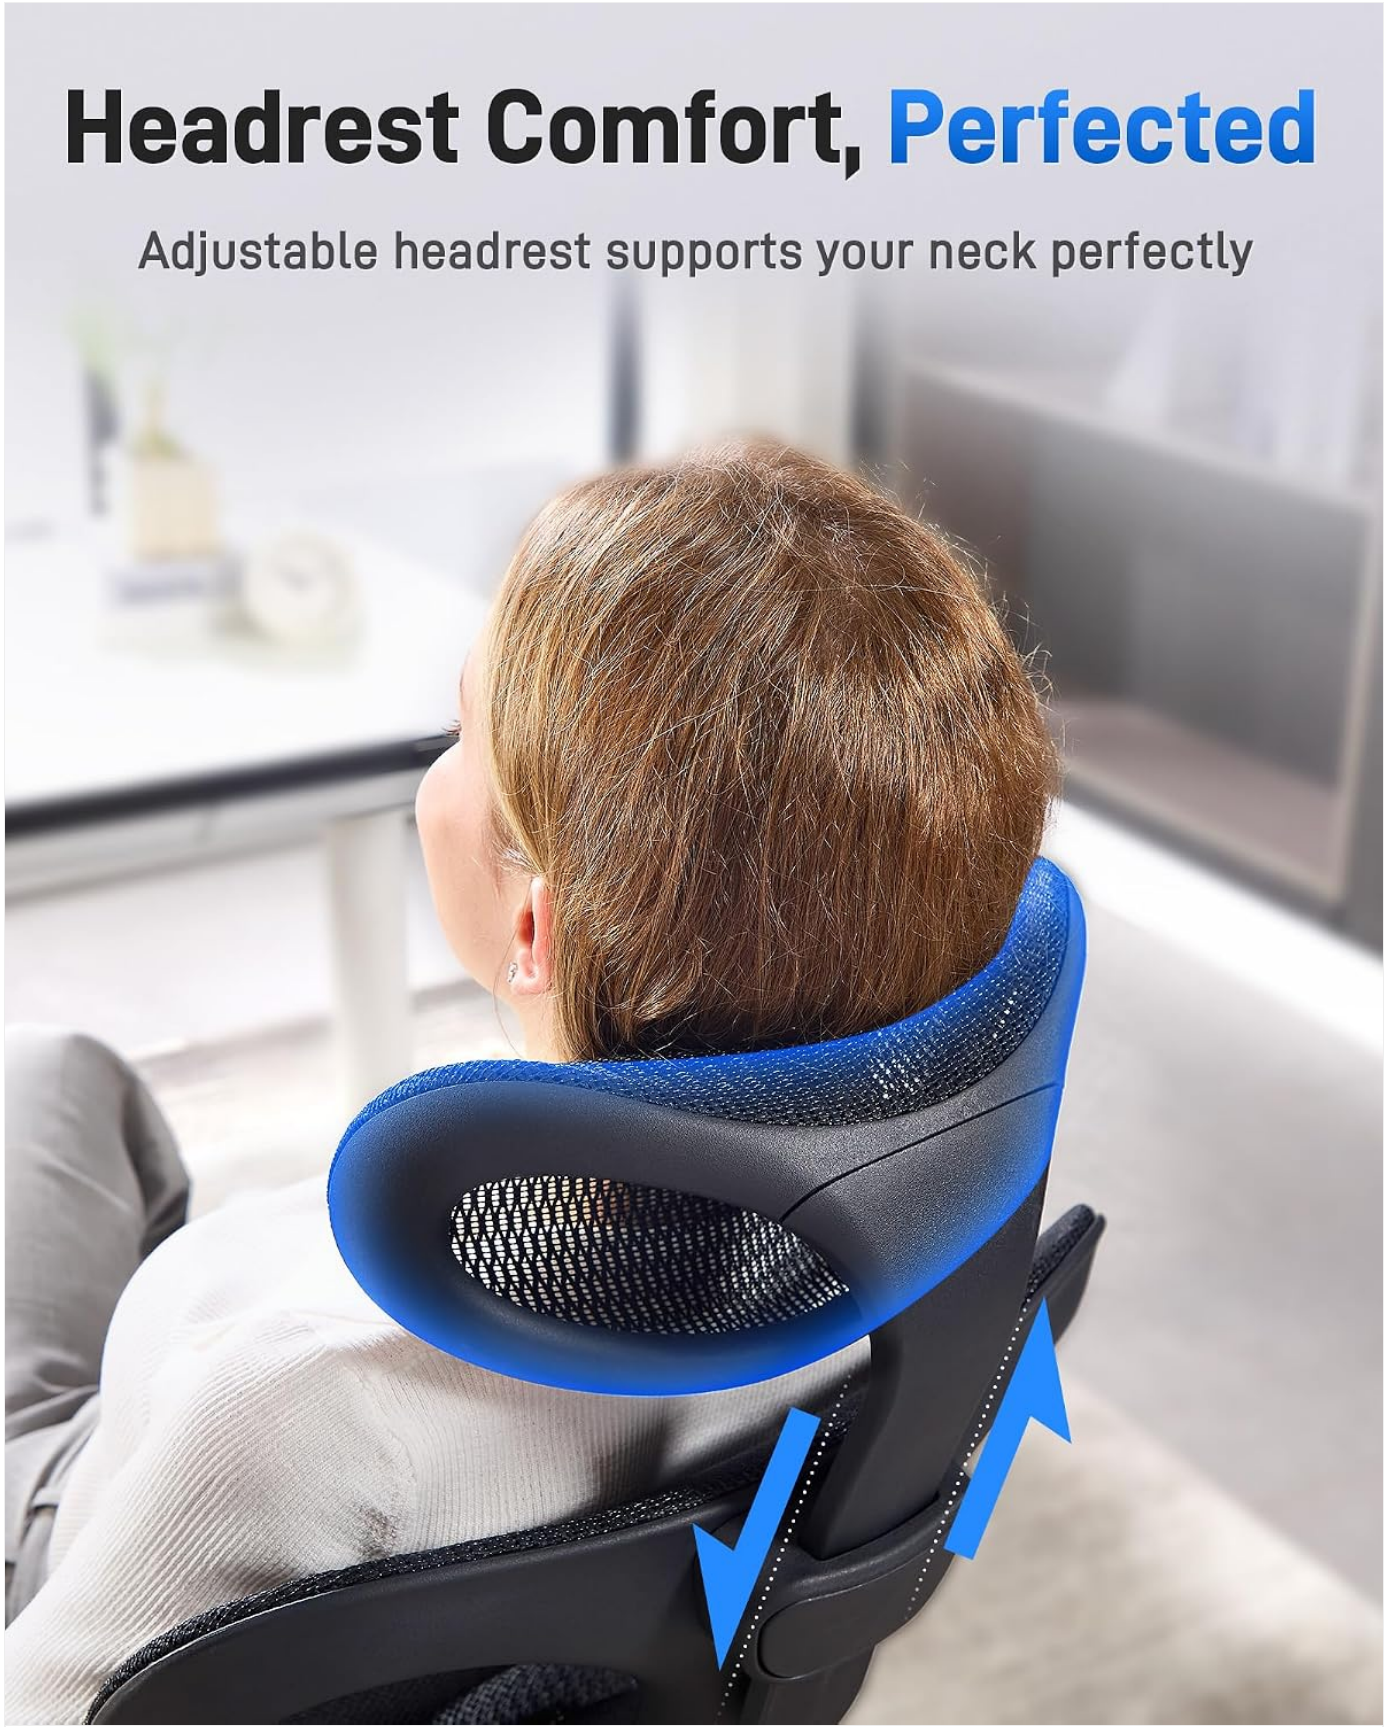


Image: A user adjusting the headrest, illustrating how it supports the neck and can be positioned for individual comfort.



Image: Visual representation of the chair's tilt mechanism, showing positions for 90° focus mode, 90-115° flow state, and 115° deep relax, indicating adjustable recline.

Maintenance

Proper maintenance ensures the longevity and performance of your amseatec office chair.

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the mesh fabric or plastic components.

- **Regular Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight. Retighten any loose fasteners to maintain stability and safety.
- **Caster Care:** Keep casters free of hair, dust, and debris to ensure smooth movement. Clean them regularly if needed.
- **Gas Lift:** The gas lift is a sealed unit and requires no maintenance. Do not attempt to disassemble it.

Troubleshooting

If you encounter any issues with your chair, refer to the following common solutions:

- **Chair feels wobbly:** Check all assembly screws and bolts. Ensure they are fully tightened. Verify that the gas lift is properly seated in the base.
- **Chair does not adjust height:** Ensure the height adjustment lever is fully engaged or disengaged. If the gas lift is faulty, it may need replacement.
- **Casters not rolling smoothly:** Inspect casters for debris (hair, lint, etc.) and clean them thoroughly.
- **Tilt function not working:** Check if the tilt lock lever is disengaged. Adjust the tilt tension knob to ensure it's not too tight or too loose.

If problems persist, please contact amseatec customer support for assistance.

Specifications

Brand	amseatec
Model Name	LY-9025H-BLK-BLK (LY-9025)
Color	Blk-blk
Product Dimensions	26.38"D x 26.77"W x 40.94"H
Seat Depth	19.49 inches
Item Weight	34.4 pounds
Special Features	Adjustable Backrest, Armrest & Headrest; Aerospace-Grade Frame; Butterfly Design; Triple Certified (BIFMA, SGS, TUV)
Included Components	Adjustable Armrests (Pair), Mesh Backrest, Mesh Seat, Steel Gas Lift Cylinder, Tilt Mechanism with Tension Control Knob



Image: Detailed dimensions of the amseatec ergonomic office chair, including height, width, and depth measurements for various adjustable parts.

Amseatec Lab

Where Every Chair Is Proven

"All Amseatec chairs undergo rigorous testing in our in-house facility — including load testing, fatigue analysis, and durability simulation."

"Because real comfort starts with real quality. And we prove it, every day."



Image: Display of BIFMA, SGS, TUV Rheinland, and ISO 9001 certifications, indicating the chair's adherence to quality and safety standards.

Warranty and Support

Your amseatec Ergonomic Office Desk Chair is backed by a **5-Year Warranty**, ensuring long-term support and peace of mind. This warranty covers manufacturing defects and significant functional issues under normal use.

For any questions, concerns, or warranty claims, please contact amseatec customer support. Refer to your purchase documentation for specific contact details or visit the official amseatec website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FFBBBSCK

More documents and user manuals: **https://manuals.plus/**