TELESIN CXCY-EU-P5-MCS-01-TSX-ZHU3

TELESIN Fun Shot Mastergrip Phone Camera Grip Photography Kit for Samsung Galaxy S25 Ultra User Manual

Model: CXCY-EU-P5-MCS-01-TSX-ZHU3

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your TELESIN Fun Shot Mastergrip Phone Camera Grip Photography Kit for Samsung Galaxy S25 Ultra. Please read this manual thoroughly before using the product to ensure proper function and longevity.

Package Contents

Verify that all items listed below are included in your package:

- Mastergrip Shooting Grip x 1
- Dedicated Phone Case x 1 (for Samsung Galaxy S25 Ultra)
- 67mm VND Filter Lens x 1
- 67mm CPL Filter Lens x 1
- Handle Strap x 1
- Filter Adapter Ring x 1



Image: All components of the TELESIN Fun Shot Mastergrip Photography Kit, including the grip, phone case, VND filter, CPL filter, handle strap, and filter adapter ring.

Setup Instructions

1. **Install the Phone Case:**

   Place your Samsung Galaxy S25 Ultra into the dedicated phone case provided. Ensure the phone is securely seated within the case.

2. **Attach the Mastergrip:**

   Align the phone case with the quick-lock slide rail on the Mastergrip. Slide the phone case into the grip until it clicks into place. Flick the latch to secure it.

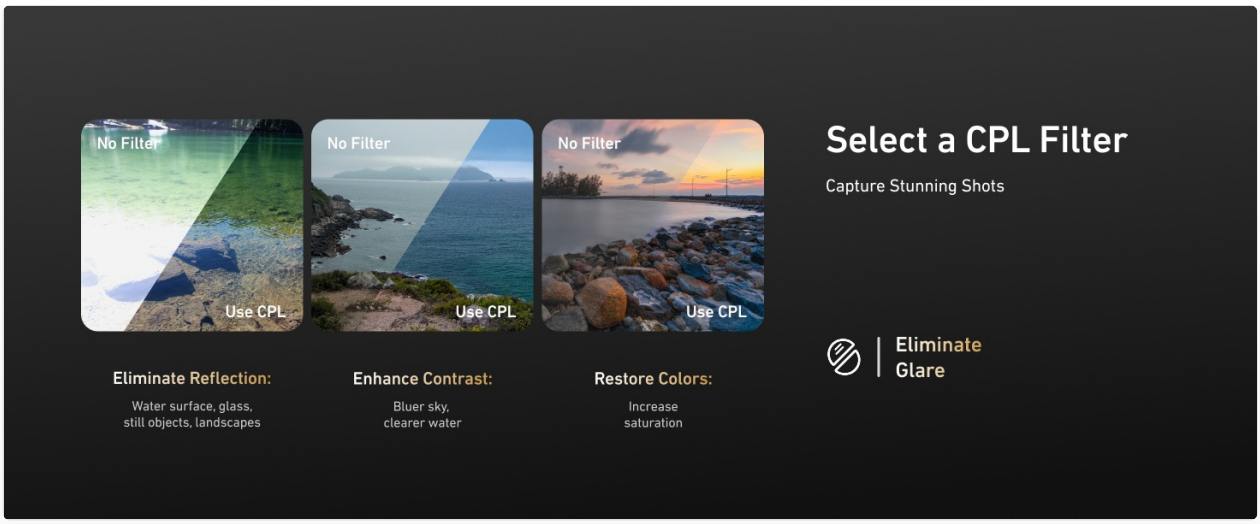


Image: Diagram illustrating how to slide the phone case into the Mastergrip's quick-lock rail and secure it with the latch.

3. **Attach the Handle Strap:**

   Thread the handle strap through the designated loop on the Mastergrip for added security during use.

4. **Install Filter Adapter Ring (Optional):**

   If using filters, attach the filter adapter ring to the camera lens area on the phone case. Ensure it is securely threaded.

5. **Install 67mm Filters (Optional):**

   Thread either the 67mm VND Filter Lens or the 67mm CPL Filter Lens onto the installed filter adapter ring. Rotate clockwise until snug.

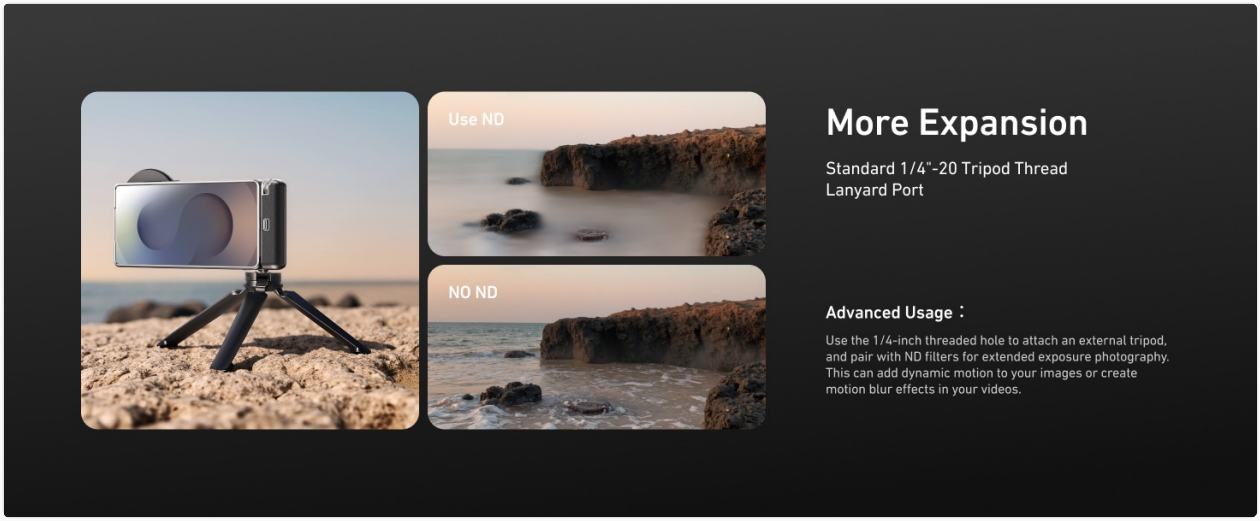


Image: Diagram showing how to attach a 67mm filter to the threaded adapter ring on the phone case.

Operating Instructions

The Mastergrip provides enhanced control for smartphone photography and videography.

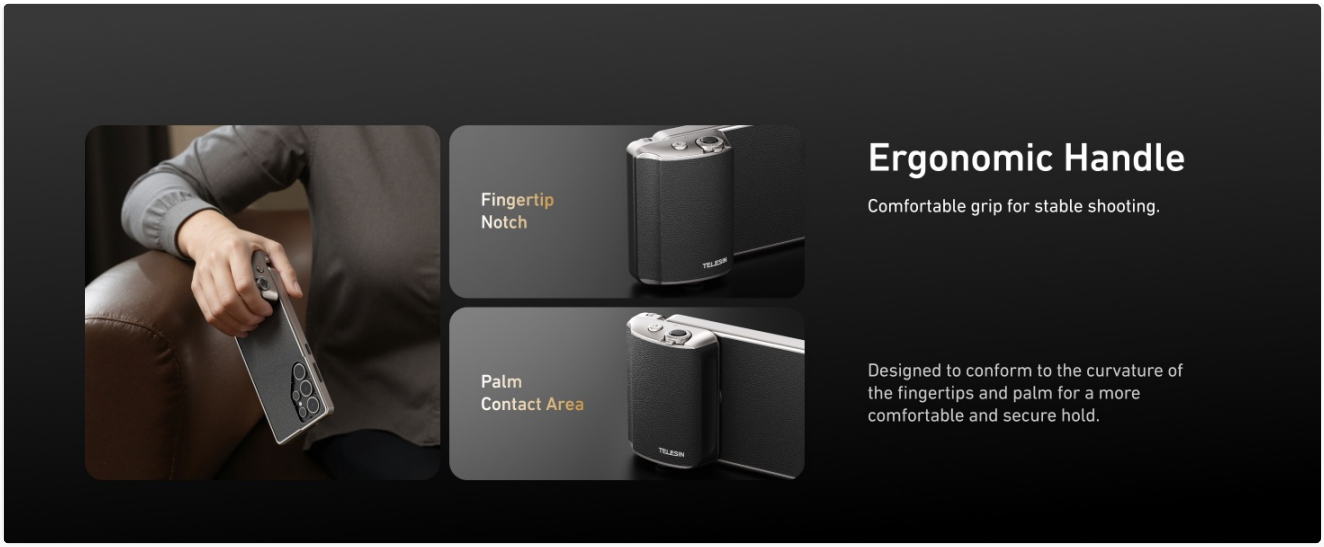


Image: Close-up view of the Mastergrip's control buttons, including the two-stage shutter, zoom lever, front/rear camera switch, and mode switch.

- **Two-Stage Shutter Button:** Press halfway to focus, press fully to capture a photo or start/stop video recording.
- **Zoom Lever:** Slide the lever to adjust the zoom level of your phone's camera.
- **Mode Switch Button:** Quickly switch between photo, video, and burst modes.
- **Front/Rear Camera Switch:** Toggle between the front and rear cameras of your smartphone.
- **Orientation:** The design allows for seamless transition between portrait and landscape shooting without removing the phone.

Using the Filters:

- **67mm VND Filter Lens (Variable Neutral Density):** This filter reduces the amount of light entering the camera, allowing for longer exposure times or wider apertures in bright conditions. It is adjustable from ND2 to ND32 (1 to 5 stops of light reduction).

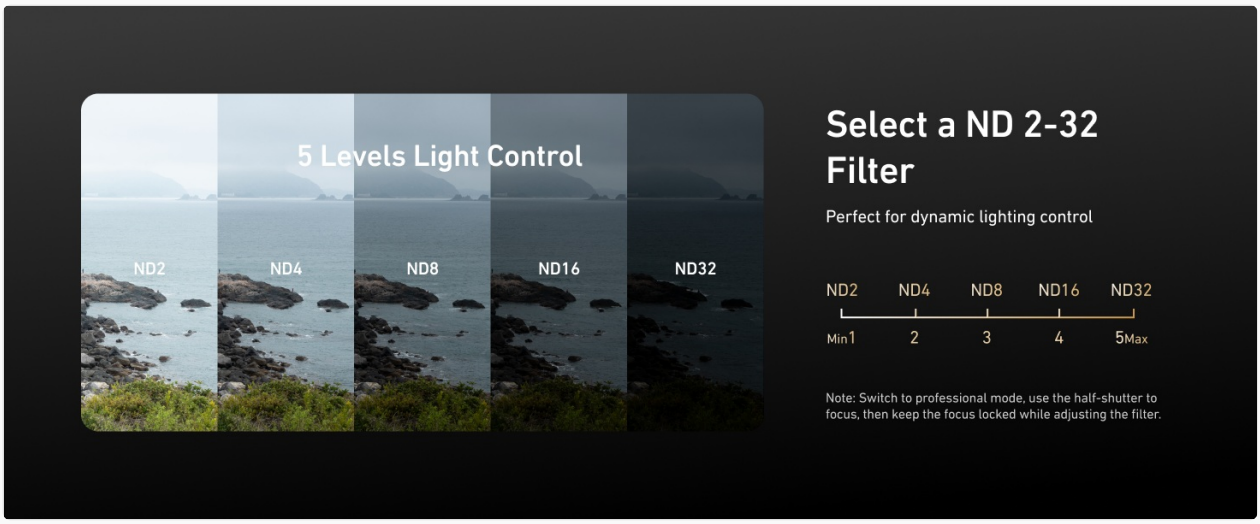


Image: Visual representation of 5 levels of light control (ND2 to ND32) achievable with the VND filter, demonstrating its effect on exposure.

Note: When using the VND filter, switch to professional mode on your phone's camera app. Use the half-shutter to focus, then keep the focus locked while adjusting the filter.

- **67mm CPL Filter Lens (Circular Polarizer):** This filter reduces reflections from non-metallic surfaces (like water or glass), enhances color saturation, and increases contrast in the sky.

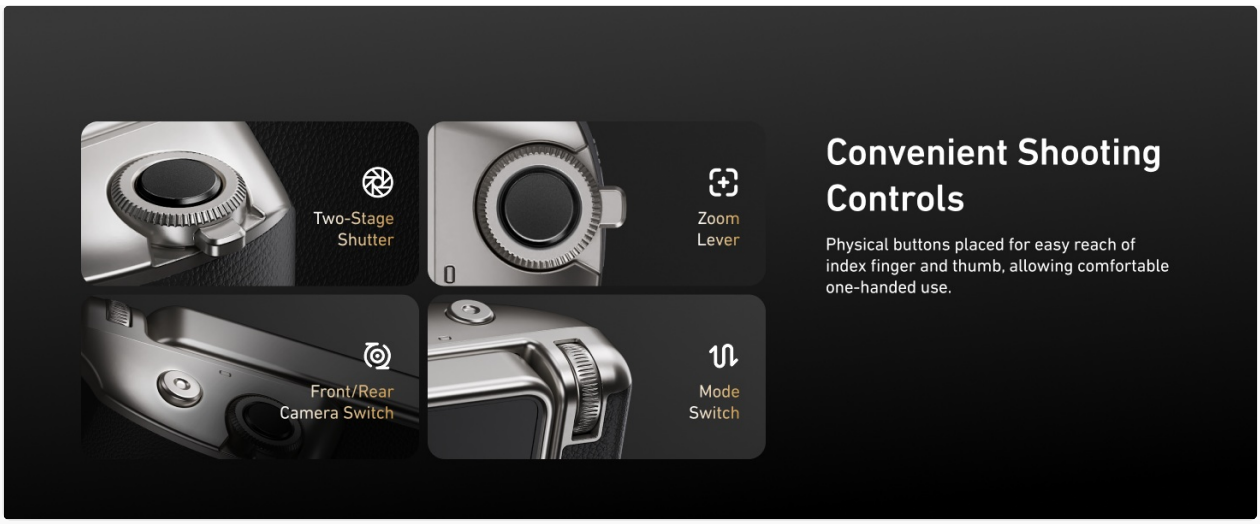


Image: Comparison shots demonstrating the effect of a CPL filter in eliminating reflections from water, enhancing sky contrast, and restoring colors in landscapes.

Maintenance

Battery Charging:

The Mastergrip has a built-in 300mAh battery. Connect a standard USB-C cable (not included) to the charging port on the grip and to a power source. A full charge provides power for over 10,000 shutter actuations.

Cleaning and Care:

The grip and phone case are made with high-end environmentally friendly silicone leather. To clean, gently wipe with a soft, damp cloth. Avoid harsh chemicals or abrasive materials. Store the filters in their protective cases when not in use to prevent scratches and dust accumulation.

Troubleshooting

- **Grip Not Responding:**
  Ensure the Mastergrip is fully charged. Check the Bluetooth connection between the grip and your smartphone. If the issue persists, try restarting both the grip and your phone.
- **Intermittent Disconnection:**
  Verify that the phone case is securely attached to the Mastergrip's rail. Ensure there are no obstructions between the grip and the phone. Check for any firmware updates for the grip (if available from the manufacturer's website).
- **Buttons are Flimsy or Overly Sensitive:**
  This may indicate a manufacturing defect. If the product is new and exhibiting this behavior, contact customer support for assistance.
- **Filters Not Threading Properly:**
  Ensure the filter adapter ring is correctly installed on the phone case. Carefully align the filter threads with the adapter ring and rotate gently. Do not force the threads.

Specifications

Feature	Detail
Model Number	CXCY-EU-P5-MCS-01-TSX-ZHU3

Compatible Devices	Samsung Galaxy S25 Ultra
Battery Capacity	300mAh Lithium Polymer (included)
Filter Size	67mm (VND and CPL)
Connectivity	Wireless (Bluetooth)
Material	High-end environmentally friendly silicone leather
Weight	Approximately 13 ounces (grip only)
Dimensions	9.02 x 7.87 x 2.64 inches (package dimensions)
Expansion Ports	1/4” tripod screw connector, Lanyard port

Warranty and Support

For warranty information and customer support, please refer to the official TELESIN website or contact your retailer. Keep your proof of purchase for any warranty claims.
You can visit the official TELESIN store for more information:TELESIN Store

© 2025 TELESIN. All rights reserved. This manual is for informational purposes only.