Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Teant MV-PINK

Teant MV-PINK Mattress Vacuum Cleaner User Manual

Model: MV-PINK

1. Introduction

Thank you for choosing the Teant MV-PINK Mattress Vacuum Cleaner. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and retain it for future reference.



Image 1.1: Teant MV-PINK Mattress Vacuum Cleaner (Pink model)

2. Safety Instructions

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Always ensure the power cord is undamaged before use. Do not operate the vacuum with a damaged cord or plug.
- Keep the appliance away from water or other liquids. Do not immerse the unit.
- The UV-C light is equipped with a leakage prevention device. It will only activate when the two gravity sensor wheels at the bottom are fully pressed against a surface. Do not attempt to bypass this safety feature. Avoid direct exposure to UV-C light.
- This appliance is for indoor use only.
- Do not use the vacuum to pick up flammable or combustible liquids, hot ashes, or sharp objects.
- If the roller brush becomes entangled in fabric or hair, it will automatically stop. Turn off the product and clear the obstruction before resuming use.
- Continuous operation for an extended period may trigger the motor overheat protection, causing a temporary shutdown. If this occurs, turn off the product and allow it to cool down before further use.

- Unplug the vacuum from the power outlet before cleaning or performing any maintenance.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.

3. Product Overview

3.1 Components

The Teant MV-PINK Mattress Vacuum Cleaner consists of the following main components:

- Main Unit with Handle
- Dust Collection Cup (Dual Dust Cup System)
- HEPA Filter
- Stainless Steel Filter
- Roller Brush
- UV-C Lamp
- LED Smart Display
- Power Cord (16.4 feet / 5 meters)
- Aromatherapy Tablet Slot



Image 3.1: HEPA Integrated Dual Dust Cup Filtration System components

3.2 Key Features

Your Teant MV-PINK Mattress Vacuum Cleaner is designed with advanced features for thorough cleaning:

- **Powerful Suction:** 16kPa suction power for effective dust and debris removal.
- **Hyper Helix Motor & Tapping:** 33,000 RPM/min roller brush provides deep tapping to dislodge embedded particles.
- **UV-C Light:** 253.7nm UV-C light for surface cleaning. Features a safety mechanism that activates only when in contact with a surface.
- **149°F (65°C) Hot Air:** High-temperature air helps loosen dust and keeps fabrics dry.
- **Ultrasonic Function:** Aids in dislodging particles from fabric fibers.
- **Anion Technology:** Releases negative ions to purify air and reduce odors from the exhaust.
- **HEPA Integrated Dual Dust Cup Filtration:** Captures 99.97% of particles (0.3 microns), separates hair and dust, and prevents clogging.
- **LED Smart Display:** Provides real-time cleaning indicators (dust detected, cleaning in progress, done).

- **Aroma Design:** Integrated slot for aromatherapy tablets to provide a fresh scent during cleaning.



Image 3.2: Key features of the Teant Mattress Vacuum Cleaner



Image 3.3: Multi-functional modes accessible via one-touch start

4. Setup

Before using your Teant MV-PINK Mattress Vacuum Cleaner for the first time:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the vacuum cleaner and its accessories for any signs of damage. Do not use if damaged.
3. **Assemble Dust Cup:** Ensure the HEPA filter and stainless steel filter are correctly seated within the dust collection cup. The dual dust cup system is designed for easy assembly.
4. **Insert Aromatherapy Tablet (Optional):** If desired, insert an aromatherapy tablet into the designated slot for a fresh scent during cleaning.
5. **Connect Power:** Plug the 16.4-foot power cord into a suitable electrical outlet.

5. Operating Instructions

5.1 Power On/Off

Press the 'Switch' button on the handle to turn the vacuum cleaner on or off.

5.2 Using the LED Smart Display

The LED display provides real-time feedback on cleaning progress:

- **Red Light:** Indicates dust is detected and the area requires cleaning.
- **Red-Blue Transition:** Indicates cleaning is in progress.
- **Full Blue Light:** Indicates the area is thoroughly cleaned.

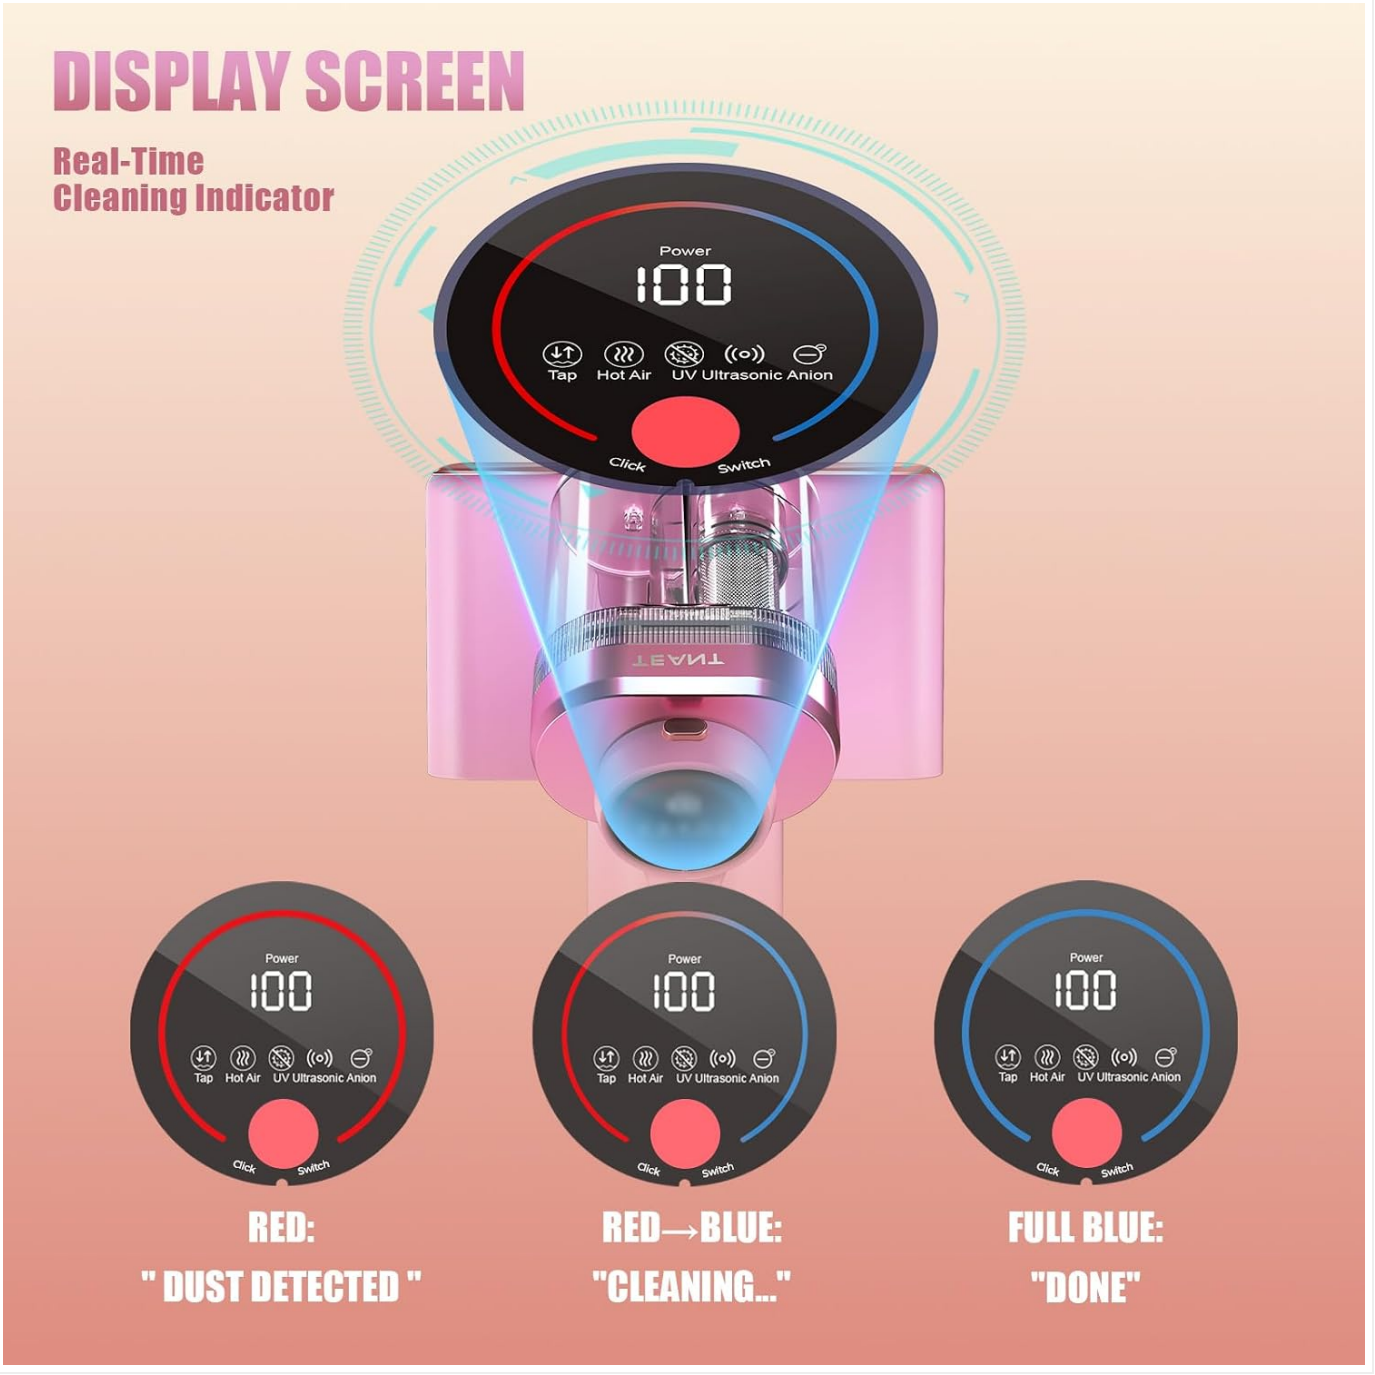


Image 5.1: LED Smart Display indicating dust detection and cleaning status

5.3 Cleaning Modes and Functions

The vacuum cleaner integrates multiple functions for comprehensive cleaning:

- **Tapping:** The roller brush taps the surface at 33,000 RPM/min to dislodge deeply embedded dust and mites.
- **Hot Air:** The 149℉ (65℃) hot air function helps to dry and loosen particles, enhancing cleaning effectiveness and

preventing moisture buildup.

- **UV-C Light:** The 253.7nm UV-C light activates when the vacuum is pressed against a surface, providing surface cleaning.
- **Ultrasonic:** This function works in conjunction with other cleaning modes to further agitate and remove particles.
- **Anion:** The anion function purifies the air exiting the vacuum, reducing odors.



Image 5.2: Demonstration of UV-C Light and Ultrasonic functions



Image 5.3: Illustration of the 149°F hot air function for deep mattress penetration

5.4 Application Areas

The Teant MV-PINK Mattress Vacuum Cleaner is suitable for cleaning various fabric surfaces:

- Mattresses
- Sofas and Upholstery
- Pillows
- Carpets and Rugs
- Pet Beds



Image 5.4: Examples of usage on carpet, pillow, sofa, and bed

6. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Cleaning the Dust Collection Cup

The dual dust cup system effectively separates hair and dust. Empty the dust cup after each use or when it appears full.

1. Unplug the vacuum cleaner.
2. Press the release button to detach the dust cup from the main unit.
3. Separate the two parts of the dust cup and empty the collected debris into a waste bin.
4. Rinse the dust cup components with water if necessary. Ensure they are completely dry before reassembling.

6.2 Cleaning and Replacing Filters

The HEPA filter and stainless steel filter are crucial for effective filtration. Clean them regularly and replace as needed.

1. Unplug the vacuum cleaner.
2. Remove the dust cup as described above.
3. Carefully remove the HEPA filter and stainless steel filter from the dust cup.
4. Tap the filters gently to remove loose dust. For a deeper clean, rinse them under running water.
5. Allow the filters to air dry completely for at least 24 hours before reinserting them. Do not use the vacuum with wet filters.
6. Replace filters every 3-6 months, or more frequently with heavy use, to maintain optimal suction and filtration.



Image 6.1: Comparison of a new filter versus a saturated filter, illustrating the need for replacement

6.3 Cleaning the Roller Brush

Periodically check the roller brush for entangled hair or fibers.

1. Unplug the vacuum cleaner.
2. Access the roller brush compartment (refer to the product diagram for location).
3. Carefully remove any entangled hair or debris using scissors or a brush.
4. Ensure the roller brush spins freely before reassembling.

7. Troubleshooting

If you encounter issues with your Teant MV-PINK Mattress Vacuum Cleaner, refer to the following table:

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; Power outlet malfunction; Damaged power cord.	Ensure plug is securely inserted. Test outlet with another device. Contact support if cord is damaged.
Loss of suction	Dust cup full; Filters clogged; Obstruction in nozzle/hose.	Empty dust cup. Clean/replace filters. Check for and remove obstructions.

Problem	Possible Cause	Solution
Roller brush stops spinning	Entangled with hair/fibers; Motor overheat protection activated.	Turn off, unplug, and clear entanglement. If overheated, turn off and allow to cool.
UV-C light not working	Not pressed firmly against surface; Safety sensor malfunction.	Ensure both gravity sensor wheels are fully pressed down. If issue persists, contact support.
LED display shows constant red	Dust sensor is dirty or malfunctioning.	Turn off and unplug. Gently wipe the small sensor inside the front of the vacuum (near the dust cup removal area) with a dry cloth.

8. Specifications

Feature	Specification
Brand	Teant
Model Name	MV-PINK
Special Feature	HEPA, UV-C Light, Hot Air, Ultrasonic, Anion
Filter Type	HEPA Filter
Is Cordless?	No (Corded)
Capacity	0.5 Liters (Dust Cup)
Form Factor	Handheld
Color	Pink
Product Dimensions	9.4"L x 10.6"W x 9.8"H
Item Weight	4.18 pounds
Motor Horsepower	0.816 horsepower
Number of Power Levels	1
Indoor/Outdoor Usage	Indoor
Display Type	LCD/LED
Cord Length	16.4 feet (5 meters)

9. Warranty and Support

Teant is committed to providing reliable products and customer satisfaction.
Warranty: Any quality problems within 10 years, Teant will replace the machine for you.
After-Sales Service: We provide lifelong after-sales service for any problems that may occur with your product. For support, please refer to the contact information provided with your purchase or visit the official Teant website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FFSZ7HG8

More documents and user manuals: **https://manuals.plus/**