Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

XINFUTE S40T

Instruction Manual for XINFUTE Soundbar Remote Control

Model: S40T, S45T

Product Overview

This manual provides detailed instructions for the XINFUTE Soundbar Remote Control, designed for seamless compatibility with LG Soundbar TV models S45T and S40T. This remote is an essential accessory for controlling your soundbar's audio functions.



Image: Front view of the XINFUTE Soundbar Remote Control. This image displays the remote's sleek black design and all its buttons, including power, volume, mute, Bluetooth, settings, navigation, and input selection.

Setup

Before using your XINFUTE Soundbar Remote Control, you will need to install batteries.

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Gently slide or press the latch to open the cover.
2. **Insert Batteries:** Insert two (2) AAA batteries into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries align correctly with the indicators inside the compartment.
3. **Close the Battery Compartment:** Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: View of the XINFUTE Soundbar Remote Control with the battery cover removed, showing two AAA batteries correctly inserted into their slots. This illustrates the proper orientation for battery installation.

Your remote control is now ready for use with compatible LG Soundbar models S45T and S40T.

Operating Instructions

The XINFUTE Soundbar Remote Control provides intuitive control over your LG Soundbar. Point the remote directly at the soundbar for optimal performance.

- **Power Button ( ):** Press to turn the soundbar on or off.
- **Volume Control (VOL + / -):** Press '+' to increase volume and '-' to decrease volume.
- **Mute Button ( ):** Press to mute or unmute the sound.
- **Input/Source Selection:** Use the dedicated buttons to switch between different audio inputs (e.g., Optical, Bluetooth, HDMI).
- **Navigation Buttons:** Use the arrow keys (Up, Down, Left, Right) and the 'OK' button (center) to navigate menus or select options on your soundbar's display (if applicable).

- **Bluetooth Button (ψ):** Press to activate Bluetooth pairing mode or switch to Bluetooth input.
- **Settings Button (⚙):** Access soundbar settings or sound modes.

For specific functions related to your soundbar model, refer to your LG Soundbar's user manual.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as they may damage the remote's surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place.

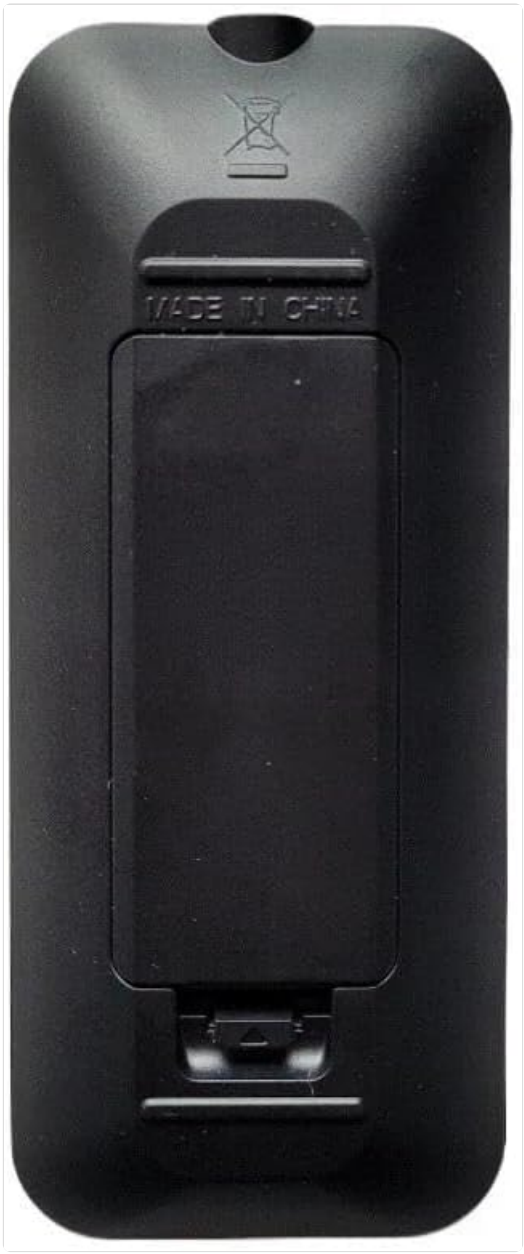


Image: Back view of the XINFUTE Soundbar Remote Control, showing the battery compartment cover and the "MADE IN CHINA" inscription. This view highlights the simple and ergonomic design of the remote's rear.

Troubleshooting

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Ensure there are no obstructions between the remote control and the soundbar's sensor.
  - Make sure you are within the effective operating range of the soundbar.
- **Intermittent Functionality:**
  - This could indicate low battery power. Replace batteries.
  - Ensure the remote's infrared emitter is clean and not blocked.

If the problem persists after trying these steps, please refer to the support section.

Specifications

Product Dimensions	6 x 3 x 1 inches
Item Weight	2.82 ounces
Model Numbers	S40T, S45T
Batteries Required	2 x AAA batteries (not included)
Material	ABS Material
Type	Soundbar Remote
Color	As Shown (Black)
Max Supported Devices	1
Compatible Devices	Home Theater (LG Soundbar TV models S45T, S40T)

Warranty Information

XINFUTE offers a one-year warranty on all purchases of this remote control. This warranty covers manufacturing defects and ensures your satisfaction with the product.
For warranty claims or further details, please retain your proof of purchase.

Customer Support

Your satisfaction is important to us. All products are inspected before shipment. If you are not satisfied with your purchase or have any questions, please contact us within 24 hours of receiving your product.
For assistance, please visit the XINFUTE Store on Amazon or contact the seller directly through your Amazon order details.

© 2025 XINFUTE. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FFYFY4YJ

More documents and user manuals: **https://manuals.plus/**