Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SANODESK 110x54cm

SANODESK Electric Standing Desk 110x54 cm - User Manual

Model: 110x54cm

1. Introduction

Thank you for choosing the SANODESK Electric Standing Desk. This manual provides detailed instructions for the assembly, operation, and maintenance of your new desk. Please read this manual carefully before assembly and use to ensure safe and efficient operation. Keep this manual for future reference.

Safety Precautions

- Ensure all components are present and undamaged before assembly.
- Do not allow children to operate the desk without adult supervision.
- Keep hands and objects clear of moving parts during height adjustment.
- Do not overload the desk. Refer to the specifications for maximum load capacity.
- Disconnect power before cleaning or maintenance.
- Use only the provided power adapter.

2. Package Contents

Verify that all the following components are included in your package:

- Desk Frame (Legs and Crossbar)
- Tabletop (110x54 cm)
- Control Panel with LED Display
- Power Adapter and Cable
- Cup Holder
- Headphone Hooks (2 units)
- Cable Management Tray
- Assembly Hardware (screws, tools)
- User Manual



Image 2.1: Overview of the SANODESK Electric Standing Desk with its included accessories, such as the cup holder, headphone hooks, and cable management tray.

3. Setup and Assembly

The SANODESK Electric Standing Desk is designed for straightforward assembly. Follow the instructions provided in the separate assembly guide included in your package. Typically, assembly can be completed within 30 minutes with clear visual instructions.

Key Assembly Steps:

1. Unpack all components and verify against the package contents list.
2. Assemble the desk frame according to the provided diagrams.
3. Attach the tabletop to the assembled frame.
4. Install the control panel, cup holder, headphone hooks, and cable management tray in your desired positions.
5. Connect the power adapter to the control box and then to a power outlet.



Image 3.1: Illustration of the desk frame installation, highlighting the robust structure before the tabletop is attached.



Image 3.2: The assembled desk showing its dimensions of 110cm in width and 54cm in depth, suitable for various workspaces.

4. Operating Instructions

Your SANODESK Electric Standing Desk features an intuitive control panel for easy height adjustment and memory functions.

Control Panel Functions:

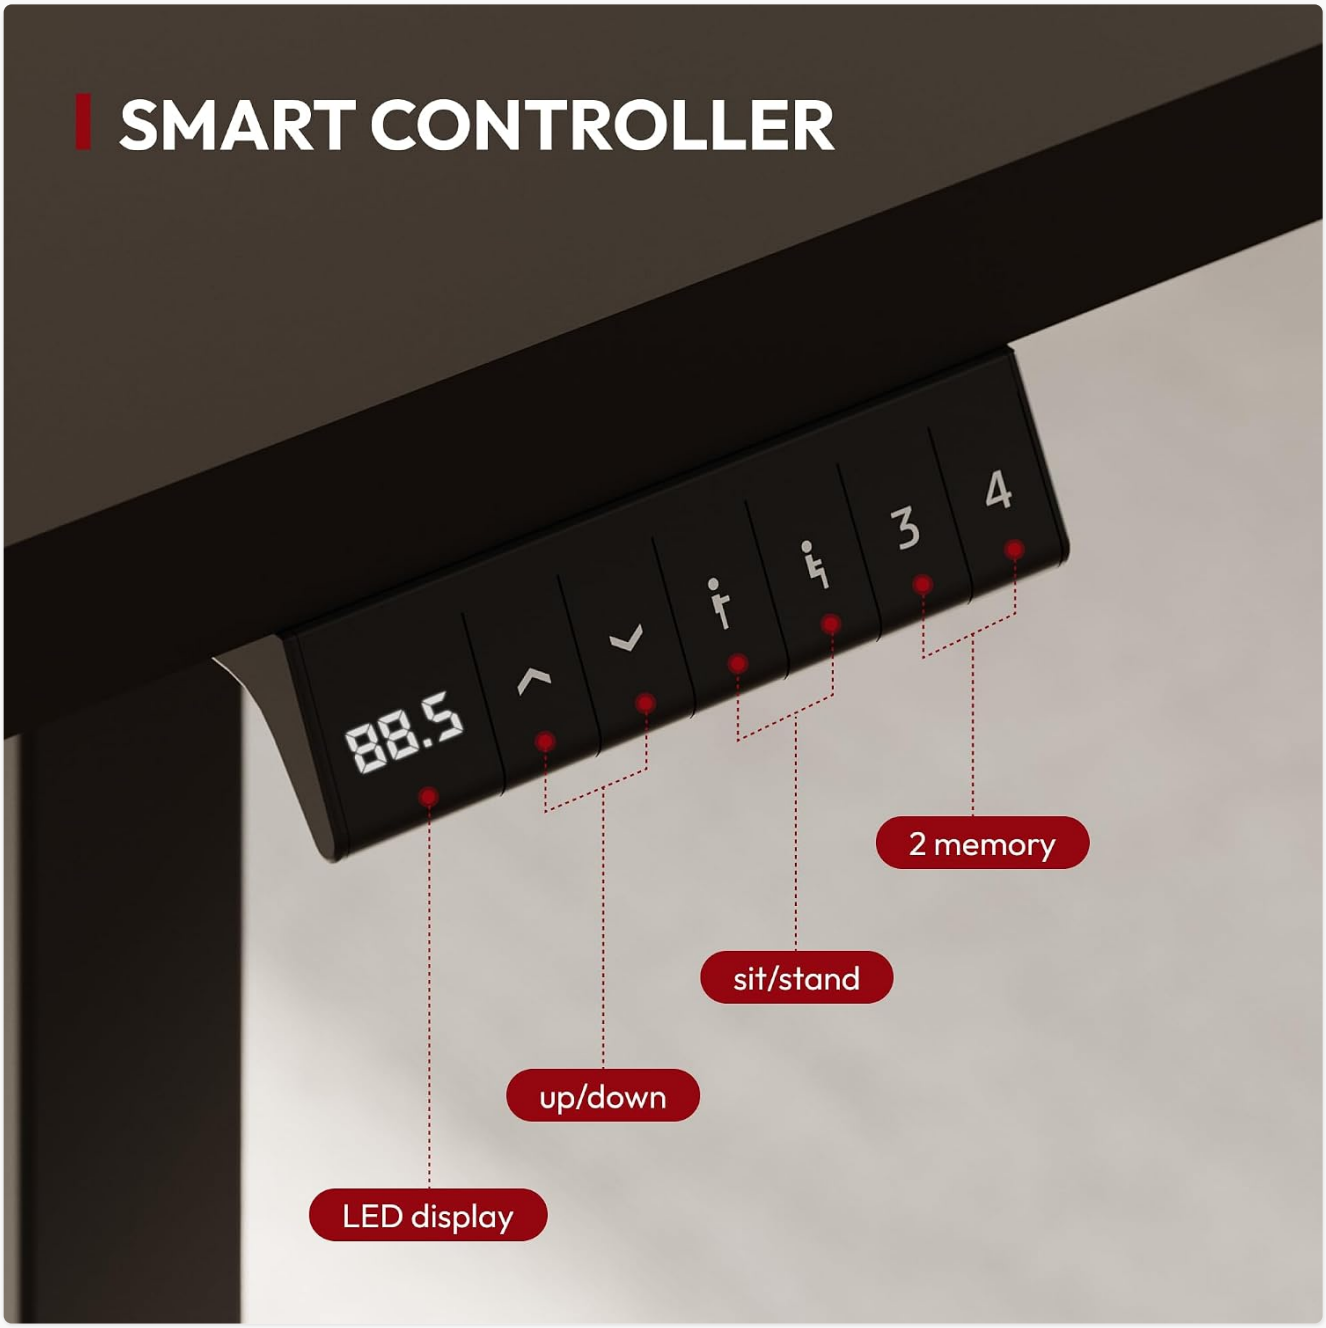


Image 4.1: The smart control panel featuring an LED display, up/down arrows, sit/stand button, and two memory preset buttons (1 and 2).

- **LED Display:** Shows the current desk height in centimeters.
- **Up/Down Arrows (▲ / ▼):** Press and hold to continuously adjust the desk height upwards or downwards. Release to stop at the desired height.
- **Sit/Stand Button ( ):** This button may be used to quickly switch between a pre-programmed sitting and standing height, or to activate a specific mode.
- **Memory Presets (1, 2):** Your desk allows you to save two preferred height settings.

Setting Memory Presets:

1. Adjust the desk to your desired height using the Up/Down arrows.
2. Press the 'M' or 'Set' button (if available, otherwise proceed to step 3).
3. Press and hold one of the memory preset buttons (1 or 2) until the LED display flashes or beeps, indicating the height has been saved.

Recalling Memory Presets:

Simply press the desired memory preset button (1 or 2). The desk will automatically move to the saved height.

Height Adjustment Range:

The desk can be adjusted between a minimum height of 73.5 cm and a maximum height of 118 cm, accommodating various user preferences for sitting and standing positions.



Image 4.2: Visual representation of the desk's height adjustment range, from a minimum of 73.5 cm to a maximum of 118 cm.

Anti-Collision Feature:

The desk is equipped with an anti-collision system. If the desk encounters an obstacle during adjustment, it will automatically stop and reverse slightly to prevent damage.

5. Integrated Accessories

Your SANODESK includes several accessories designed to enhance your workspace organization and convenience.

Cup Holder:

A convenient cup holder can be attached to the side of the desk, providing a secure place for your beverages and helping to prevent spills on your workspace.



Image 5.1: The desk featuring an attached cup holder, designed for easy access and spill prevention.

Headphone Hooks:

Two metal hooks are provided to hang your headphones or other frequently used items, keeping them within reach and off the desk surface.



Image 5.2: A metal hook attached to the desk, conveniently holding a pair of headphones.

Cable Management Tray:

An under-desk cable management tray helps organize and conceal power cords and other cables, contributing to a tidy and clutter-free workspace.



Image 5.3: The under-desk cable management tray effectively organizing multiple cables for a clean setup.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your SANODESK Electric Standing Desk.

Cleaning:

- Before cleaning, disconnect the desk from the power outlet.
- Wipe the desk surface and frame with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish.
- Ensure all surfaces are dry before reconnecting power.

Regular Checks:

- Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.

- Inspect the power cable for any signs of damage. If damaged, contact customer support for a replacement.
- Ensure the desk's movement is smooth and free of obstructions.

7. Troubleshooting

If you encounter any issues with your SANODESK Electric Standing Desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected, motor overload, or control panel error.	Check power connections. Reduce weight on the desk. Perform a reset (see below).
Desk moves unevenly or makes unusual noise.	Uneven load, loose connections, or internal motor issue.	Distribute weight evenly. Check and tighten all assembly screws. If problem persists, contact support.
Anti-collision feature activates frequently.	Obstruction in the desk's path.	Ensure there are no objects above or below the desk that could interfere with its movement.
Memory presets not working.	Presets not saved correctly.	Re-save your desired heights following the 'Setting Memory Presets' instructions.

Reset Procedure:

If the desk is unresponsive or displaying an error code, a reset may resolve the issue. Consult your specific assembly guide for the exact reset procedure, which typically involves holding down certain buttons on the control panel for a few seconds until the desk moves to its lowest position and resets.

8. Specifications

Key technical specifications for the SANODESK Electric Standing Desk (Model 110x54cm):

- **Brand:** SANODESK
- **Model:** 110x54cm
- **Color:** Black+black
- **Product Dimensions (L x W x H):** 110 cm x 54 cm x 73.5-118 cm
- **Height Adjustment Range:** 73.5 cm to 118 cm
- **Load Capacity:** Up to 70 kg
- **Noise Level:** Below 50 dB during operation
- **Special Features:** Height adjustable, Memory function, Anti-collision system, Quiet motor, Space-saving, Ergonomic
- **Certifications:** CE, RoHS, UKCA, FC (as indicated by product images)



Image 8.1: The desk demonstrating its robust construction with a load capacity of up to 70 kg.



Image 8.2: Illustration of the desk's quiet operation, with a noise level below 50 dB, ensuring a peaceful work environment.



Image 8.3: Display of product certifications including CE, RoHS, UKCA, and FC, indicating compliance with various safety and quality standards.

9. Warranty and Support

Warranty Information:

SANODESK products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product or visit the official SANODESK website. Keep your proof of purchase for warranty claims.

Customer Support:

If you have any questions, require assistance with assembly, or encounter issues not covered in this manual, please contact SANODESK customer support. You can typically find contact information on the product packaging, the official website, or through your retailer.
For more information, visit the SANODESK Store on Amazon.

© 2023 SANODESK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FG7MGM94

More documents and user manuals: **https://manuals.plus/**