Prasky P1 Max

Prasky Cordless Vacuum Cleaner P1 Max User Manual

Model: P1 Max

Introduction

Thank you for choosing the Prasky Cordless Vacuum Cleaner P1 Max. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair,

and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

What's Included

Your Prasky Cordless Vacuum Cleaner P1 Max package includes the following components:

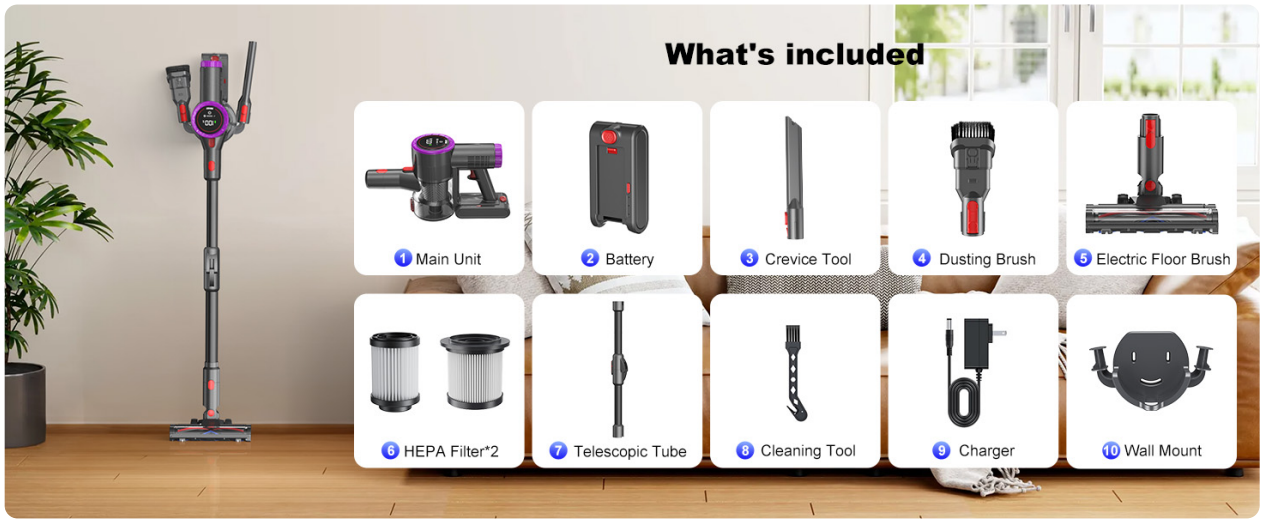


Image: All included components of the Prasky P1 Max Cordless Vacuum Cleaner.

- Main Unit
- Battery
- Crevice Tool
- Dusting Brush
- Electric Floor Brush
- HEPA Filter (x2)
- Telescopic Tube
- Cleaning Tool
- Charger
- Wall Mount
- User Manual (this document)

Setup

Assembly

1. Attach the telescopic tube to the main unit until it clicks into place.
2. Connect the electric floor brush to the other end of the telescopic tube.
3. Ensure the battery is securely inserted into the main unit.

Initial Charging

Before first use, fully charge the battery. The charging time is approximately 4 hours.

- Connect the charger to the main unit or directly to the detachable battery.
- Plug the charger into a power outlet.
- The LED display on the main unit will show the charging progress.



Image: Assembly of the Prasky P1 Max Cordless Vacuum Cleaner.



Image: Wall-mounted charging and storage for the vacuum.

Operating Instructions

Power On/Off and Suction Modes

The vacuum features a touchpad control with 2 power levels:

- **ECO Mode:** Provides up to 45-50 minutes of runtime for general cleaning.
- **MAX Mode:** Provides powerful 45KPa suction for up to 15-20 minutes for deep cleaning and pet hair.

Press the power button to turn the vacuum on or off. Use the mode button on the LED display to switch between suction modes.



Image: LED Battery Display and Power Modes.

Flexible Wand for Under-Furniture Cleaning

The telescopic tube features a 180° bendable wand, allowing you to easily reach under beds, sofas, and cabinets without excessive bending.



Image: Demonstrating the 180° Bendable Wand for under-furniture cleaning.

Your browser does not support the video tag.

Video: Demonstration of the foldable cordless vacuum cleaner's ability to reach under furniture. The green LED lights illuminate dust for thorough cleaning.

2-in-1 Handheld Conversion

Quickly convert your stick vacuum into a handheld unit by detaching the telescopic tube and attaching the desired accessory (crevice tool or dusting brush). This is ideal for cleaning cars, couches, drapes, and ceilings.



180° Bendable Wand
for Under-Furniture Cleaning

Image: Versatile accessories for all cleaning needs, including handheld use.

Your browser does not support the video tag.
Video: Demonstration of the cordless vacuum cleaner's versatility, including handheld mode and cleaning various surfaces.

Green LED Headlights

The electric floor brush is equipped with green LED headlights that reveal hidden dust and debris under furniture and in dark corners, ensuring no spot is missed.

Your browser does not support the video tag.
Video: Short preview demonstrating the cordless vacuum cleaner's effectiveness, highlighting its green LED lights for dust detection.

Maintenance

Emptying the Dustbin

The 1-liter dustbin features a one-touch emptying mechanism for hygienic disposal of collected debris. Simply press the release button to open the bottom flap and empty contents into a trash bin.



Image: One-touch dust cup emptying.

Cleaning Filters

The vacuum uses a 6-layer high-efficiency filtration system, including washable and reusable HEPA filters. Regularly clean the filters to maintain optimal suction performance.

- Remove the HEPA filter from the main unit.
- Rinse the filter under running water until clean.
- Allow the filter to air dry completely (at least 24 hours) before reinserting.





Image: Washable and reusable filters of the vacuum cleaner.



Image: Washing the HEPA filter.

Anti-Tangle V-Roller Brush

The brush head features a unique fin design to actively untangle long hair and pet fur. Periodically check the brush roll for any remaining tangled hair and remove it using the provided cleaning tool.



Versatile Accessories for All Cleaning Needs

Image: Anti-tangle V-Roller Brush in action on a carpet.

Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly inserted.	Ensure battery is fully charged and securely inserted.

Problem	Possible Cause	Solution
Low suction power.	Dustbin is full, filters are clogged, or brush roll is tangled.	Empty dustbin, clean filters, and remove any tangles from the brush roll.
Brush roll not spinning.	Obstruction in the brush roll or brush roll is tangled.	Remove any obstructions or tangled hair from the brush roll.
Battery life is shorter than expected.	Using MAX mode continuously or battery degradation over time.	Use ECO mode for longer runtime. If battery life significantly decreases, consider replacing the battery.

Specifications

- **Brand:** Prasky
- **Model Name:** Cordless Vacuum Cleaner—P1 Max
- **Special Feature:** Cordless, Foldable, HEPA, High Power, UV Light
- **Filter Type:** HEPA Filter
- **Is Cordless?:** Yes
- **Capacity:** 1 Liters
- **Wattage:** 250 watts
- **Charging Time:** Approximately 4 Hours
- **Recommended Uses:** Bed, Car, Carpet, Floor, Pet Hair, Wall
- **Form Factor:** Handheld
- **Color:** Purple
- **Product Dimensions:** 9"L x 6"W x 36"H
- **Battery Description:** Lithium-Ion
- **Battery Life:** Up to 45 minutes (ECO mode)
- **Manufacturer:** Prasky
- **Controller Type:** Touchpad Control
- **Motor Horsepower:** 550 Watts
- **Control Method:** Touch
- **Style:** Upright
- **Number of Speeds:** 2
- **Portable:** Yes
- **Indoor/Outdoor Usage:** Indoor, Outdoor
- **Vacuum Collection Technology:** Rotating Brush Roll & Suction
- **Item Weight:** 6 pounds
- **Surface Recommendation:** All floors
- **Power Source:** Battery Powered

Warranty & Support

Your Prasky Cordless Vacuum Cleaner P1 Max is backed by a comprehensive 36-Month After-Sales Service commitment.

- **Warranty Period:** 36 Months from the date of purchase.
- **Customer Service:** If you encounter any issues after receiving your unit, please contact Prasky customer support immediately.
- **Response Time:** We promise to resolve all your concerns within 12 hours.
- **Contact Information:** Please refer to the contact details provided on the product packaging or the official Prasky website for support.

© 2026 Prasky. All rights reserved.