Elevon QD-HAMMOCKSTAND-C-WT

Elevon Hammock Chair Stand Instruction Manual

Model: QD-HAMMOCKSTAND-C-WT | Brand: Elevon

1. Introduction

Thank you for choosing the Elevon Hammock Chair Stand. This stand is designed to provide a stable and durable support for various hanging chairs, including hammock chairs, egg chairs, and sensory swings. It is suitable for both indoor and outdoor use, offering a comfortable and secure relaxation experience. Please read this manual thoroughly before assembly and use to ensure proper installation and safe operation.

2. Safety Information

WARNING: Maximum weight capacity 400 lbs (181 kg). Do not exceed this weight limit. Securely anchor the hammock stand to stable supports. Keep away from children. Always ensure all connections are tight and secure before each use. Do not swing excessively or use the stand in a manner that could cause it to tip over.

- Ensure the stand is placed on a flat, stable, and level surface.
- Regularly inspect all components for wear, damage, or loose connections. Discontinue use if any damage is found.
- Keep hands and fingers clear of pinch points during assembly and adjustment.
- This stand is designed for single-person use.

3. Package Contents

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact Elevon customer support.







Figure 3.1: All components included in the package.

- C-shaped Frame (Upper and Lower sections)

- X-shaped Base (4 legs and central connector)
- Spring Hook
- Steel Chain
- Carabiner
- Assembly Hardware (bolts, washers, plastic-covered screw)
- Anti-slip Foot Mats (pre-installed or separate)

4. Assembly Instructions

Follow these steps carefully for proper assembly. It is recommended to have two people for easier assembly.



Figure 4.1: Overview of installation steps.

1. **Step 1: Assemble the Base**
   Connect the four legs of the X-shaped base to the central connector using the provided bolts and washers. Ensure all connections are tight and secure. The base should form a stable 'X' shape.



Figure 4.2: Stable X-shaped Base for enhanced balance.

2. **Step 2: Connect the Frame to the Base**
   Insert the lower section of the C-shaped frame into the central opening of the assembled X-shaped base. Secure it with the plastic-covered screw, ensuring it is firmly tightened to prevent wobbling. Then, connect the upper C-shaped frame section to the lower section, securing it with the appropriate screw or locking mechanism.
3. **Step 3: Attach Hanging Accessories**
   Attach the spring hook to the top of the C-shaped frame. Then, connect the steel chain to the spring hook. The carabiner can be attached to the end of the chain for easy connection to your hammock chair. The chain allows for adjustable height.



Figure 4.3: Key components for secure hanging.

Once assembled, gently test the stand's stability before hanging a chair. Ensure all parts are securely fastened.

5. Operating Instructions

The Elevon Hammock Chair Stand is designed for ease of use and versatility.

- **Hanging Your Chair:** Use the carabiner at the end of the chain to attach your hammock chair, egg chair, or sensory swing. Ensure the chair's hanging loop is securely fastened to the carabiner.
- **Adjusting Height:** The steel chain allows for height adjustment. You can connect the carabiner to different links on the chain to achieve your desired hanging height.
- **Weight Capacity:** The stand is engineered to support up to 400 lbs (181 kg). Do not exceed this weight limit to prevent damage or injury.
- **360° Rotation:** The industrial-grade spring hook and metal buckles allow for smooth, silent 360-degree rotation, providing panoramic views and enhanced comfort.



Figure 5.1: Stand is suitable for most kinds of hanging chairs (chair not included).

6. Maintenance

Proper maintenance will extend the life of your Elevon Hammock Chair Stand.

- **Cleaning:** Wipe down the steel frame with a damp cloth and mild soap as needed. Avoid abrasive cleaners or harsh chemicals that could damage the powder-coated finish.
- **Inspection:** Periodically check all bolts, screws, and connections to ensure they remain tight. Inspect the spring hook and chain for any signs of wear, rust, or deformation.
- **Weather Protection:** While the powder-coated steel is designed to resist rust and UV damage, prolonged exposure to extreme weather conditions (heavy rain, snow, direct sunlight) can reduce its lifespan. Consider covering the stand or storing it indoors during harsh weather.
- **Storage:** When not in use for extended periods, store the stand in a dry, protected area to prevent corrosion and damage.

7. Troubleshooting

If you encounter any issues with your hammock chair stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand feels wobbly or unstable.	Loose connections; uneven surface.	Ensure all bolts and screws are tightened. Move the stand to a flat, level surface.
Difficulty assembling parts.	Parts misaligned; incorrect hardware.	Refer to assembly diagrams. Ensure correct bolts are used for each connection. Do not force parts.
Squeaking noise during use.	Friction between metal parts.	Apply a small amount of silicone lubricant to the spring hook or any moving joints.
Hammock chair hangs too low/high.	Chain length not adjusted.	Adjust the carabiner to a different link on the steel chain to achieve desired height.

If the problem persists after attempting these solutions, please contact Elevon customer support for further assistance.

8. Specifications

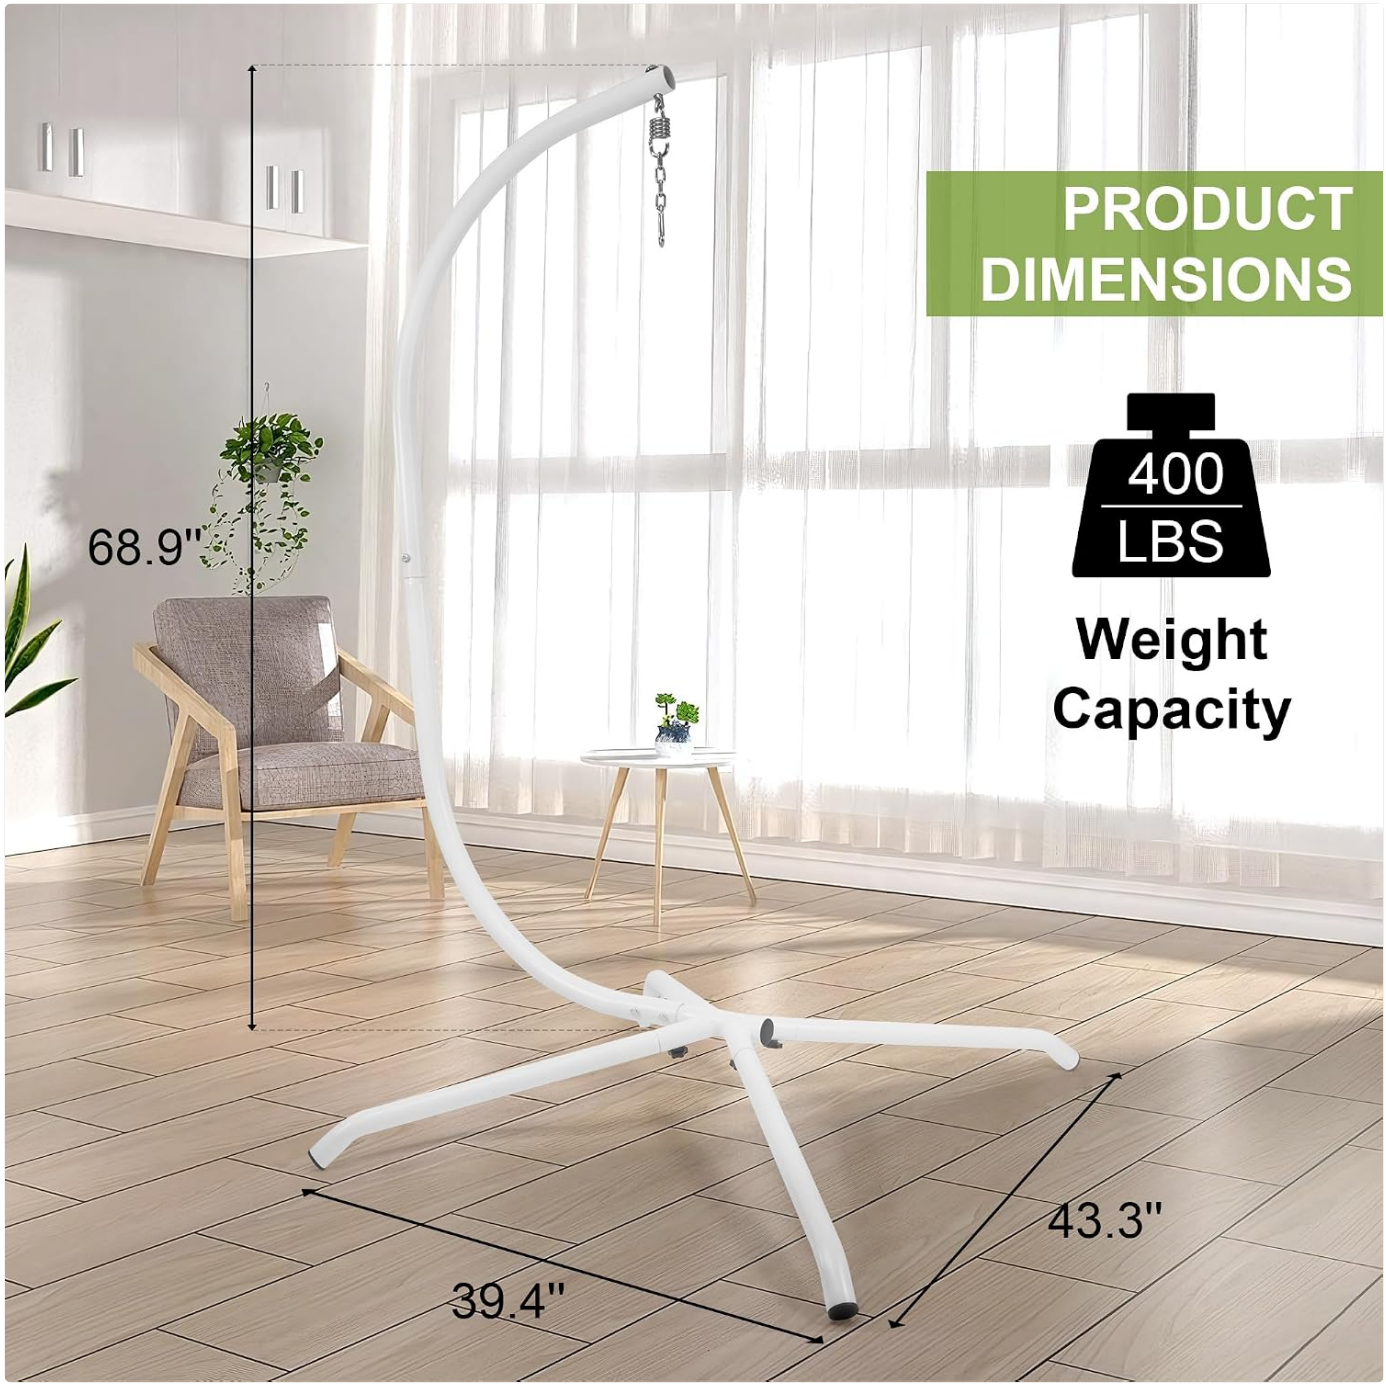


Figure 8.1: Product Dimensions and Weight Capacity.

Feature	Detail
Model Number	QD-HAMMOCKSTAND-C-WT
Color	White
Material	Powder-coated Steel
Product Dimensions (L x W)	43.3" x 39.4" (110 cm x 100 cm)
Height	Approx. 68.9" (175 cm)
Item Weight	36.8 pounds (16.7 kg)
Weight Capacity	400 lbs (181 kg)

Feature	Detail
Seating Capacity	1 Person
UPC	739768670735

9. Warranty and Support

Elevon is committed to providing high-quality products. For any questions, concerns, or support needs regarding your Hammock Chair Stand, please contact Elevon customer support. Please have your model number (QD-HAMMOCKSTAND-C-WT) and purchase information ready when contacting support.
Contact information can typically be found on the retailer's website or on the product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question