

[Manuals.plus](#) /

› [TOSHIBA](#) /

› TOSHIBA Drum-Type Washing Machine TW-84GS4L User Manual

TOSHIBA TW-84GS4L

TOSHIBA Drum-Type Washing Machine TW-84GS4L User Manual

Model: TW-84GS4L

[Instructions](#) [Maintenance](#) [Introduction](#) [Setup](#) [Operating](#)
[Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your TOSHIBA TW-84GS4L drum-type washing machine. Please read it thoroughly before operation and keep it for future reference. This appliance features advanced washing technologies such as Antibacterial Ultrafine Bubble Wash and Hot Water Antibacterial Ultrafine Bubble Wash, along with efficient heater drying and a compact design.



Figure 1: TOSHIBA TW-84GS4L Drum-Type Washing Machine (Morning White).

2. SETUP

2.1. Unboxing and Initial Placement

Carefully remove the washing machine from its packaging. Ensure all packing materials are removed before installation. Place the unit on a flat, stable surface. Verify that the installation area has sufficient space for the appliance and its door to open fully.

2.2. Installation Requirements and Space Confirmation

Before installation, confirm that the installation space meets the required dimensions. Adequate clearance is necessary for proper ventilation and door operation.

商品寸法+10cm以上の幅が必要です。

《搬入における確認項目》


※段差やコーナー箇所があり、直線ではない場合、+10cm以上の幅が必要となります。
※手すり・照明・装飾物などがある場合、そちらから+10cmの幅が必要となります。

〈商品の寸法〉




〈玄関の高さ〉

商品寸法+10cm

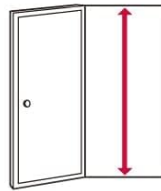


〈玄関の幅〉

商品寸法+10cm

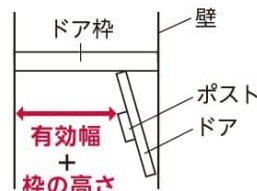


〈廊下の幅〉

商品寸法+10cm

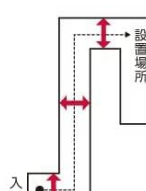


〈エレベータの幅〉

商品寸法+10cm

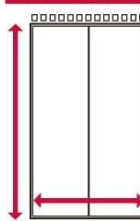


〈階段の幅〉

商品寸法+10cm

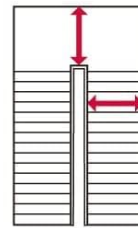


《設置における確認項目》

・必要なスペースは商品によって異なるため、詳細はメーカーページなどでご確認ください。
・洗濯機の設置時にはドアを開閉するため前面のスペース確保が必要となります。

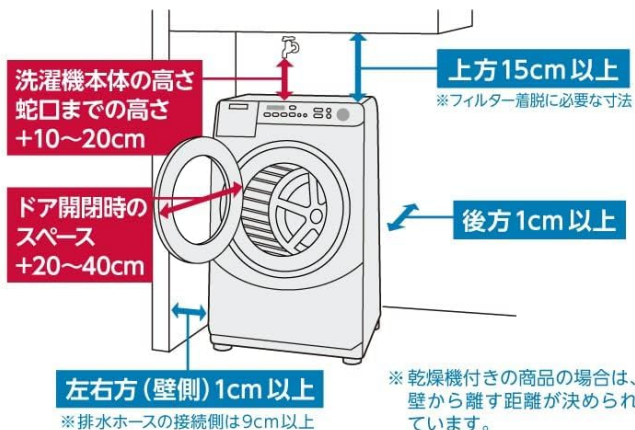

防水パンの有無と内側サイズをチェック

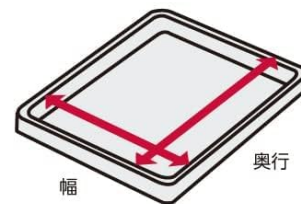

※排水エルボ・足台の有無と排水口位置によって、追加費用がかかることがあります。

Figure 2: Installation space requirements. Ensure at least 10cm extra width for product entry, and sufficient space for door opening (20-40cm) and top clearance (15cm).

- **Product Dimensions:** Refer to the specifications section for exact measurements.
- **Doorway/Stair Clearance:** For smooth transport, ensure doorways and stairs have at least 10cm more width than the product.
- **Installation Space:** Allow at least 1cm clearance on the left/right sides, 15cm above (for filter access), and 1cm behind the unit.
- **Drain Pan:** Check the size and position of your drain pan and drain outlet. Additional costs may apply depending on the drain hose connection.

2.3. Connecting Water and Power

Connect the water supply hose to the water tap and the washing machine. Ensure a secure connection to prevent leaks. Plug the power cord into a grounded electrical outlet. For detailed connection steps, refer to the included instruction manual (paper version).

家電・家具 設置回収サービス

※Amazon.co.jpが販売、発送する商品のみ

STEP 1

カートに入れてレジに進み、お届け日時選択ページで配送オプションと配達日時を選択してください。

※購入前に搬入・設置における確認項目もよくご確認ください。
※ご注文確定後は、サービスの追加や変更ができません。

STEP 2

配達前日または当日朝までに配送会社から確認の電話をします。

STEP 3

リサイクル家電を回収します。

※旧品回収を含むサービスを選択された場合。
※家電リサイクル料金は当日現金で別途お支払いが必要です。

STEP 4

設置・接続を行います。

※設置を含むサービスを選択された場合。

STEP 5

梱包材を回収します。

洗濯機

開梱・電源、アース線、上排水管の取り付け・給排水テスト
水漏れ確認(上水管)・排水確認・梱包材の回収

Figure 3: Overview of installation and recycling service steps. This includes connecting power, water, and drain hoses, and performing a water leak test.

3. OPERATING INSTRUCTIONS

3.1. Basic Washing Cycle

1. Load laundry into the drum, ensuring not to overload.
2. Add detergent and fabric softener to the designated compartments.
3. Close the door securely.
4. Select your desired wash program (e.g., Standard, Quick).
5. Press the Start button. The machine will automatically detect the load and proceed with the wash cycle.

3.2. Advanced Washing Technologies

This washing machine incorporates advanced features for enhanced cleaning and hygiene.

3.2.1. Antibacterial Ultrafine Bubble Wash

This technology uses nano-sized bubbles to penetrate deep into fabric fibers, effectively removing sebum stains and preventing yellowing. No special settings are required; it works with your regular wash cycle.



抗菌 ウルトラファインバブル洗淨

ワンシーズン着用したワイシャツを保管。1年間の黄ばみ比較

洗剤のチカラを引き出し、繊維の奥の汚れを落とす！

水道水での洗淨で保管	ウルトラファインバブル洗淨で保管
● 週1回6カ月着用し、6カ月相当保管した場合の水道水での洗淨と抗菌ウルトラファインバブル洗淨の標準コースで5kg洗濯時の比較。 ● 衣類の量・汚れ・洗剤の種類などによって効果は異なります。(東芝ライフスタイル株式会社調べ)	
皮脂汚れを落として黄ばみ予防	
冷たい水でも洗淨力を発揮	
● 「ファインバブル」、 「ウルトラファインバブル」、 「FINE BUBBLE」 は、一般社団法人ファインバブル産業会の登録商標です。	

Figure 4: Ultrafine Bubble Wash technology. It enhances detergent power to remove deep-seated dirt and prevent odors.

3.2.2. Hot Water Antibacterial Ultrafine Bubble Wash

Utilizes hot water to boost detergent effectiveness, tackling stubborn stains and providing antibacterial action. Various temperature settings are available:

- **Approx. 60°C Sterilization:** For sterilizing white clothes (up to 2kg load).
- **Approx. 40°C Soak:** Removes yellowing (up to 3kg load).
- **Approx. 40°C Wash:** Removes stubborn dirt embedded in fibers (up to 4kg load).
- **Approx. 30°C Delicate Wash:** Gentle wash for delicate items (up to 2kg load).
- **Approx. 15°C Wash:** Maintains washing power even at low temperatures (up to 8kg load).

温水 抗菌ウルトラファインバブル洗浄

温水とウルトラファインバブルの力で洗浄。
食べこぼしや黄ばみなどガンコな汚れを落とします。

温水専用ヒーターで
「お湯」にして洗浄！

約60℃除菌 ※1
(洗濯容量2kgまで)

白物衣類を
除菌※1して清潔にする。

●約60℃除菌では白物の衣類だけを洗濯してください。●風呂水を使用されたとき、除菌効果が得られない場合があります。●マスクは洗濯ネットに入れて洗濯してください。【以下のものは洗濯できません】●色柄ものやプリントがついているもの。●シワがつきやすいもの。●ワイシャツなど芯地が入っているもの。●伸縮性のある（ゴム素材がつかわれている）ものなど。



(イメージ図)

約40℃つけおき (洗濯容量3kgまで)

ついてしまった黄ばみを落とす。

約40℃洗浄 (洗濯容量4kgまで)

繊維の奥に染み込んだしつこい汚れを落とす。

約30℃おしゃれ着洗浄
(洗濯容量2kgまで)

やさしい水流でも汚れをしっかりと落とす。

約15℃洗浄 (洗濯容量8kgまで)

気温が低い時でもいつもの洗浄力で洗える。

※4【除菌について】●試験依頼先：一般財団法人日本食品分析センター ●試験方法：菌付着布の菌の減少率測定。●除菌方法：「60℃除菌」設定のコース運転による。●対象部分：洗濯槽内の衣類。●試験結果：菌の減少率99%以上。

【約30℃/約40℃をお使いの際は】衣類を傷めたり、色移りしやすいため、衣類の取り扱い表示をご確認ください。色落ちしやすいものは個別に洗ってください。シワがつきやすいものは洗わないでください。

Figure 5: Hot Water Ultrafine Bubble Wash options for various cleaning needs.

3.3. Drying Functions

The machine offers various drying options to suit your needs, utilizing a heater-based water-cooled dehumidification system.

- **Low-Temperature Drying Mode:** Reduces damage to clothes during drying.
- **Blanket Course:** Allows washing and drying of blankets.
- **Speed Course:** For quick drying when time is limited.
- **Wool Course:** Gentle warm water wash for wool items.
- **Sterilization/Deodorization Course:** For items that cannot be washed with water.

多彩なコース&乾燥機能

お悩みに合わせて選べる

- ・約40℃の温水でやさしく洗うウールコース
- ・水洗いできないものを清潔に保つ除菌消臭^{※1※2}コース
- ・時間がない時にさっと洗えるスピードコース



乾燥機能で生活にゆとりを

- ・乾燥による衣類へのダメージを軽減する低温乾燥モード
- ・毛布を洗濯～乾燥までできる毛布コース

乾燥最大 4kg



※1【除菌について】●試験依頼先：一般財団法人日本食品分析センター●試験方法：菌付着布の菌の減少率測定。
●除菌方法：「除菌消臭」コース運転による。●対象部分：洗濯槽内の衣類。●試験結果：菌の減少率99%以上。
※2【消臭について】●試験方法：東芝ライフスタイル株式会社にてあらかじめタバコ臭を付着させ、「除菌消臭」コースで運転させた試験布を、一般財団法人東海技術センターにて、臭気判定士による官能試験で評価。●消臭方法：「除菌消臭」コース運転による。●対象部分：洗濯槽内の衣類。●試験結果：臭気濃度が初期に対し1/10以下。

Figure 6: Diverse wash and dry courses for convenience and garment care.

4. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your washing machine.

4.1. Drum Cleaning

The machine features an automatic cleaning function and mold protection. Use the dedicated drum cleaning cycle periodically to prevent mold and odors. Refer to the main instruction manual for specific steps.

4.2. Filter Cleaning

Clean the lint filter regularly to maintain drying efficiency. The filter is typically located near the door or at the bottom front of the machine. Remove accumulated lint and rinse the filter under running water.

4.3. Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

5. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, water supply off.	Check power connection, ensure door is latched, open water tap.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, remove transport bolts (if applicable), redistribute laundry.
Water leakage	Hoses not connected securely, damaged hose.	Check all hose connections, replace damaged hoses.
Clothes not drying properly	Lint filter clogged, overloaded dryer, incorrect program selected.	Clean lint filter, reduce load size, select appropriate drying program.


For other issues or if the problem persists, please consult the full instruction manual or contact customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	TOSHIBA
Model Number	TW-84GS4L
Color	Morning White
Washing Capacity	8 kg
Drying Capacity	4 kg
Product Dimensions (D x W x H)	63.3 cm x 64 cm x 97.5 cm
Body Width/Depth (excluding hoses)	599 mm
Drum Material	Stainless Steel
Special Features	Inverter Control, Child Lock, Antibacterial Ultrafine Bubble Wash, Hot Water Wash, Heater Drying, Auto Cleaning, Mold Protect
Wash Cycles	9
Dry Cycles	5
Operating Mode	Automatic
Country of Origin	China

Feature	Detail
Included Components	Instruction Manual

寸法図

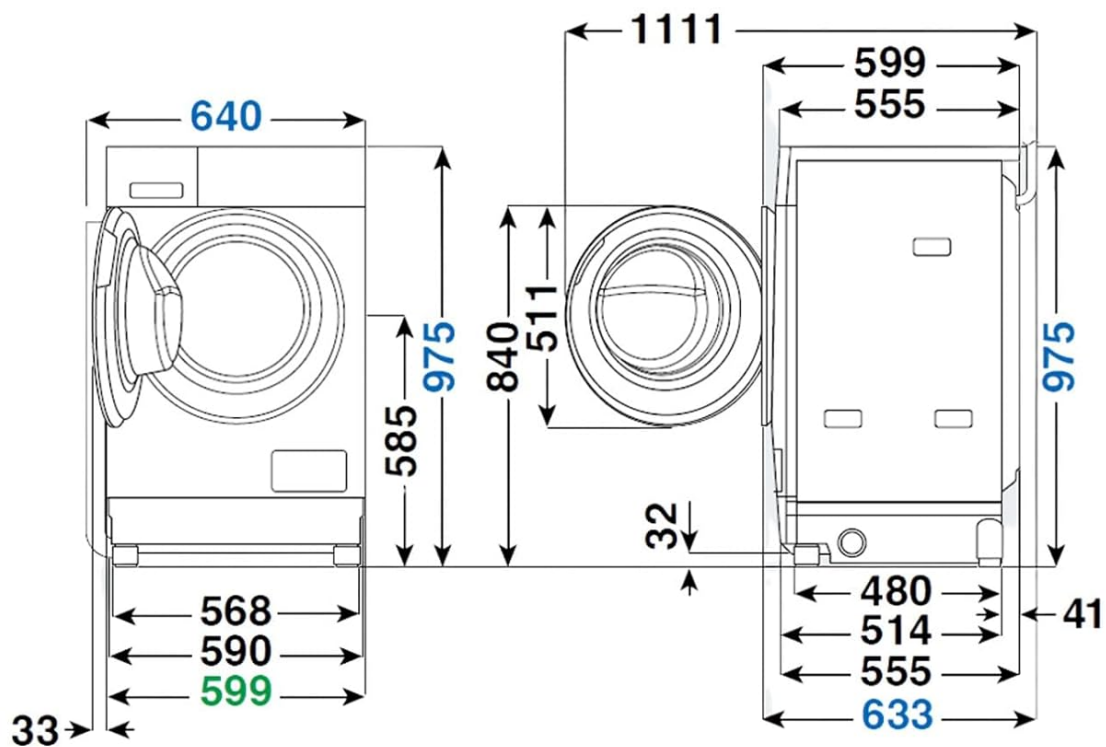

- 給水ホースの長さは0.8mです。
- ビルトイン対応ではありません。

Figure 7: Detailed dimension diagram. Note: Water supply hose length is 0.8m. Not compatible with built-in installations.

7. WARRANTY AND SUPPORT

7.1. Warranty Information

This product comes with a **one-year warranty** from the date of delivery. The delivery note is required for warranty claims. The warranty is valid only for use within Japan.

7.2. Customer Support

For technical assistance, service requests, or further inquiries, please refer to the contact information provided in your physical instruction manual or visit the official TOSHIBA website.

For additional information and resources, you may visit the [TOSHIBA Brand Store on Amazon.co.jp](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question