Bellemave FST00231-TL-AB1

Bellemave Twin XL Over Twin XL Metal Bunk Bed Instruction Manual

Model: FST00231-TL-AB1

Introduction

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Bellemave Twin XL Over Twin XL Metal Bunk Bed, Model FST00231-TL-AB1. Please read all instructions carefully before assembly and use to ensure safe and proper operation.

For assistance, please refer to the support section or contact customer service.

Important Safety Information

- **Read all instructions:** Follow all assembly and usage instructions carefully.
- **Adult assembly required:** This product requires adult assembly.
- **Maximum weight capacity:** Do not exceed the recommended weight capacity for each bunk. Consult product packaging or Bellemave support for specific limits.
- **Guardrails:** Ensure guardrails are properly installed and secured on the upper bunk to prevent falls.
- **Ladder safety:** Always use the provided ladder for access to the upper bunk. Do not jump on or off the bunk bed.
- **Mattress size:** Use only Twin XL mattresses for both bunks to ensure proper fit and safety.
- **Ventilation:** Ensure adequate ventilation around the bunk bed.
- **No horseplay:** Prohibit horseplay on or under the bed.
- **Regular checks:** Periodically check all connections and fasteners to ensure they remain tight.

Setup and Assembly

Your Bellemave bunk bed is designed for straightforward assembly. It comes with detailed instructions and numbered parts to guide you through each step.

Before You Begin:

- **Unpack all components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface (e.g., a rug or blanket) to prevent scratches.
- **Verify all parts:** Compare the contents with the provided parts list in your package to ensure all pieces are present. If any parts are missing or damaged, do not proceed with assembly and contact customer support.
- **Tools required:** Typically, an Allen wrench (hex key) is included. A Phillips head screwdriver may also be needed.

Assembly Steps:

1. **Assemble the bed frames:** Begin by connecting the main frame components for both the upper and lower bunks according to the numbered instructions.
2. **Install slats:** Securely attach the metal slats to both bed frames. The plastic stoppers are designed to fix the slats firmly and prevent noise.
3. **Attach guardrails:** Install the guardrails on the upper bunk, ensuring they are tightly fastened for safety.
4. **Attach ladder:** Securely attach the ladder to the designated side of the bunk bed.
5. **Final tightening:** Once all components are assembled, go back and tighten all screws and bolts to ensure stability. Do not overtighten.

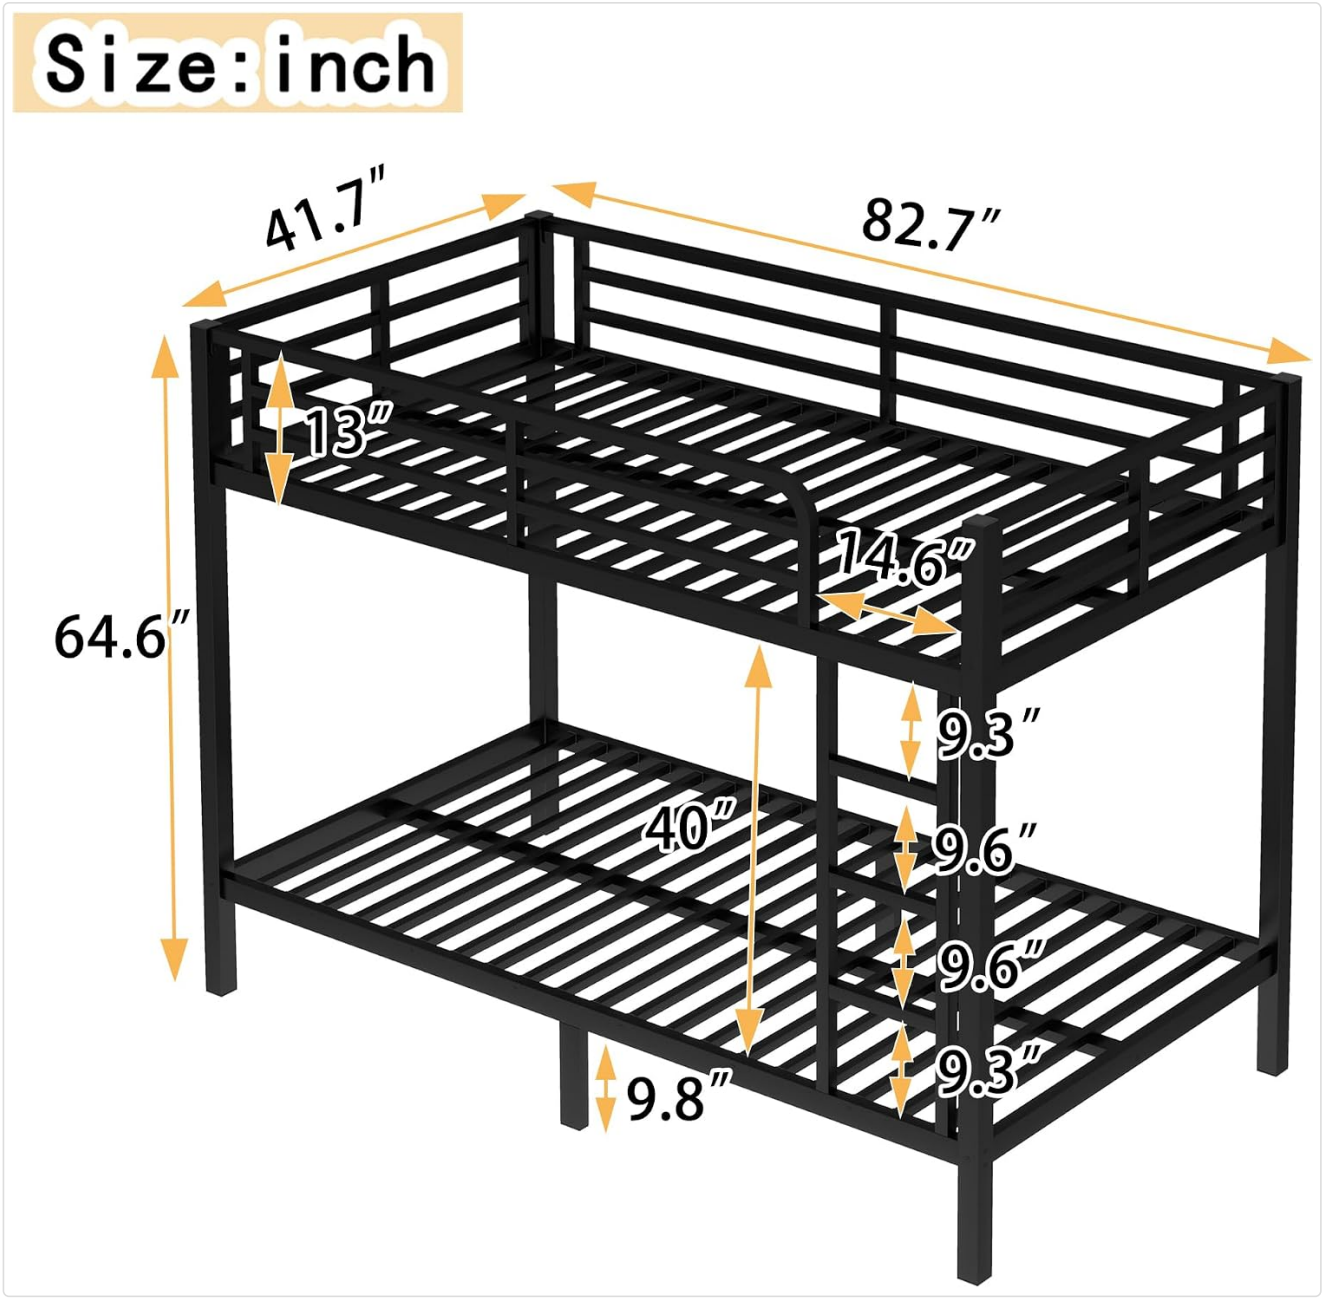


Figure 1: Dimensions diagram of the Bellemave Twin XL Over Twin XL Bunk Bed. This image illustrates the overall length (82.7 inches), width (41.7 inches), and height (64.6 inches) of the assembled bunk bed, along with specific measurements for the ladder steps and under-bed clearance.

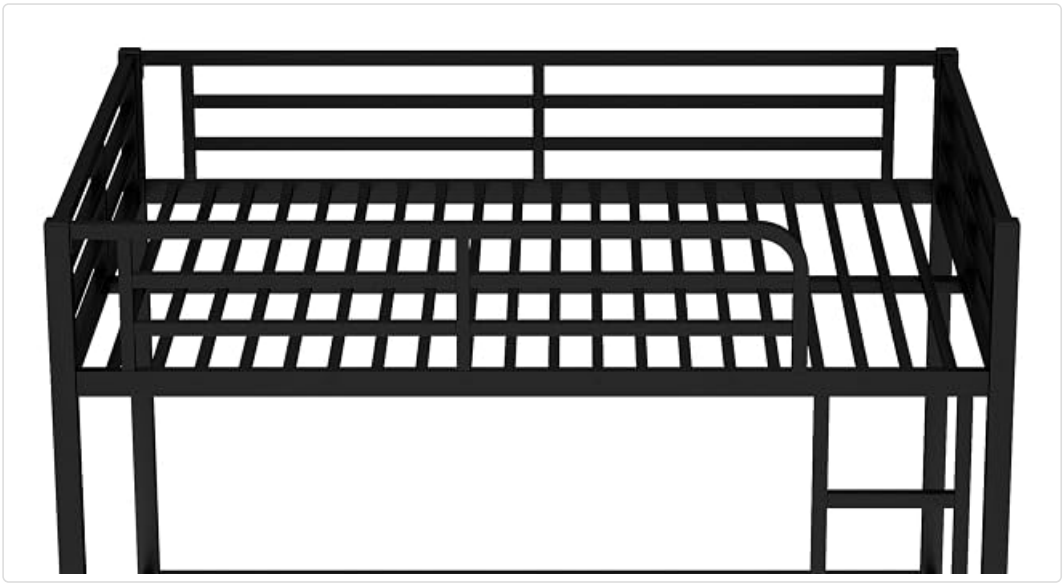


Figure 2: Close-up view of the upper bunk bed frame, highlighting the integrated guardrails and metal slat support system. This detail shows the robust construction designed for safety and mattress support.

Operating Instructions

This bunk bed is designed for sleeping and resting. Adhere to the following guidelines for safe use:

- **Upper Bunk Use:** The upper bunk is intended for use by individuals who can safely climb and descend the ladder.
- **Ladder Usage:** Always use the provided ladder to access the upper bunk. Ensure hands and feet are clean and dry for a secure grip.
- **Under-Bed Storage:** The 9.8-inch clearance under the bed can be used for storage. Do not obstruct the area with items that could impede air circulation or create a hazard.
- **Noise-Free Design:** The plastic stoppers on the slats are designed to minimize noise. Avoid excessive movement that could dislodge these stoppers or cause unnecessary noise.



Figure 3: An image of the fully assembled Bellemave Twin XL Over Twin XL Metal Bunk Bed in a room setting. This shows the bed's overall appearance and how it fits into a living space, demonstrating its functional design.

Maintenance

Proper maintenance will extend the life and ensure the safety of your bunk bed.

- **Cleaning:** Wipe down the metal frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the electrostatic powder coating.
- **Fastener Checks:** Periodically (e.g., monthly or quarterly) inspect all bolts, screws, and connections. Tighten any that have become loose. Do not overtighten.
- **Slat Inspection:** Ensure all metal slats are securely in place and the plastic stoppers are functioning correctly to prevent noise and provide stable mattress support.
- **Environmental Conditions:** Avoid exposing the bed to extreme humidity or direct sunlight for prolonged periods, which could affect the finish.

Troubleshooting

If you encounter any issues with your bunk bed, refer to the following common solutions:

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose fasteners (bolts/screws).	Inspect and tighten all bolts and screws. Ensure all connections are secure.
Squeaking or creaking noises.	Loose slats or fasteners; plastic stoppers dislodged.	Check all slat connections and ensure plastic stoppers are correctly seated. Tighten any loose fasteners.
Missing parts during assembly.	Packaging error or lost during unpacking.	Review the parts list. Contact Bellemave customer support for replacement parts.
Difficulty assembling.	Instructions not followed correctly; parts misaligned.	Re-read the assembly instructions carefully. Ensure parts are oriented correctly before tightening. Do not force parts together.

Specifications

- **Model:** FST00231-TL-AB1
- **Brand:** Bellemave
- **Type:** Twin XL Over Twin XL Bunk Bed
- **Material:** Metal
- **Color:** Black
- **Finish Type:** Lacquered
- **Product Dimensions (L x W x H):** 82.7" x 41.7" x 64.6"
- **Item Weight:** 37 Pounds
- **Number of Slats:** 40 (for both bunks combined)
- **Under Bed Clearance:** 9.8 inches
- **Included Components:** Guardrails, Ladders, Slats

- **Assembly Required:** Yes
- **UPC:** 197793820561

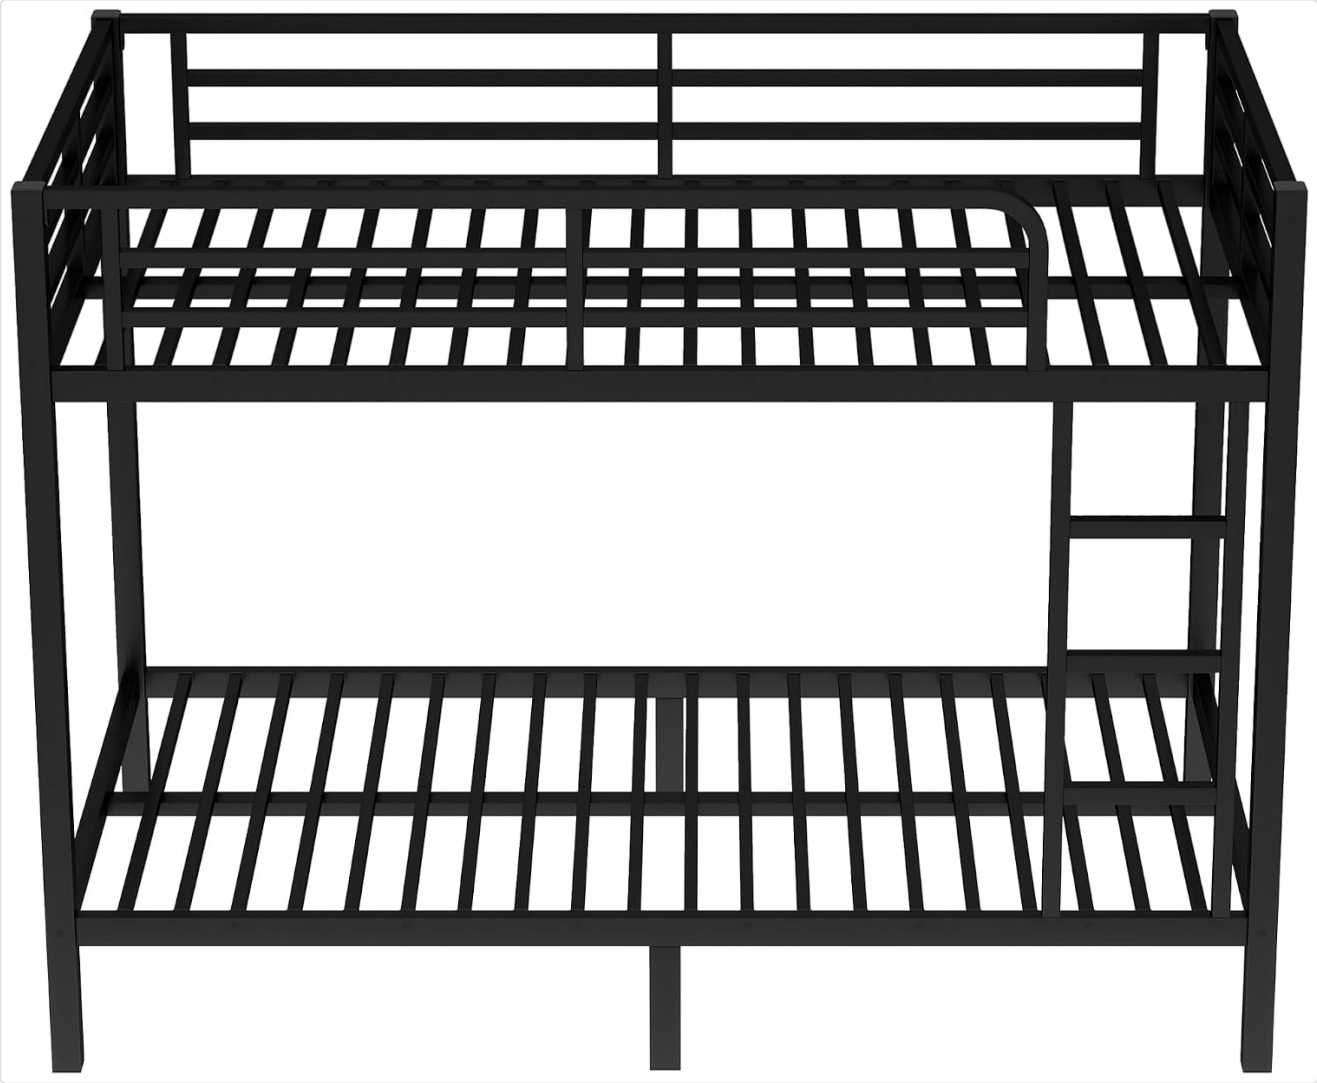


Figure 4: A detailed view of the Bellemave bunk bed's metal slat system and frame construction. This image demonstrates the robust support structure for mattresses and the overall durability of the bed.

Warranty Information

Bellemave products are manufactured to high-quality standards. For specific warranty details regarding your Twin XL Over Twin XL Metal Bunk Bed, please refer to the warranty card included with your purchase or visit the official Bellemave website. Warranty coverage typically includes manufacturing defects in materials and workmanship under normal use.

Optional protection plans may be available for purchase separately. Please consult the retailer for details on extended protection options.

Customer Support

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Bellemave customer support.

- **Online Support:** Visit the Bellemave Store on Amazon for product information and contact options.
- **Seller Contact:** For issues related to your purchase, you may contact the seller, Belle-Direct, through your Amazon order history.

Please have your model number (FST00231-TL-AB1) and purchase date available when contacting support.

© 2025 Bellemave. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question