**Arecovas AR-AF001**

# Arecovas 4-in-1 Portable Glass Air Fryer

**Model: AR-AF001**

## Introduction

Thank you for choosing the Arecovas 4-in-1 Portable Glass Air Fryer. This manual provides essential information for the safe and efficient operation of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.

This versatile appliance combines four functions: Air Fry, Bake, Recrisp, and Max Crisp, offering a healthy alternative to traditional frying with up to 95% less oil. Its innovative glass containers provide a 360° view of your food as it cooks, ensuring perfect results every time.




*Figure 1: Arecovas 4-in-1 Portable Glass Air Fryer with dual containers.*

## Product Features

- **4-in-1 Versatility:** Offers Bake, Recrisp, Max Crisp, and Air Fry functions for diverse cooking needs.
- **Precise Temperature Control:** Adjustable temperature range from 140°F to 400°F for optimal cooking.
- **Max Crisp Technology:** Rapidly heats to 400°F for exceptionally crispy results.
- **Dual Glass Containers:** Includes a 4.2QT container for larger meals and a portable 1.6QT container for smaller portions. Both are made from heat-resistant, explosion-proof glass.
- **360° Visual Cooking:** Transparent glass basket allows real-time monitoring of food without opening the lid.
- **Easy Maintenance:** All components, except the main heating pod, are dishwasher-safe. The detachable design simplifies cleaning.
- **Space-Saving Design:** Stackable parts ensure compact storage in your kitchen.
- **Healthy Cooking:** Achieves deep-fried crispiness with up to 95% less oil.




*Figure 2: Overview of the 4-in-1 cooking functions.*

## What's in the Box

Your Arecovas Air Fryer package includes the following components:

- Top Heating Element (Main Unit)
- Large Glass Container (4.2QT)
- Small Glass Container (1.6QT)
- Crisper Plates (one for each container)
- Storage Lids (one for each container)
- Removable Adapter (for use with the large container)
- User Manual

- Recipe Book




*Figure 3: All components included in the package.*

## Setup Instructions

1. **Unpack:** Carefully remove all components from the packaging. Remove any plastic films or protective materials.
2. **Clean:** Before first use, wash the glass containers, crisper plates, and storage lids with warm, soapy water. Rinse thoroughly and dry completely. The main heating unit should be wiped with a damp cloth.
3. **Assemble:** Place the desired glass container (4.2QT or 1.6QT) onto a stable, heat-resistant surface. Insert the corresponding crisper plate into the bottom of the glass container.
4. **Attach Heating Unit:** If using the 4.2QT container, place the removable adapter on top of the container. Then, carefully place the top heating element unit onto the container (or adapter for the large container), ensuring it is securely seated.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The display will illuminate, indicating the unit is ready for operation.

Your browser does not support the video tag.

*Video 1: Arecovas Portable Glass Air Fryer - Product overview and assembly demonstration.*

## Operating Instructions

1. **Prepare Food:** Place your food directly onto the crisper plate inside the glass container. Do not overfill.
2. **Select Function:** Use the 'MENU' button on the digital touch control panel to cycle through the available functions: BAKE, RECRISP, MAX CRISP, and AIR FRY.
3. **Set Temperature and Time:** Use the '+' and '-' buttons to adjust the temperature (140°F to 400°F) and cooking time (1-60 minutes) according to your recipe or desired results.
4. **Start Cooking:** Press the 'START/STOP' button to begin the cooking process. The unit will automatically preheat if necessary.
5. **Intelligent Pause:** If you lift the heating unit during cooking, the appliance will automatically pause. The screen will

display 'OPEN'. Close the lid securely to resume cooking without resetting.

6. **End of Cooking:** The appliance will beep when cooking is complete and automatically enter standby mode after 60 seconds of inactivity.




*Figure 4: Digital touch controls for easy operation.*

## Maintenance and Cleaning

Proper cleaning and maintenance ensure the longevity and optimal performance of your air fryer.

- **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Glass Containers & Crisper Plates:** The glass containers and crisper plates are dishwasher-safe. For stubborn food residue, soak in warm, soapy water before washing. Avoid abrasive cleaners or scouring pads that could scratch the glass.
- **Storage Lids:** The storage lids are also dishwasher-safe.
- **Heating Unit:** Wipe the exterior of the top heating element unit with a damp cloth. Do not immerse the heating unit in water or any other liquid. Ensure no water enters the internal components.
- **Storage:** The detachable design allows for stackable storage, saving kitchen and cabinet space. Use the provided lids to store cooked food directly in the glass containers in the refrigerator or freezer.




*Figure 5: Dishwasher-safe components and compact storage.*

## Troubleshooting

If you encounter any issues with your Arecovas Air Fryer, please refer to the following common troubleshooting tips:

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the top heating unit is correctly seated on the glass container. The unit has a safety switch that prevents operation if not properly assembled.
- **Food Not Cooking Evenly:** Ensure food is not overcrowded in the basket. For best results, shake or flip food halfway through the cooking cycle. Adjust temperature and time as needed.
- **Smoke Emitting from Appliance:** A small amount of smoke during initial use is normal. If excessive smoke occurs, unplug the unit immediately. Check for food residue or grease buildup on the heating element or in the basket. Clean thoroughly before next use.

- **Food Not Crispy:** Increase cooking time or temperature slightly. Ensure the crisper plate is in place to allow for proper air circulation.

## Specifications

| Feature | Specification |
|---|---|
| Model Name | AR-AF001 |
| Power Supply | AC120V, 60Hz |
| Rated Power | 1500W |
| Adjustable Temp Range | 140-400°F |
| Adjustable Time Setting | 1-60 minutes |
| Construction Materials | Stainless Steel & PP & Borosilicate Glass |
| Outline Dimension | 10.6"D x 11.6"W x 10.7"H |
| Product Weight | 12.68 lbs / 5.75 kg |
| Capacity | 4.2 Quarts (Large), 1.6 Quarts (Small) |
| Control Method | Touch Control |
| Dishwasher Safe Parts | Yes (except heating parts) |

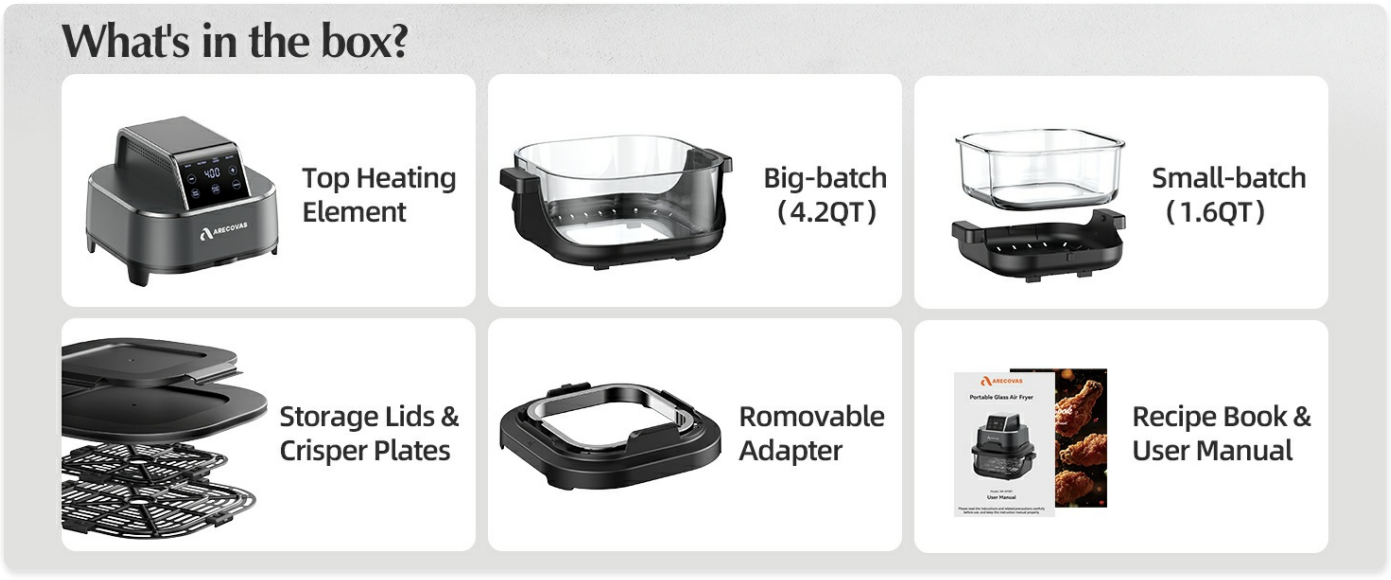



*Figure 6: Detailed product specifications.*

## Warranty and Support

Arecovas provides a 1-year warranty for this product. For warranty claims, technical support, or any inquiries, please

contact Arecovas customer service directly. Refer to the contact information provided in your product packaging or visit the official Arecovas website.

**Return Policy:** This product is eligible for a refund/replacement within 2026 days from the date of purchase, subject to Amazon's return policy.

© 2025 Arecovas. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question