Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hoorola CS05

Hoorola 5K 80MP Digital Camera (Model CS05) User Manual

Brand: **Hoorola** | Model: **CS05**

1. Safety Information

- **Battery Safety:** Use only specified batteries. Do not disassemble, crush, or expose batteries to extreme temperatures. Dispose of batteries properly.
- **Water Resistance:** This camera is *not* water resistant. Avoid exposure to water or high humidity.
- **Handling:** Avoid dropping the camera or subjecting it to strong impacts. Keep out of reach of small children.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use harsh chemicals.

2. Package Contents

Verify that all items are present in your package:

- Hoorola 5K 80MP Digital Camera (x1)
- Rechargeable Batteries (x2)
- 32GB SD Card (x1)
- Type-C USB Cable (x1)
- Storage Bag (x1)
- Cleaning Cloth (x1)
- Lanyard (x1)
- User Manual (x1)



Image: The complete package contents including the camera, two batteries, 32GB SD card, Type-C cable, storage bag, cleaning cloth, and lanyard.

3. Camera Overview

Front View



Image: Front view of the Hoorola digital camera, showing the main lens, front screen, and flash.

Rear View and Controls



Image: Rear view of the camera displaying the main screen and control buttons for navigation, zoom, and menu access.

Side Views

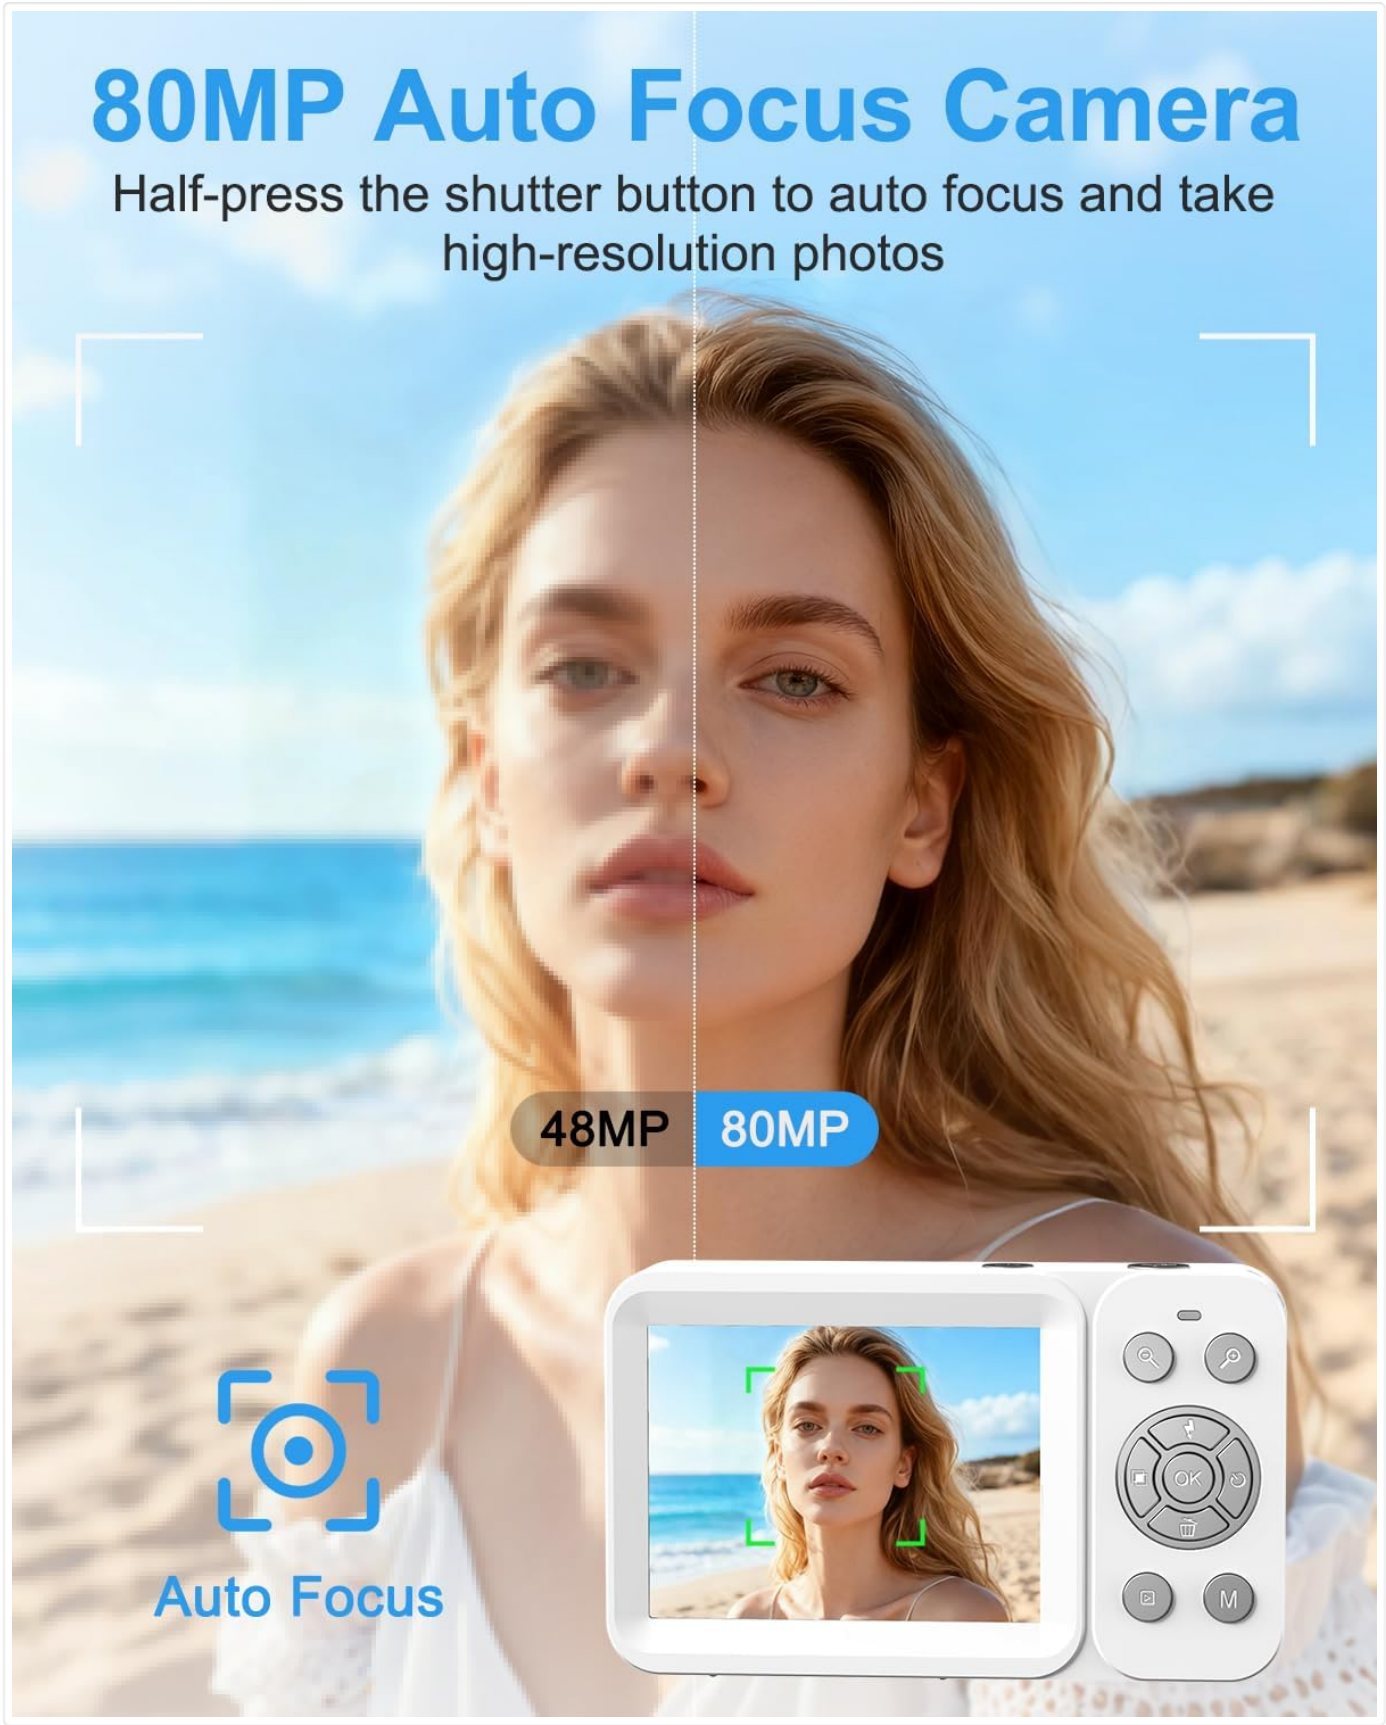


Image: Side view of the camera, highlighting the USB-C port and other connection points.

4. Setup

4.1. Inserting the Battery

1. Open the battery compartment cover on the bottom of the camera.
2. Insert the rechargeable battery, ensuring the correct orientation according to the diagram inside the compartment.
3. Close the battery compartment cover securely.

4.2. Inserting the SD Card

1. Locate the SD card slot, usually next to the battery compartment.
2. Insert the 32GB SD card with the metal contacts facing the correct direction until it clicks into place.
3. To remove, gently press the SD card until it pops out.

4.3. Charging the Camera

1. Connect the camera to a power source using the provided Type-C USB cable.
2. The charging indicator light will illuminate. It will turn off or change color when fully charged.
3. The camera can be used while charging.

4.4. Power On/Off

Press and hold the power button for approximately 3 seconds to turn the camera on or off.

5. Operating the Camera

5.1. Taking Photos

1. Turn on the camera.
2. Half-press the shutter button to activate autofocus. A green frame will appear when focus is achieved.
3. Fully press the shutter button to capture the photo.



Image: A visual representation of the camera's auto-focus function, showing a green focus box on a subject.

5.2. Recording Videos

1. Ensure the camera is in video mode (select via the 'M' button or menu).
2. Press the shutter button to start recording. Press again to stop.



Image: The camera's screen displaying a 5K video recording interface with a child and a dog as the subject.

5.3. Dual Screen Function (Selfie Mode)

To switch between the front and rear screens for selfies or vlogging, press and hold the 'OK' button for 3 seconds.

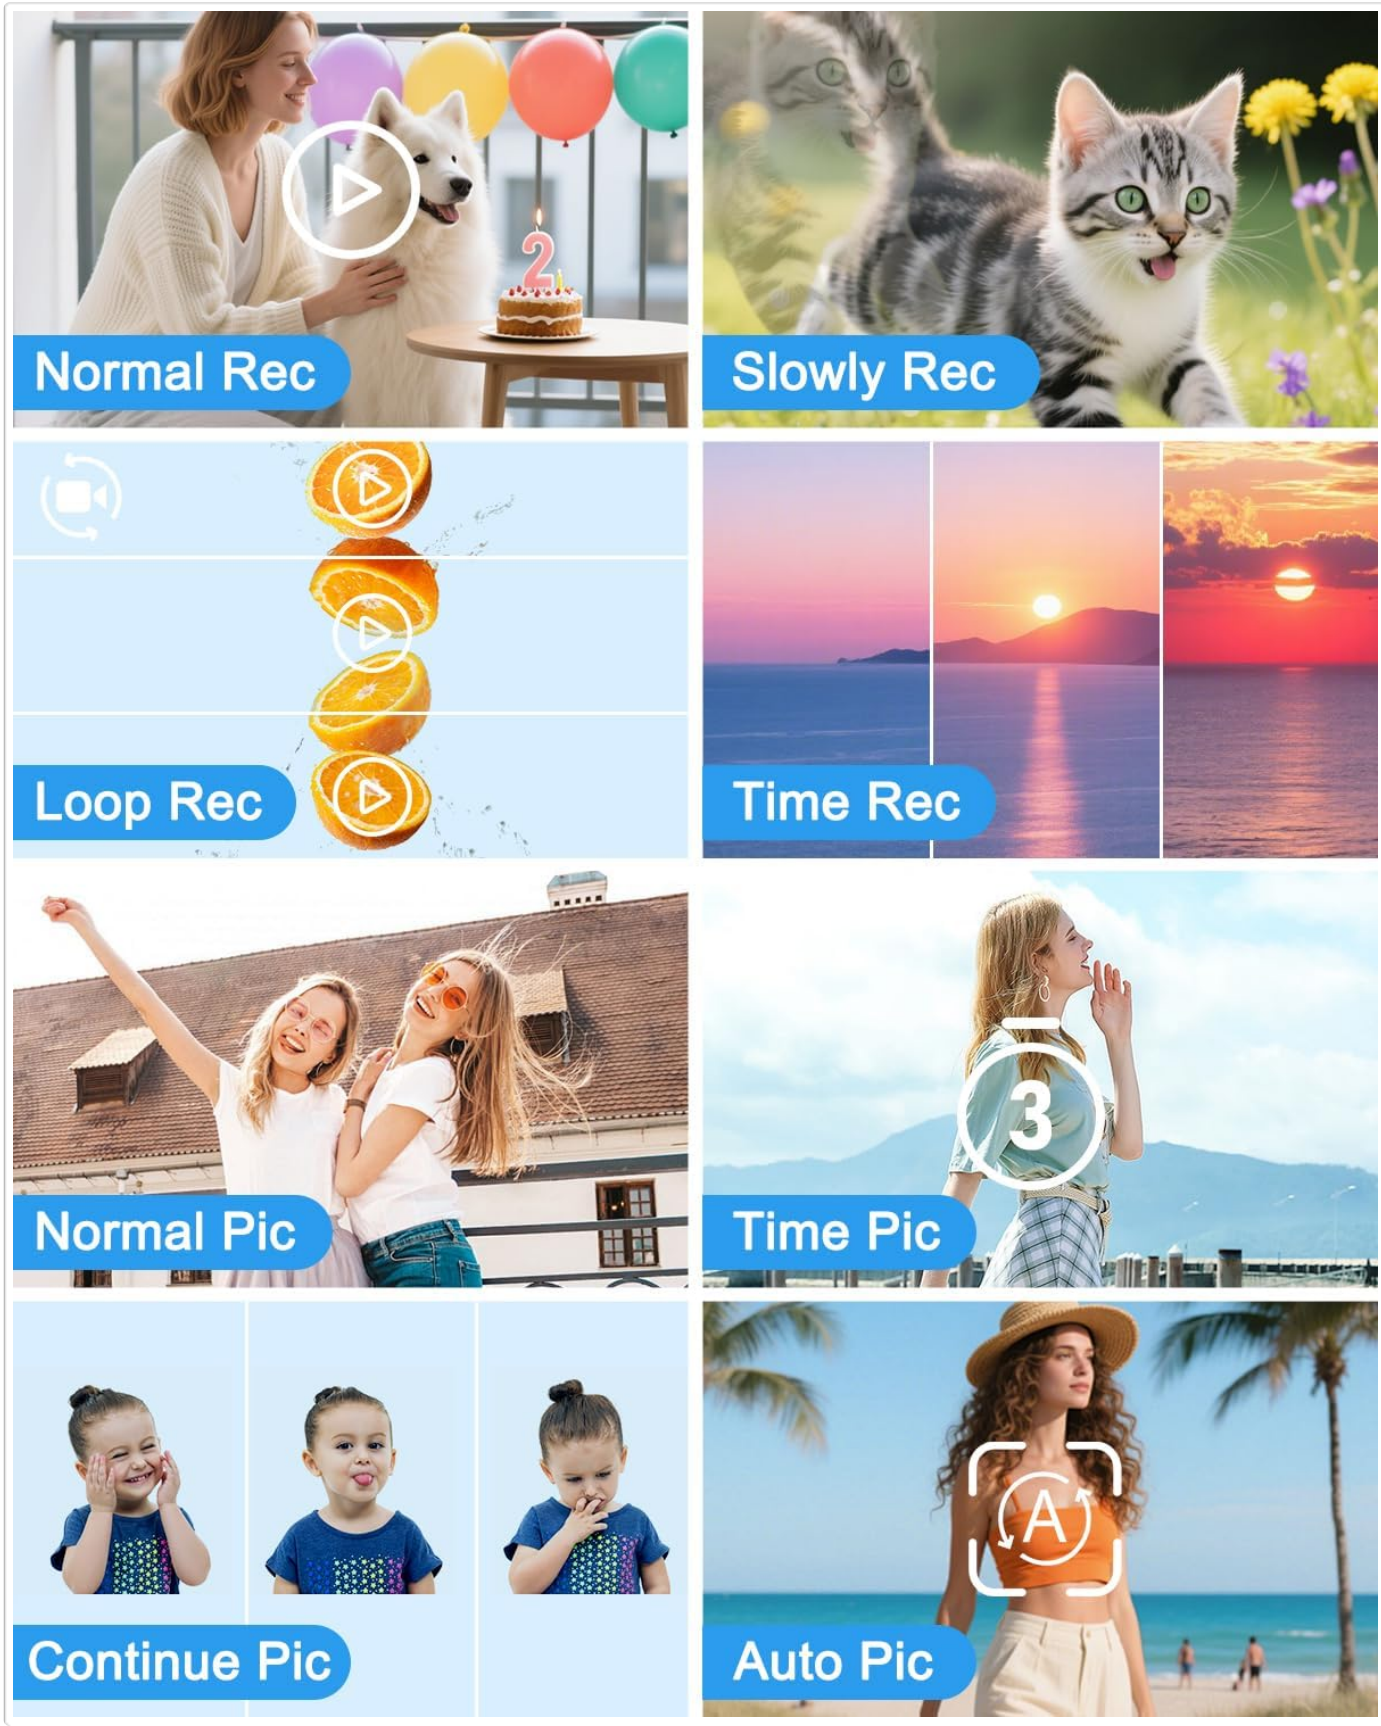


Image: A person holding the camera, demonstrating the dual-screen feature for easy selfie composition.

5.4. Zoom Function

Use the 'Zoom In' and 'Zoom Out' buttons on the camera to adjust the 18X digital zoom.



Image: A person interacting with a dog, illustrating the 18X digital zoom feature to capture distant details.

5.5. Using the Flash

In photo mode, press the 'Up/Flash' button to cycle through flash modes (e.g., Auto Flash, Fill Flash, Flash Off).

5.6. Shooting Modes and Filters

Press the 'M' button to access various shooting modes and filter effects, including:

- Normal Pic, Time Pic, Continue Pic, Auto Pic
- Normal Rec, Slowly Rec, Loop Rec, Time Rec
- Various color filters and effects



Image: A collage demonstrating various photo and video modes such as normal recording, slow motion, loop recording, time-lapse, and different filter effects.

6. File Management

6.1. Playback

Press the Playback button (often indicated by a triangle icon) to view your captured photos and videos. Use the navigation buttons to browse.

6.2. Transferring Files

To transfer files to a computer:

1. Connect the camera to your computer using the Type-C USB cable.
2. The camera should appear as a removable disk drive. Open the drive to access your photos and videos.
3. Alternatively, remove the SD card and use an SD card reader to transfer files directly.



Image: Demonstrates connecting the camera to a computer via USB for file transfer and using it as a webcam.

6.3. Deleting Files

In Playback mode, select the photo or video you wish to delete. Press the 'Delete' button (often indicated by a trash can icon) and confirm.

7. Webcam Functionality

The camera can be used as a webcam for live streaming or video calls:

1. Connect the camera to your computer using the Type-C USB cable.
2. On the camera's screen, select 'PC Camera' or 'Webcam Mode' if prompted.
3. Your computer should recognize the camera as a webcam. Select it as the video input device in your video conferencing or streaming software.

8. Maintenance

8.1. Cleaning

- Use the provided cleaning cloth to gently wipe the camera body and lens.
- For stubborn smudges on the lens, use a specialized lens cleaning solution and cloth.
- Do not spray cleaning solution directly onto the camera.

8.2. Storage

- When not in use, store the camera in its storage bag to protect it from dust and scratches.
- Remove batteries if storing for extended periods to prevent leakage.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

9. Troubleshooting

Issue	Possible Solution
Camera does not power on.	Ensure batteries are fully charged and correctly inserted. Try using the second battery.
Cannot take photos/videos.	Check if the SD card is inserted correctly and has sufficient free space. Format the SD card if necessary (this will erase all data).
Images are blurry.	Ensure the lens is clean. Half-press the shutter button to allow the camera to autofocus before fully pressing to capture. Hold the camera steady.
Flash is not working.	Check flash settings to ensure it's not set to 'Flash Off'.
Camera not recognized by computer.	Ensure the USB cable is securely connected. Try a different USB port or cable. Restart both the camera and computer.

10. Specifications

Feature	Detail
Model Name	CS05
Photo Sensor Technology	CMOS
Effective Still Resolution	80 MP
Video Resolution	5K (2160p)
Digital Zoom	18X
Display Type	LCD (Dual Screen)
Screen Size	2.8 Inches
Auto Focus	Yes (Phase Detection)
Supported File Format	JPEG, MP4
Memory Storage Capacity	32 GB (SD Card included)
Connectivity Technology	USB (Type-C)
Battery Type	Lithium Ion (2 included)
Special Features	Selfie, Time-Lapse, Slow Motion, ISO Adjustment, White Balance, Metering, Filters, Webcam, Built-in Flash

11. Warranty and Support

This Hoorola Digital Camera comes with an extended warranty. For specific details regarding your warranty coverage, please refer to the warranty card included in your package.

For customer support, technical assistance, or warranty claims, please contact:

- **Email:** support@hoorola.com

Additional protection plans (2-Year and 3-Year) may be available for purchase separately.

© 2025 Hoorola. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FH96Q4QF

More documents and user manuals: **https://manuals.plus/**