Mattel JKL78

Mattel Jurassic World Pteranodon Wild Roar JKL78 Instruction Manual

Model: JKL78

Introduction Safety Information Assembly Operation App Integration Specifications Support

1. Introduction

Thank you for purchasing the Mattel Jurassic World Pteranodon Wild Roar JKL78 toy. This instruction manual provides important information for the safe and proper use of your new dinosaur figure. The Pteranodon Wild Roar toy features multi-directional attack movements, realistic sounds, and interactive app capabilities. Please read this manual thoroughly before use and retain it for future reference.

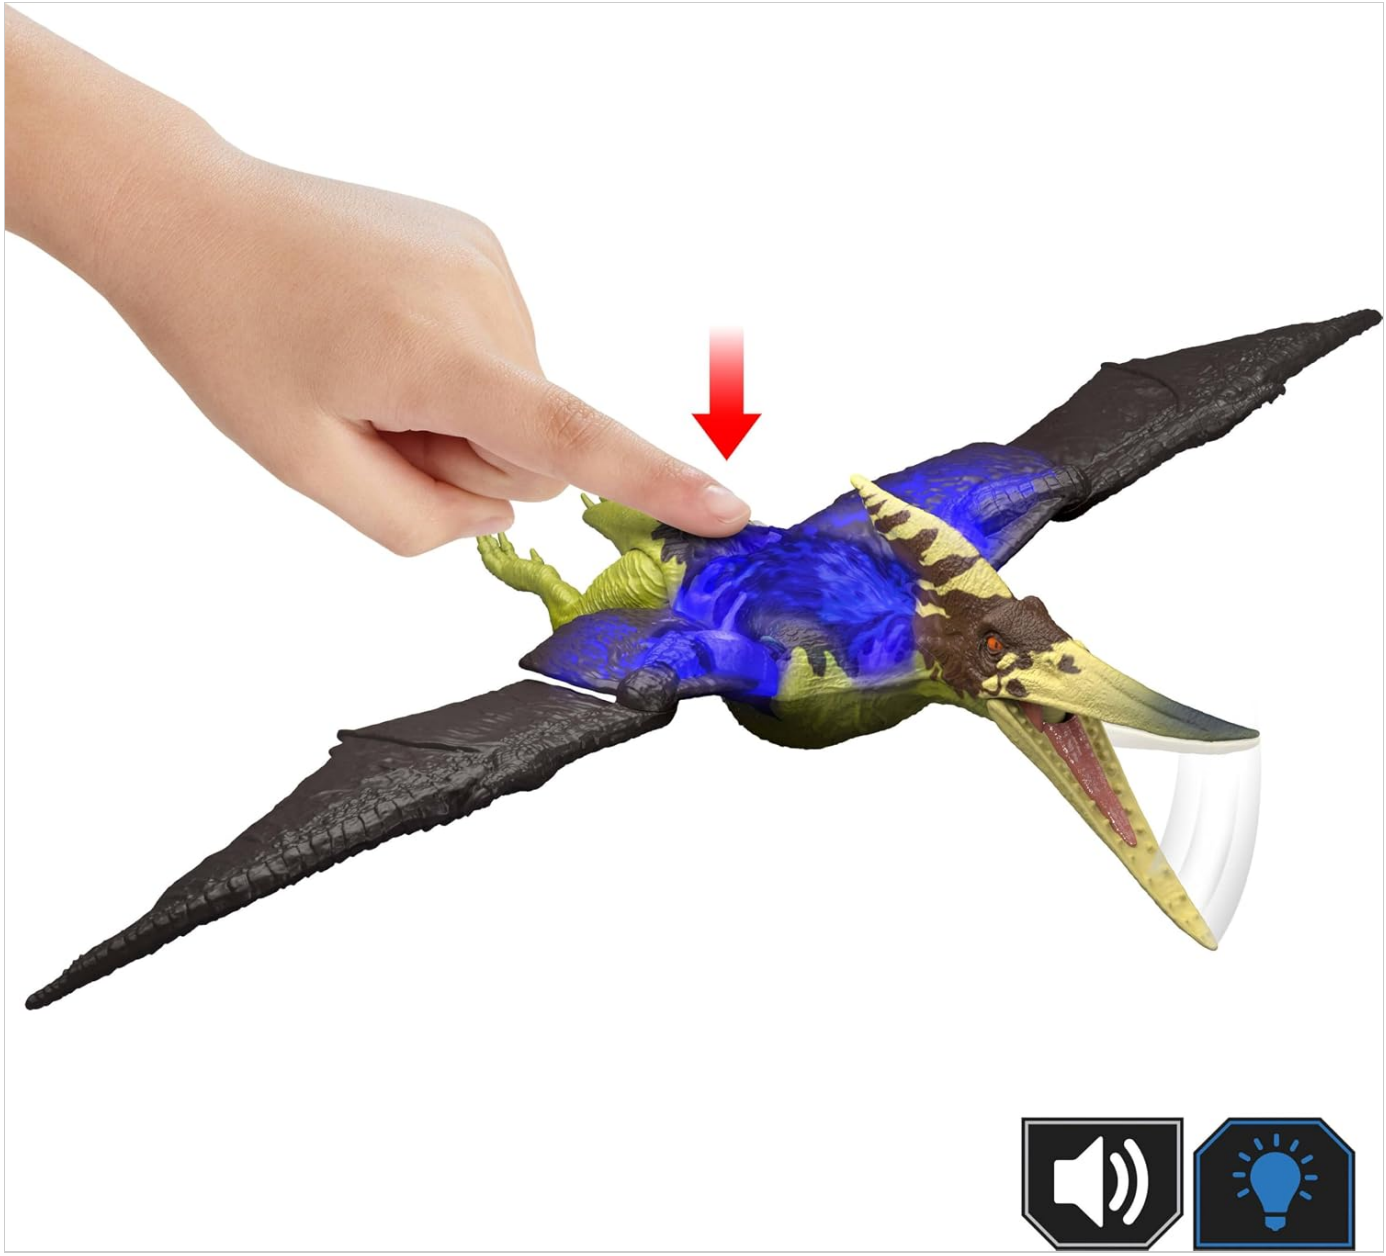


Image 1: The Mattel Jurassic World Pteranodon Wild Roar JKL78 toy.

2. Safety Information

WARNING: Not suitable for children under 36 months due to small parts. Adult assembly is required. Handle with extreme caution when opening from the packaging and assembling the toy.
WARNING: Button Cell Batteries are Dangerous. Button cell batteries can cause serious injury if swallowed or inserted anywhere on the body. Keep children away from new and used batteries. Discard used batteries immediately. Seek medical advice immediately if you suspect that batteries have been swallowed or inserted anywhere on the body.

3. Assembly and Battery Installation

This product requires adult assembly and batteries for full functionality. Three (3) AA batteries are required and included with the toy.

3.1 Unboxing

Carefully remove the Pteranodon toy from its packaging. Ensure all components are present and intact. Dispose of packaging materials responsibly.



Image 2: The Pteranodon Wild Roar JKL78 toy as packaged.

3.2 Battery Installation

1. Locate the battery compartment on the underside of the Pteranodon.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert three (3) AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

4. Operating Instructions

The Pteranodon Wild Roar toy features interactive movements and sounds.

4.1 Activating Attack Move and Roar

- To activate a unique attack movement and accompanying wild roar, move the dinosaur's tail up and down.
- To change the direction of the attack, twist the tail. This allows for multi-directional movements.



Image 3: Activating the Pteranodon's sound and light features.

5. Jurassic World Play App Integration

Enhance your play experience by integrating your Pteranodon Wild Roar toy with the free Jurassic World Play app.

5.1 Scanning the Tracking Code

- Locate the tracking code on the dinosaur's paw.
- Download the free Jurassic World Play app on a compatible smart device (Android or iOS, not included).
- Open the app and use your device's camera to scan the tracking code on the dinosaur's paw.
- This will unlock a digital version of your dinosaur within the app and grant access to augmented reality activities.



Image 4: Scanning the tracking code on the dinosaur's paw for app integration.

5.2 App Features

Within the Jurassic World Play app, you can:

- Create a digital dinosaur collection.
- Engage in augmented reality activities.
- Participate in the "Wild Race: Colossal Chase" game, where you compete with different vehicles over land, air, and sea, and extract dinosaur DNA.

6. Maintenance

To ensure the longevity of your Pteranodon Wild Roar toy:

- Wipe the toy with a clean, damp cloth to remove dust and dirt. Do not submerge in water.
- Avoid exposing the toy to extreme temperatures or direct sunlight for extended periods.
- If the toy will not be used for an extended period, remove the batteries to prevent leakage.

7. Troubleshooting

If you encounter any issues with your Pteranodon Wild Roar toy, please refer to the following:

- **No Sound or Movement:** Check that the batteries are correctly installed and are not depleted. Replace batteries if necessary.
- **App Connection Issues:** Ensure your smart device is compatible with the Jurassic World Play app and has a stable internet connection. Try rescanning the tracking code in good lighting.

8. Specifications

Model Number:	JKL78
Product Dimensions:	42 x 21 x 6 cm
Weight:	272.16 g
Material:	Plastic
Batteries:	3 x AA batteries (included)
Recommended Age:	4 years and up
Manufacturer:	Mattel

9. Warranty and Support

For warranty information or further assistance, please contact Mattel customer support. Refer to the product packaging or the official Mattel website for contact details.

© 2026 Mattel. All rights reserved. Jurassic World is a trademark and copyright of Universal Studios and Amblin Entertainment, Inc.

Licensed by Universal Studios. All Rights Reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question