realme RMX5313

realme C71 4G Smartphone User Manual

Model: RMX5313

Introduction

This manual provides detailed instructions for the safe and efficient use of your realme C71 4G Smartphone (Model: RMX5313). Please read this manual thoroughly before using your device to ensure optimal performance and longevity. Keep this manual for future reference.

What's in the Box

Upon opening the package, verify that all the following items are present:

- realme C71 Handset
- Charger
- USB Data Cable
- SIM Tray Ejector
- Phone Case

Device Overview

Familiarize yourself with the physical components of your realme C71 smartphone.


realme
realme C71

Image 1: *Front and rear view of the realme C71 smartphone. The front displays the screen, while the rear shows the camera module and realme branding.*

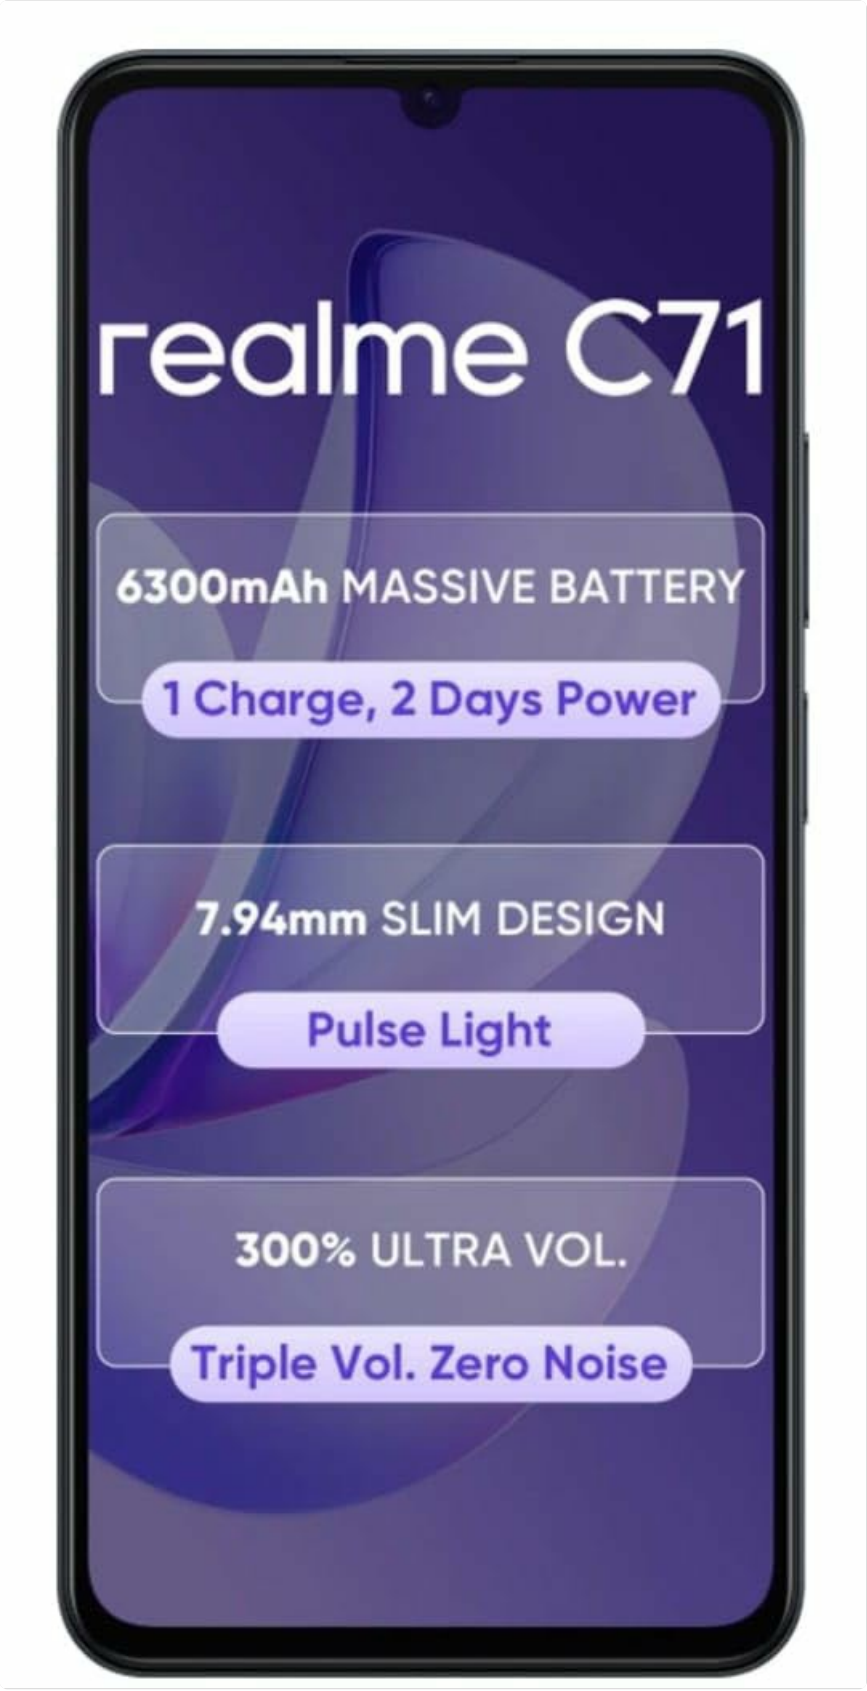


Image 2: *Front view of the realme C71 smartphone highlighting key features such as the 6300mAh battery, 7.94mm slim design, and display technology.*

Physical Components:

- **Front Camera:** Located at the top of the display.
- **Earpiece:** For audio during calls.

- **Display:** 6.745-inch 90Hz Eye Comfort Display.
- **Volume Buttons:** On the side for adjusting audio levels.
- **Power Button:** On the side for turning the device on/off and screen lock/unlock.
- **SIM/SD Card Tray:** For inserting SIM cards and a microSD card.
- **USB Port:** For charging and data transfer.
- **Speaker:** For audio output.
- **Microphone:** For voice input.
- **Rear Camera Module:** Located on the back, featuring multiple lenses.

Setup

1. Inserting SIM and SD Card

1. Locate the SIM tray on the side of the device.
2. Insert the SIM tray ejector tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card into the designated slots on the tray. Ensure the gold contacts face downwards.
4. Carefully reinsert the tray into the phone until it clicks into place.

2. Initial Power On and Basic Configuration

1. Press and hold the **Power Button** until the realme logo appears.
2. Follow the on-screen prompts to select your language, region, and connect to a Wi-Fi network.
3. Set up your Google account, screen lock (PIN, pattern, or fingerprint), and other initial settings as guided.
4. Your device is now ready for use.

Operating Instructions

Basic Navigation

- **Tap:** Touch the screen once to select an item or open an application.
- **Swipe:** Drag your finger across the screen to scroll through pages or content.
- **Pinch:** Use two fingers to zoom in or out on images and web pages.
- **Long Press:** Press and hold an item for additional options or to move icons.

Making Calls and Sending Messages

- **Calls:** Open the **Phone** app, enter the number, and tap the call icon.
- **Messages:** Open the **Messages** app, tap the new message icon, enter the recipient and your message, then send.

Camera Usage

- Open the **Camera** app.
- Select your desired mode (Photo, Video, Portrait, etc.).
- Tap the shutter button to capture a photo or start/stop video recording.

Connectivity

- **Wi-Fi:** Go to **Settings > Network & internet > Wi-Fi**. Turn Wi-Fi on and select a network to connect.
- **Bluetooth:** Go to **Settings > Connected devices > Bluetooth**. Turn Bluetooth on and pair with available devices.

Battery Management

- The realme C71 features a 6300mAh battery.
- To optimize battery life, adjust screen brightness, disable unused features like Wi-Fi or Bluetooth when not needed, and close background applications.
- Access **Settings > Battery** for detailed usage statistics and power-saving options.

Maintenance

Cleaning Your Device

- Use a soft, lint-free cloth to clean the screen and body of the phone.
- Avoid using harsh chemicals or abrasive materials, as these can damage the device's finish.

Software Updates

- Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements.
- Go to **Settings > About phone > Software update** to check for updates.

Battery Care

- Avoid exposing the device to extreme temperatures.
- Use only the original charger and USB cable provided with the device.
- Do not leave the device charging for extended periods after it has reached 100%.

IP54 Rating

The realme C71 has an IP54 rating, indicating it is protected against limited dust ingress and water splashes from any direction. This does not mean the device is waterproof. Avoid submerging the device in water or exposing it to high-pressure water jets.

Troubleshooting

Device Not Turning On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the Power button for at least 10-15 seconds to perform a forced restart.

Network Issues (No Signal/Cannot Make Calls)

- Check if the SIM card is correctly inserted.
- Ensure Airplane mode is off (swipe down from the top of the screen to check Quick Settings).
- Restart the device.
- Verify your network settings in **Settings > Network & internet > Mobile network**.

Battery Draining Quickly

- Reduce screen brightness.
- Disable Wi-Fi, Bluetooth, and GPS when not in use.
- Close unused applications running in the background.
- Check battery usage in **Settings > Battery** to identify power-consuming apps.

Applications Crashing or Freezing

- Force close the problematic app (swipe up from the bottom and swipe the app away).
- Clear the app's cache and data in **Settings > Apps > [App Name] > Storage & cache**.
- Ensure the app is updated to its latest version.
- If the issue persists, consider uninstalling and reinstalling the app.

Specifications

Model Name	realme C71
Model Number	RMX5313
Operating System	Android 14
Processor	Unisoc T7250 Chip (CPU Model: 8031, CPU Speed: 1.6 GHz)
RAM	4 GB
Internal Storage	64 GB
Display	6.745 inch, 90Hz Eye Comfort Display, 1604 x 720 Resolution
Battery Capacity	6300 mAh
Cameras	37MP (as per product description)
Dimensions (L x W x H)	16.72 x 7.66 x 0.79 cm
Weight	200 g
Ingress Protection (IP) Rating	IP54 (Dust and splash resistant)
Color	Obsidian Black

Warranty and Support

Your realme C71 smartphone comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.
For technical support, service, or further inquiries, please visit the official realme support website or contact their customer service. Contact information can typically be found on the realme official website or in the warranty documentation.
Online Support: realme India Support

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I set up and use the realme C71 (RMX5313) smartphone?

To set up and begin using your realme C71 (RMX5313), follow these primary steps from the user manual:SIM and SD Card Setup: Locate the SIM tray on the side of the device. Use the...

Read full answer