aowoka weTag mini

aowoka weTag mini Bluetooth Item Finder User Manual

Model: weTag mini

Introduction

The aowoka weTag mini is a compact Bluetooth item finder designed to help you locate your personal belongings quickly and efficiently. Compatible exclusively with the Apple Find My app on iOS devices, this tracker utilizes the extensive Find My network to provide real-time location data and alerts. It features a loud 100 dB sound for nearby searches, a replaceable CR2032 battery with up to 1 year of life, and an IP67 waterproof rating for durability.



Image: The aowoka weTag mini attached to a briefcase, backpack, car keys, and luggage, demonstrating its versatility for tracking various items.

Setup

1. Battery Installation

The weTag mini comes with a CR2032 button cell battery. To install or replace the battery:

1. Locate the small groove on the side of the weTag mini.
2. Carefully use a thin, flat tool (like a coin or a small screwdriver) to gently pry open the casing. The battery compartment is typically on the side opposite the main button.
3. Insert the CR2032 battery with the positive (+) side facing up.
4. Align the two halves of the casing and press firmly until it clicks securely into place, ensuring a tight seal for water resistance.

2. Connecting to Apple Find My App

The aowoka weTag mini is designed for seamless integration with the Apple Find My app (iOS Only).

1. Ensure your iOS device (iPhone, iPad, or iPod touch) is running the latest version of iOS.

2. Open the **Find My** app on your iOS device.
3. Navigate to the **Items** tab.
4. Tap the **+** icon and select **Add Other Item**.
5. Follow the on-screen instructions to pair your weTag mini. The device should be detected automatically when nearby.
6. Once paired, you can name your weTag mini and assign an emoji to easily identify it in the app.



Image: An illustration showing the aowoka weTag mini and an iPhone displaying the Apple Find My app interface, indicating how to locate items and receive directions.

Operating Instructions

1. Finding Nearby Items

When your weTag mini is within Bluetooth range (approximately 120 ft), you can make it emit a sound to help you locate it.

- Open the **Find My** app on your iOS device.

- Go to the **Items** tab and select your weTag mini.
- Tap **Play Sound**. The weTag mini will emit a loud 100 dB ticking sound, guiding you to its location.
- You can also ask Siri, for example, "Hey Siri, find my keys."



Image: A person standing near a table with a wallet and an aowoka weTag mini, which is shown emitting sound waves to indicate its location.

2. Finding Lost Items (Out of Range)

If your weTag mini is out of Bluetooth range, the Apple Find My network can help you locate it.

- Open the **Find My** app and select your weTag mini.
- The app will display its last known location on a map.
- If another Apple device in the Find My network passes by your weTag mini, its location will be updated anonymously and securely, allowing you to see its current position.
- You can get directions to the weTag mini's location directly from the app.



Image: An iPhone displaying a map with real-time GPS location and route finding, alongside an aowoka weTag mini attached to a set of keys.

3. Lost Alert and Lost Mode

The weTag mini offers features to prevent loss and aid recovery:

- **Forgetfulness Alert:** If your weTag mini loses Bluetooth connection with your device, you will receive instant notifications, reminding you to retrieve your belongings.
- **Lost Mode:** If your weTag mini is lost, you can enable Lost Mode in the Find My app. This allows you to display a message and contact information to anyone who finds your item and scans the NFC on the locator. You will also receive notifications when your lost weTag mini is detected by the Find My network.

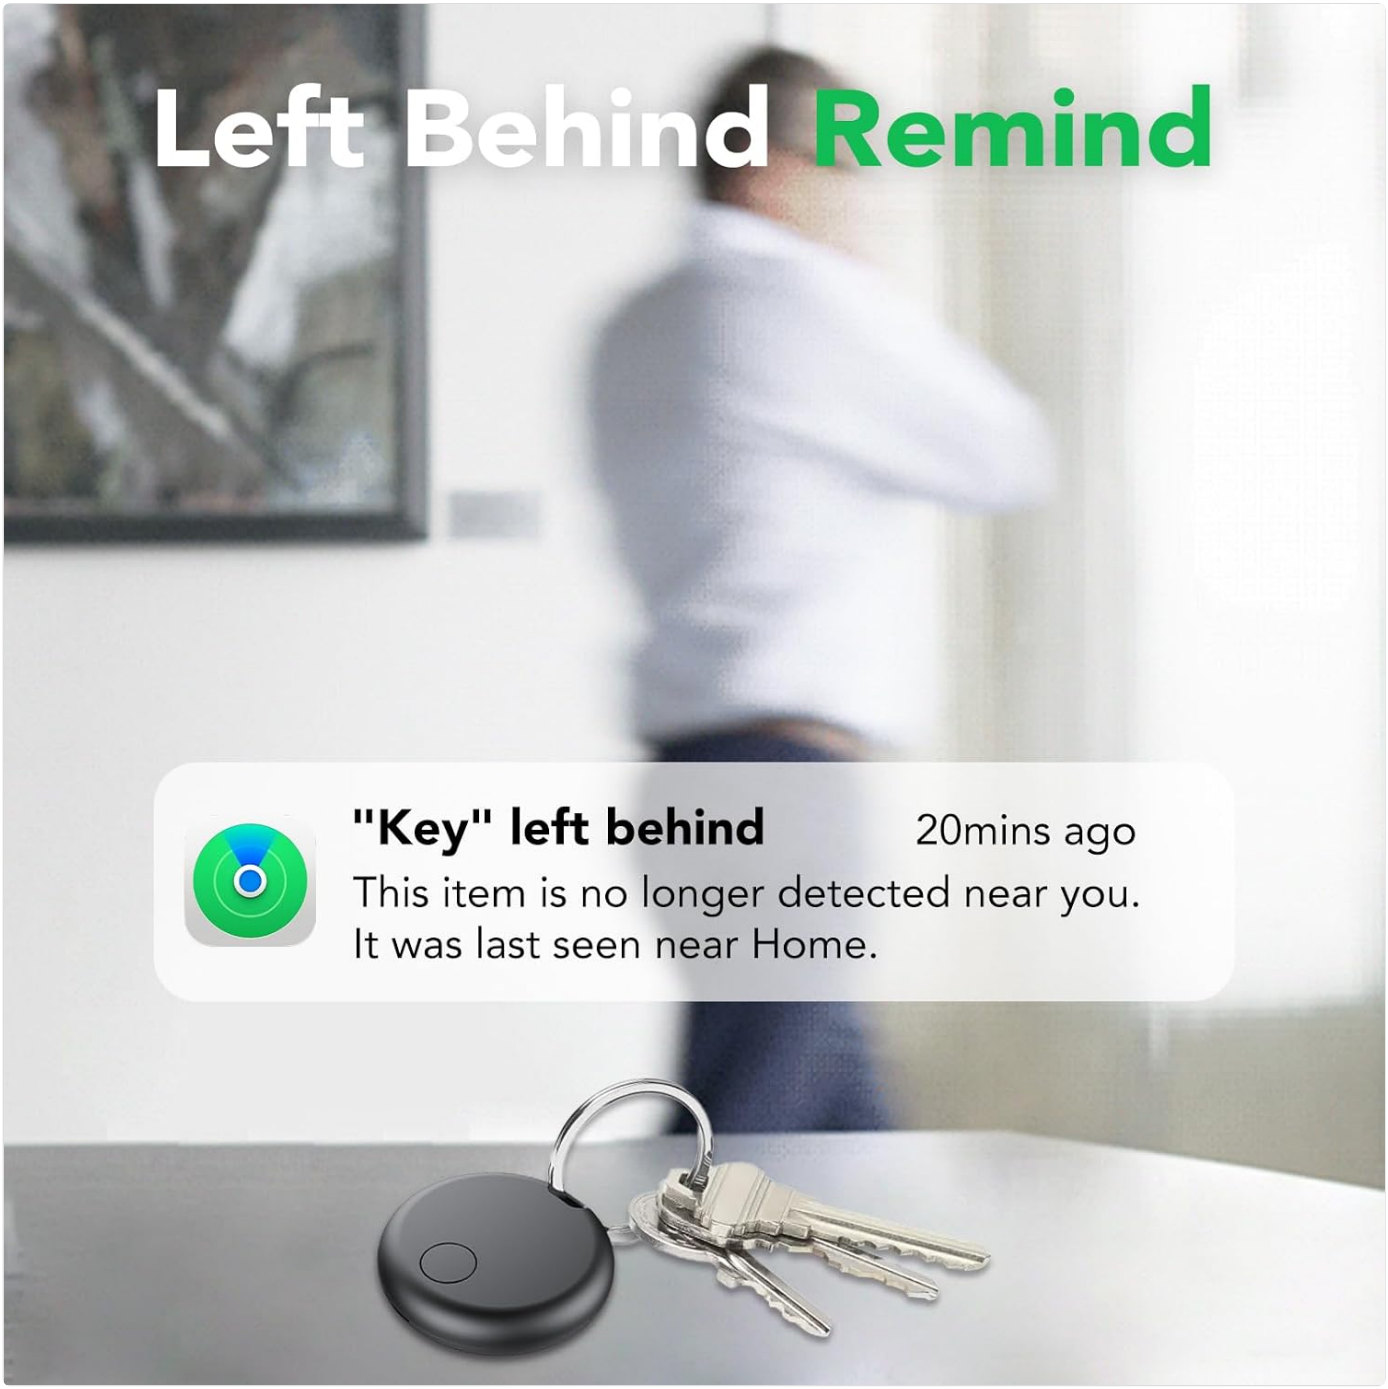


Image: An iPhone screen showing a 'Key left behind' notification, indicating that the item is no longer detected nearby, with an aowoka weTag mini and keys in the foreground.

4. Sharing Items

With iOS 18.0 or above, you can share the location of your weTag mini with friends and family.

- In the **Find My** app, select the weTag mini you wish to share.
- Tap **Share This Item** and follow the prompts to select contacts.

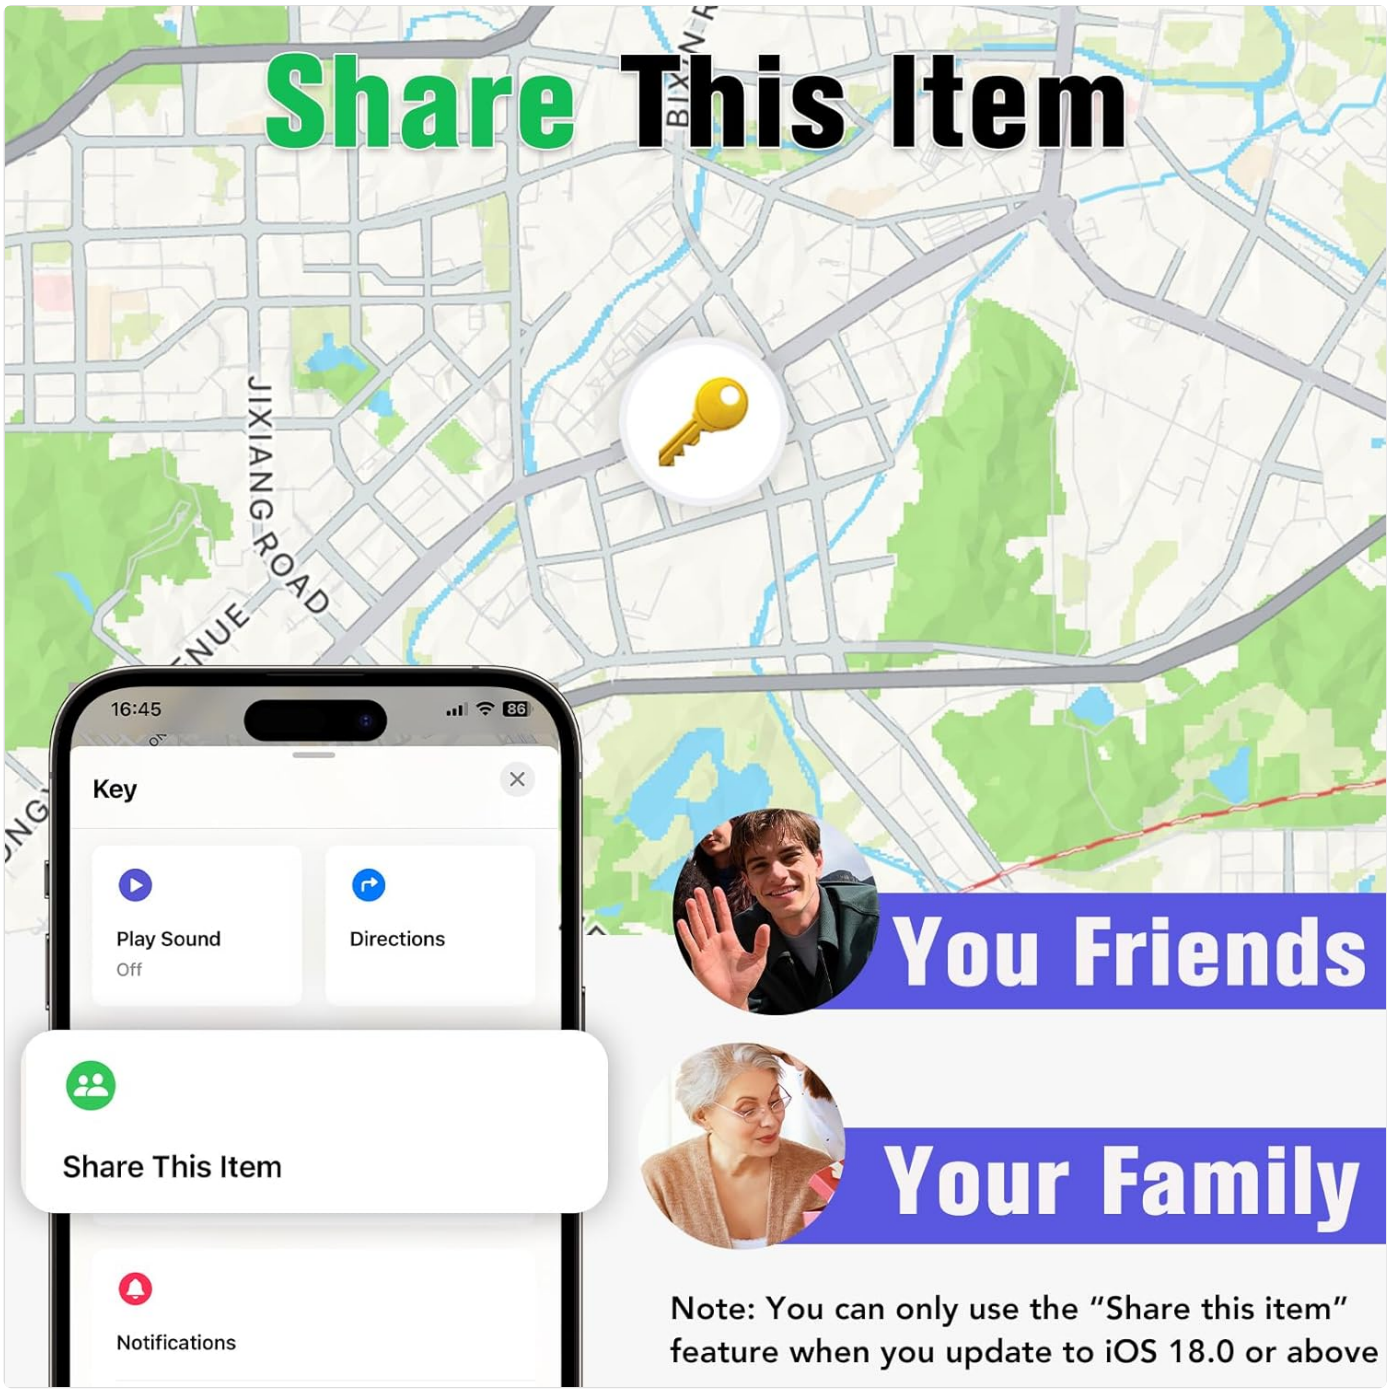


Image: An iPhone screen showing the 'Share This Item' option within the Find My app, with illustrations of people representing friends and family, indicating the ability to share the weTag mini's location.

Maintenance

Battery Replacement

The weTag mini uses a replaceable CR2032 button cell battery, offering a lifespan of up to 1 year. The Find My app will notify you when the battery is running low. Refer to the 'Battery Installation' section under Setup for replacement instructions.

Water Resistance

The weTag mini has an IP67 waterproof rating, meaning it is protected against dust ingress and can withstand immersion in water up to 1 meter for up to 30 minutes. While it is resistant to splashes and brief submersion, it is not recommended for prolonged underwater use.

Cleaning

To clean your weTag mini, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can

damage the device.

Troubleshooting

- **weTag mini not appearing in Find My app:** Ensure Bluetooth is enabled on your iOS device. Check if the weTag mini battery is charged or correctly installed. Try resetting the weTag mini by removing and reinserting the battery.
- **No sound when trying to locate:** Verify that the weTag mini is within Bluetooth range. Check the battery level in the Find My app. Ensure your device's volume is audible.
- **Location not updating:** If the weTag mini is out of your device's Bluetooth range, its location updates rely on other Apple devices in the Find My network. Updates may not be instantaneous in areas with low network density.
- **Battery draining quickly:** Factors such as frequent use of the 'Play Sound' feature or being constantly out of range and relying on the Find My network can affect battery life. Ensure the battery is a fresh CR2032.
- **Difficulty opening battery compartment:** Use a thin, sturdy tool like a coin or a small flat-head screwdriver. Apply gentle, even pressure in the designated groove to avoid damage.

Specifications

Model Number	weTag mini
Brand	aowoka
Connectivity	Bluetooth
Compatibility	Apple Find My app (iOS Only)
Battery Type	CR2032 Button Cell (included)
Battery Life	Up to 1 year
Waterproof Rating	IP67
Sound Level	100 dB
Dimensions	Approximately 11.9 x 10 x 1.7 cm (Package Dimensions)
Weight	Approximately 10 g



Image: A close-up of the aowoka weTag mini, with icons and text indicating features such as privacy protection, no app download needed (referring to Find My being built-in), 365 days of use, 'Hey Siri' compatibility, loud sound, and IP68 waterproof (note: product description states IP67).

Warranty and Support

Warranty Information

For detailed warranty information regarding your aowoka weTag mini, please refer to the retailer where you purchased the product or visit the official aowoka website. Warranty terms and conditions may vary by region and retailer.

Customer Support

If you encounter any issues or have questions not covered in this manual, please contact aowoka customer support. Contact details can typically be found on the product packaging or the official aowoka website.

© 2026 aowoka. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question