Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TAKMEHOME TK-AF860

TAKMEHOME 7-in-1 Digital Air Fryer 6L User Manual

Model: TK-AF860

Introduction Safety Instructions Product Components Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

Thank you for choosing the TAKMEHOME 7-in-1 Digital Air Fryer. This appliance utilizes advanced 360° hot air circulation technology to cook your favorite foods with little to no oil, offering a healthier alternative to traditional frying methods. With its 6-liter capacity and intuitive touchscreen controls, you can prepare a variety of meals for your family efficiently and conveniently. This manual provides essential information for safe operation, maintenance, and optimal performance of your air fryer.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then

remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting the appliance.
- Do not block any ventilation openings.
- Never pour oil into the basket. This could cause a fire hazard.
- The appliance is equipped with an anti-scalding handle for safe operation.

3. Product Components

Familiarize yourself with the parts of your TAKMEHOME Digital Air Fryer:

A. Main Unit: Houses the heating element and fan.



Image: The TAKMEHOME Digital Air Fryer in black with a gold top and handle. The drawer basket is pulled out, filled with golden fries. Skewers and chicken wings are visible on plates around the air fryer.

B. Digital LED Touch Screen: For controlling temperature, time, and selecting presets.



Image: A split image showing a close-up of the air fryer's digital LED touchscreen panel with various icons and a time display (8.8.8.8). Below it, the separate non-stick basket with its grill insert is shown, highlighting its easy-to-clean design.

C. Drawer Basket: The main cooking compartment with an anti-scalding handle.

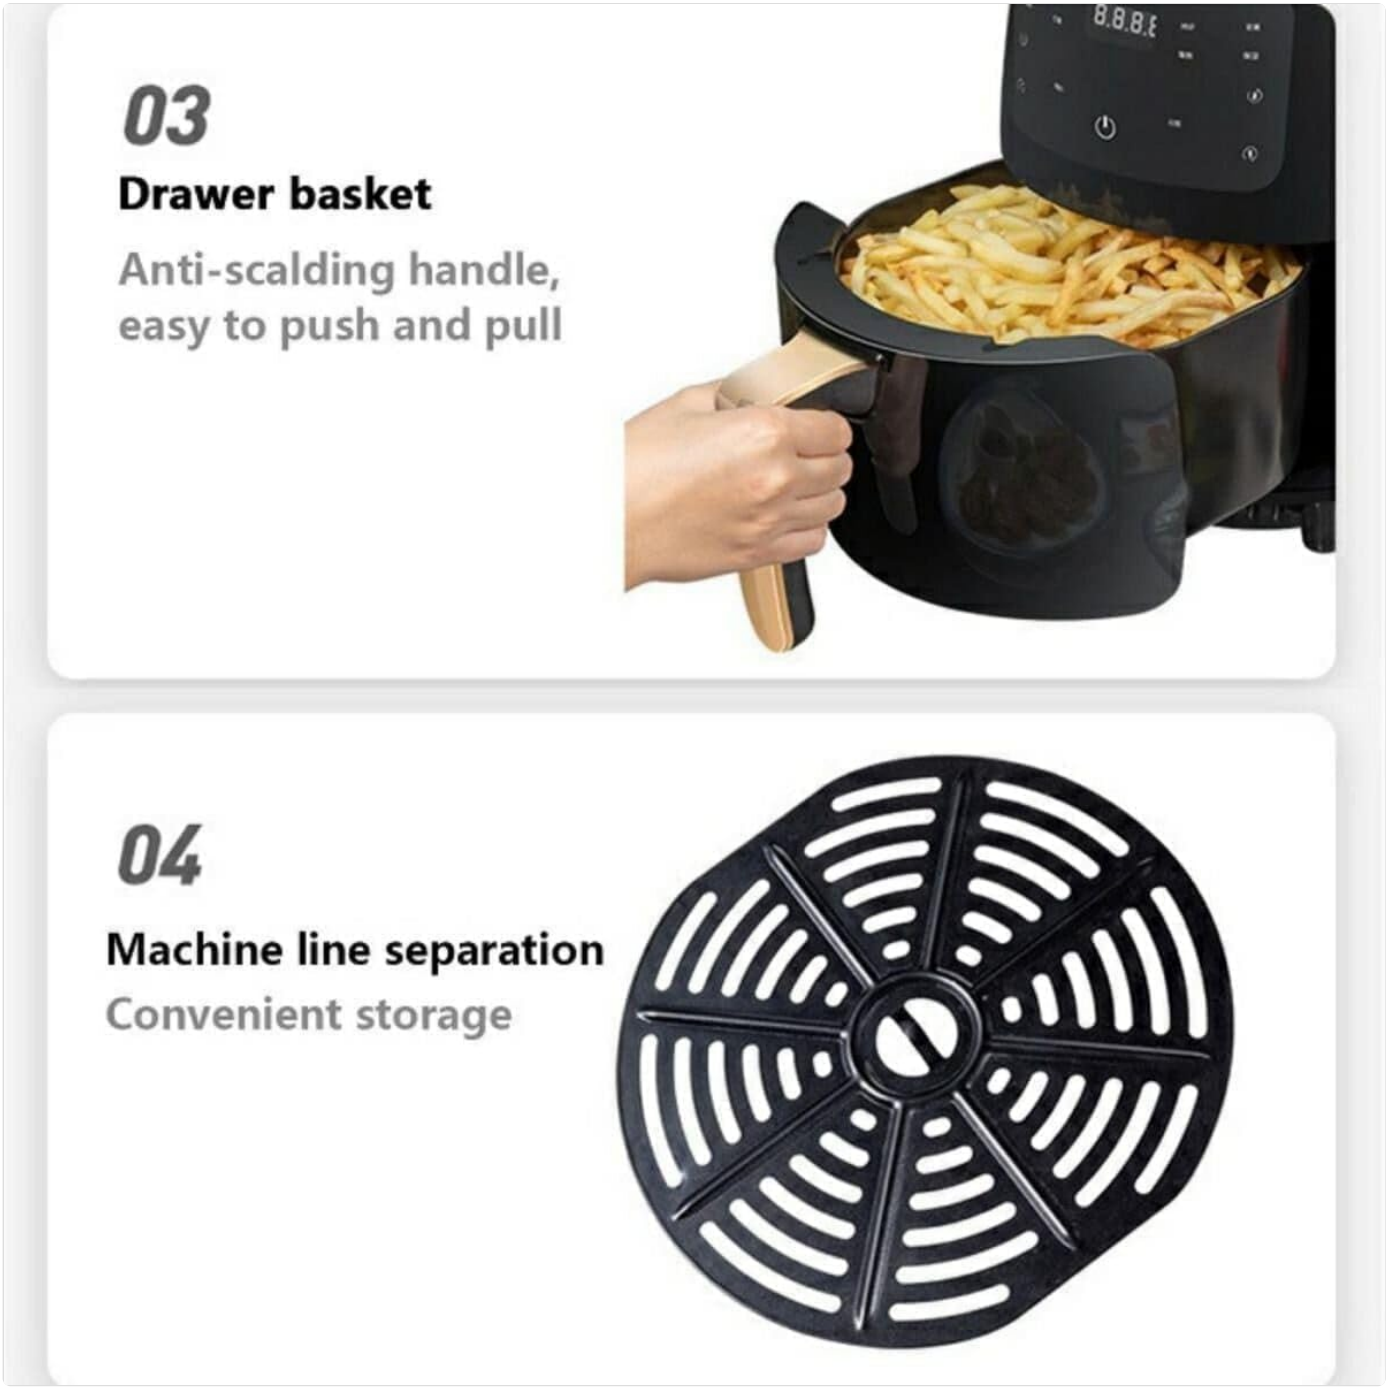


Image: A hand pulling out the drawer basket of the air fryer, which is filled with fries. The image also shows the grill insert and emphasizes the anti-scalding handle for safe use.

D. Non-Stick Grill Insert: Removable for easy cleaning and optimal air circulation.



Image: An overhead view looking into the air fryer's drawer basket, clearly showing the removable non-stick grill insert at the bottom, designed for even cooking and easy cleaning.

Refer to the diagram below for overall dimensions:



Image: A diagram illustrating the dimensions of the air fryer unit (approximately 31cm height, 27cm width) and its internal components, including the grill insert (8cm diameter) and the basket (22cm diameter, 11cm depth).

4. Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials from the air fryer. Keep packaging for future storage or dispose of responsibly.
2. **Initial Cleaning:** Before first use, clean the drawer basket and grill insert with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to ensure proper air circulation. Ensure there is at least 10 cm of free space on the back and sides, and 10 cm above the appliance.
4. **Power Connection:** Plug the power cord into a grounded wall outlet. Ensure the voltage matches the appliance's

requirements.

5. **Pre-heating (Optional):** For best results, pre-heat the air fryer for 3-5 minutes before adding food. This helps achieve a crispier texture.

5. Operating Instructions

5.1. Control Panel Overview

The digital LED touchscreen allows for easy control of your air fryer. The display shows time and temperature, along with various function icons.



Image: A top-down view of the air fryer's control panel, showing the digital display and touch-sensitive icons for various functions like "French Fries", "Potato", "Chicken", "Shrimp", "Nuts", "Cake", and "Heat", along with "Time" and "Function" buttons.

5.2. Basic Operation

1. **Power On:** Plug in the air fryer. The display will light up. Press the **Power button** (circle with vertical line) to turn on the appliance.
2. **Place Food:** Pull out the drawer basket using the anti-scalding handle. Place your food onto the grill insert inside the basket. Do not overfill the basket. Push the basket firmly back into the air fryer.
3. **Select Cooking Mode:**
    - **Preset Programs:** Touch one of the preset icons (e.g., **Fries**, **Chicken**, **Fish**, **Cake**) for automatic temperature and time settings.
    - **Manual Settings:** Alternatively, use the **Temperature** and **Time** buttons to adjust settings manually. The temperature range is 60°C to 200°C, and the timer can be set up to 60 minutes.
4. **Start Cooking:** Once settings are chosen, press the **Start/Pause button** (often the Power button again or a dedicated play icon) to begin cooking.
5. **Shaking/Tossing Food:** For even cooking, especially with smaller items like fries or nuggets, pull out the basket halfway through the cooking time and gently shake or toss the food. Then, reinsert the basket. The air fryer will resume cooking automatically.



Image: The TAKMEHOME Digital Air Fryer with a plate of golden fries, chicken nuggets, and a small salad in front, demonstrating

typical air-fried meals.

6. **End of Cooking:** The air fryer will beep when the cooking cycle is complete. Carefully pull out the basket and transfer the food to a serving plate.
7. **Power Off:** Press and hold the **Power button** to turn off the appliance. Unplug from the wall outlet when not in use.

5.3. Cooking Tips

- For crispier results, lightly brush or spray food with oil.
- Do not overcrowd the basket; cook in batches if necessary to ensure even cooking.
- Smaller food items generally require less cooking time than larger ones.
- Use a meat thermometer to ensure meat and poultry are cooked to safe internal temperatures.
- The air fryer is also suitable for reheating leftovers, making them crispy again.
- Experiment with different recipes and settings to find your preferred results.
- The 6L capacity (4.5L usable) is ideal for 2-4 people.
-



Image: The air fryer with its drawer basket pulled out, containing cooked shrimp garnished with lemon slices, surrounded by other

prepared dishes like chicken and pastries.

6. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Basket and Grill Insert:** The non-stick drawer basket and grill insert are dishwasher-safe. Alternatively, wash them with warm water, a mild dish soap, and a non-abrasive sponge. For stubborn food residue, soak the basket in warm soapy water for about 10-15 minutes before cleaning.
3. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasive cleaners or scouring pads, as they can damage the surface.
4. **Interior:** If necessary, wipe the interior of the appliance with a damp cloth. Avoid getting water into the heating element area.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer. Store it in a cool, dry place.

7. Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the power button.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/tossed.	Cook in smaller batches. Shake or toss food halfway through cooking.
Food is not crispy.	Too much food in the basket; insufficient oil (for some foods); temperature too low.	Reduce food quantity. Lightly brush or spray food with oil. Increase temperature slightly.
White smoke comes from the appliance.	Grease residue from previous use; fatty food being cooked.	Clean the basket and grill insert thoroughly after each use. This is normal for fatty foods.
Appliance smells like plastic.	New appliance odor.	This is normal for the first few uses. Ensure good ventilation. The smell will dissipate.

8. Product Specifications

Model Number: TK-AF860

Brand: TAKMEHOME

Capacity: 6 Liters (4.5 Liters Usable)

Wattage: 1400 Watts

Product Dimensions (D x W x H): 30.5 cm x 34.5 cm x 30.5 cm

Color: Black with Rose Gold Accents

Temperature Range: 60°C - 200°C

Timer: Up to 60 minutes

Display: Digital LED Touch Screen

Basket Material: Non-Stick, BPA-free

Dishwasher Safe Parts: Basket and Grill Insert

Included Components: Non-Stick Basket, Grill Insert

9. Warranty and Customer Support

For warranty information, please refer to the warranty card included with your purchase or contact TAKMEHOME customer support. If you encounter any issues or have questions regarding your air fryer, please reach out to our customer service team for assistance.
Contact information can typically be found on the product packaging or on the official TAKMEHOME website.

© 2023 TAKMEHOME. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FJ61YB5K

More documents and user manuals: **https://manuals.plus/**