aowoka weTag Pro

aowoka weTag Pro Bluetooth Tracker User Manual

Model: weTag Pro

1. Introduction

Thank you for choosing the aowoka weTag Pro Bluetooth Tracker. This device is designed to help you easily locate your valuable items using the Apple Find My network. This manual provides detailed instructions on how to set up, operate, and maintain your weTag Pro.

Important Note: This product is exclusively compatible with iOS devices and does not support Android.



Image: A collage showing various personal items like a wallet, handbag, and keys, illustrating how the weTag Pro can help protect your belongings.

2. Product Overview

The aowoka weTag Pro is a compact and lightweight Bluetooth tracker designed for easy attachment to various items. It leverages the extensive Apple Find My network for precise location tracking.

- **Compatibility:** Works exclusively with Apple Find My (iOS devices only).
- **Battery:** Replaceable CR2032 battery with up to 2 years of life. A spare battery is included.

- **Durability:** IP67 dust and water protection, allowing submersion up to 3 feet for 30 minutes.
- **Sound:** Integrated 100 dB speaker for audible location within Bluetooth range.
- **Design:** Military-grade PC casing for scratch resistance, weighing only 6g.



Image: Key features of the weTag Pro, including Apple Find My compatibility, 2-year battery life, IP67 rating, and privacy.

3. Setup Instructions

Follow these steps to pair your aowoka weTag Pro with your iOS device:

1. **Enable Bluetooth and Location Services:** On your iOS device, ensure Bluetooth is turned on and location services are enabled for the Find My app.
2. **Open Find My App:** Launch the Apple Find My application on your iPhone or iPad.
3. **Add Item:** Navigate to the "Items" tab, then tap "Add Item." Select "Other Supported Items."
4. **Activate Tracker:** Press the button on your weTag Pro once. Wait for the audible signal.
5. **Connect:** Follow the on-screen instructions in the Find My app to complete the pairing process.

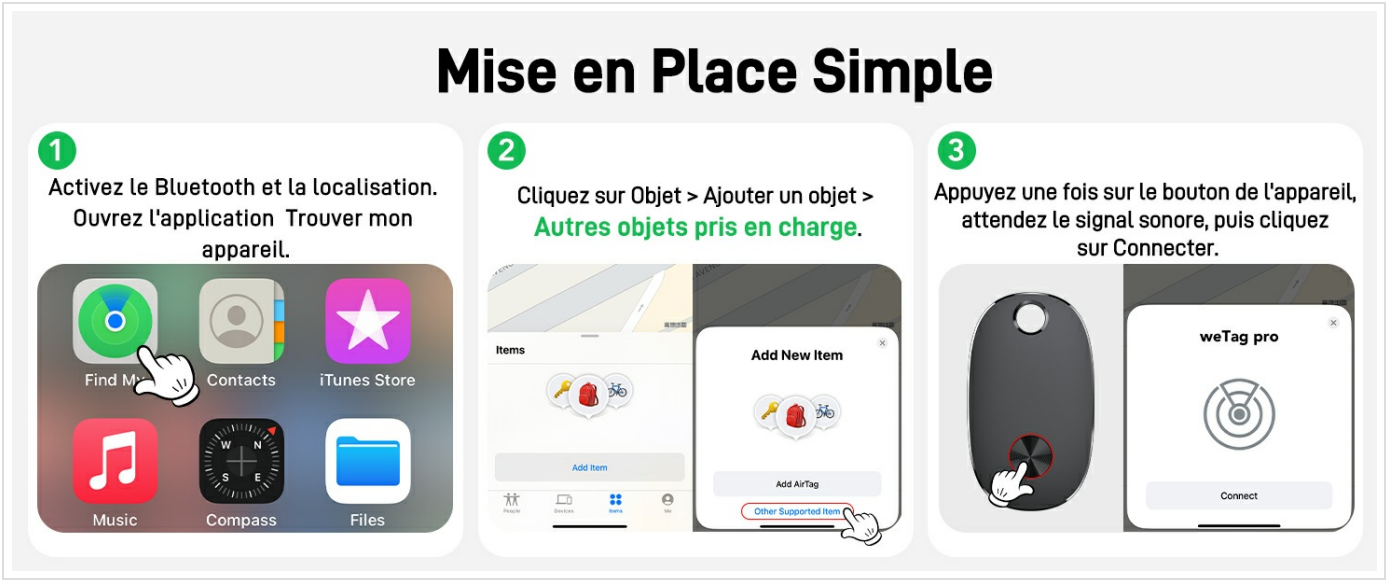


Image: Step-by-step guide for simple setup using the Apple Find My app.

4. Operating Instructions

4.1 Locating Items within Bluetooth Range (Sound Guide)

If your weTag Pro is within approximately 200 feet (60 meters) of your iOS device, you can use the Find My app to make it emit a sound.

1. Open the Find My app.
2. Go to the "Items" tab.
3. Select your weTag Pro from the list.
4. Tap "Play Sound" to activate the 100 dB speaker on the tracker. Follow the sound to locate your item.



Image: Using the 100 dB sound guide to find lost items, even in hidden spots.

4.2 Locating Items Out of Bluetooth Range (Map Search)

If your weTag Pro is out of Bluetooth range, the Find My network can help you locate it.

- The Find My app will display the last known location of your weTag Pro on a map.
- The Find My network, composed of millions of Apple devices, anonymously detects your weTag Pro and securely relays its location to you.
- You can get directions to the last known location directly from the app.

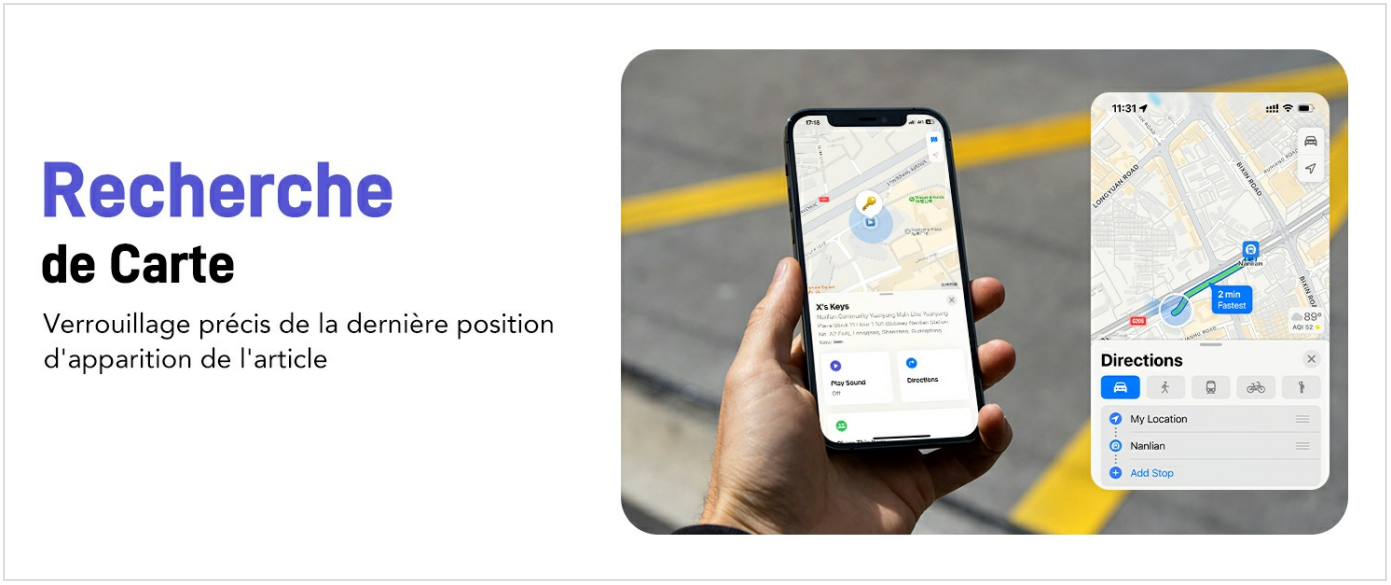


Image: Map search functionality within the Find My app to pinpoint the last known location of your item.

4.3 Loss Alert and Lost Mode

The weTag Pro offers features to prevent loss and help recover lost items:

- **Loss Notification:** If your weTag Pro disconnects from your phone (e.g., you leave an item behind), the Find My app will send an immediate notification to your device.
- **Lost Mode:** You can enable "Lost Mode" in the Find My app. If another Apple device user finds your item, they can scan the weTag Pro to see your contact information (if you've provided it).

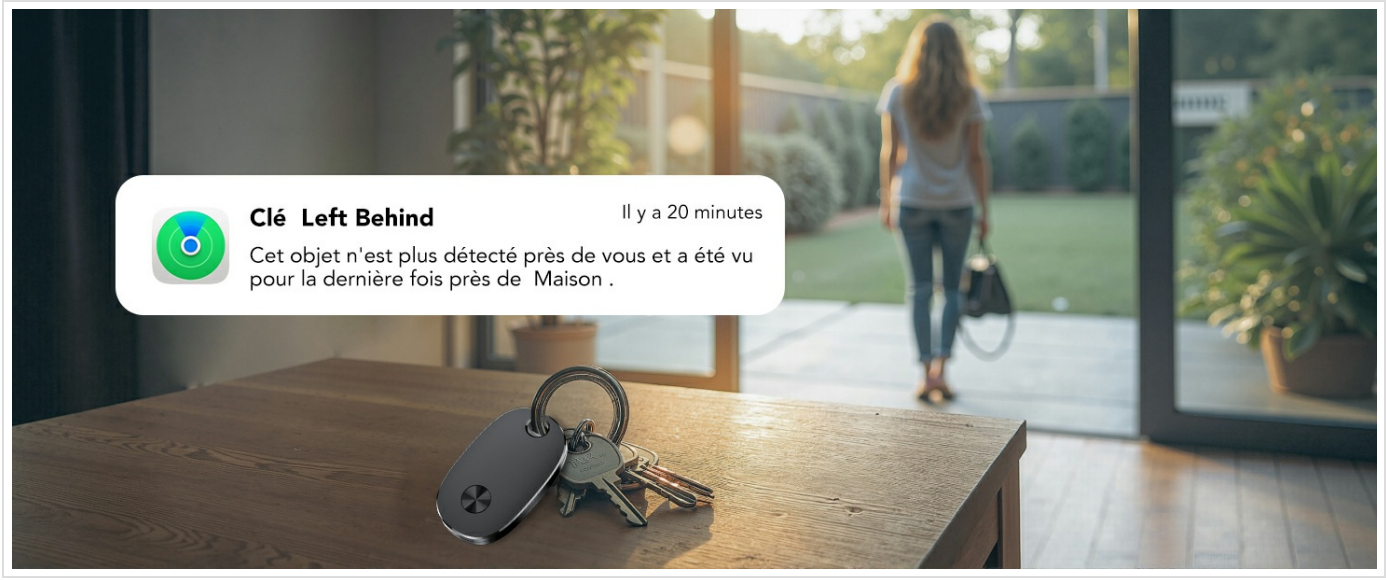


Image: A "Left Behind" notification on an iPhone, reminding the user about forgotten keys.

4.4 Group Sharing

The weTag Pro supports sharing its location with multiple Apple devices, making it ideal for family use or shared items.

- A single weTag Pro can be shared with up to 5 Apple devices.
- One Apple ID account can connect up to 32 weTag Pro trackers.



Image: Group sharing feature, allowing multiple users to track the same item.

5. Maintenance

5.1 Battery Replacement

The weTag Pro uses a replaceable CR2032 coin cell battery. When the battery is low, the Find My app will send a notification. A spare battery is included with your purchase.

1. **Step 1: Disassemble:** Gently pry open the weTag Pro casing using a small tool or your fingernail at the designated notch.
2. **Step 2: Remove:** Carefully remove the old CR2032 battery.
3. **Step 3: Replace:** Insert the new CR2032 battery with the positive (+) side facing up. Ensure it is securely seated. Close the casing until it clicks into place.

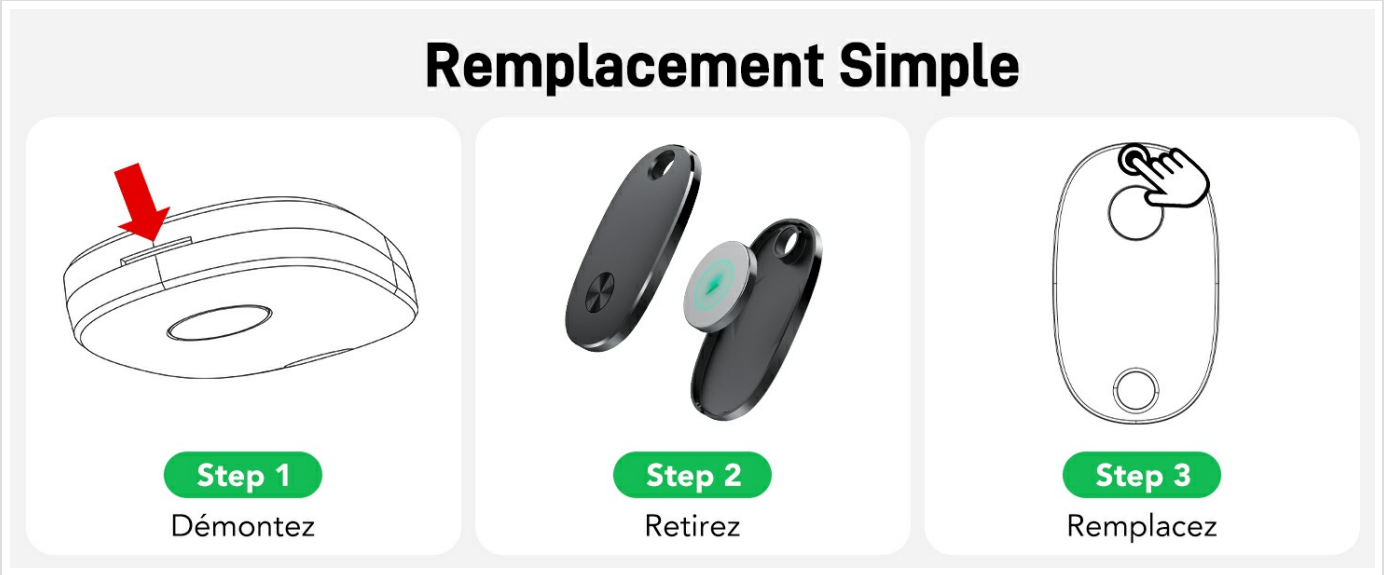


Image: Illustrated guide for simple battery replacement.

5.2 Cleaning

Wipe the weTag Pro with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

6. Troubleshooting

Problem	Possible Cause	Solution
Cannot pair weTag Pro.	Bluetooth is off; Find My app not open; tracker battery low; tracker not activated.	Ensure Bluetooth is on. Open Find My app. Press the tracker button once. Replace battery if needed. Ensure you are using an iOS device.
Tracker not making sound.	Out of Bluetooth range; battery low; sound feature not activated in app.	Ensure tracker is within 200 feet. Check battery level and replace if necessary. Tap "Play Sound" in the Find My app.
Location not updating.	Tracker is in an isolated area with no Apple devices nearby; battery low.	The Find My network relies on nearby Apple devices. Location updates may be less frequent in remote areas. Check battery.
Frequent "Left Behind" alerts.	Tracker is frequently separated from your iOS device.	This is a feature to prevent loss. If alerts are unwanted for a specific item, you may need to adjust settings in the Find My app or consider if the item truly needs constant tracking.

7. Specifications

Brand	aowoka
Model Number	weTag Pro

Compatible Devices	iOS Smartphones (Apple Find My network)
Connectivity Technology	Bluetooth
Control Method	Application (Apple Find My)
Battery Type	1 x CR2032 (included, replaceable)
Average Battery Life	Up to 730 days (2 years)
Range	Up to 200 feet (Bluetooth)
Water & Dust Resistance	IP67 (submersible up to 3 feet for 30 minutes)
Material	Polycarbonate (PC)
Weight	6g

8. Warranty & Support

The aowoka weTag Pro comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures free replacement of the product if it fails due to such issues.
For technical support, warranty claims, or any questions regarding your weTag Pro, please contact aowoka customer service through the retailer where you purchased the product or visit the official aowoka website for contact information.

© 2024 aowoka. All rights reserved.