Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SEDETA desk

SEDETA 67" Farmhouse L Shaped Desk User Manual

Model: desk

Introduction Safety Information Setup & Assembly Operating Instructions Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

Thank you for purchasing the SEDETA 67" Farmhouse L Shaped Desk. This executive home office desk is designed to provide a spacious and functional workspace with integrated storage and power solutions. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use and longevity of your desk.



Figure 1.1: The SEDETA 67" Farmhouse L Shaped Desk, showcasing its spacious design and integrated features in a modern home office environment.

2. Safety Information

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Keep all packaging materials away from children.
- Assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the desk or shelves. Refer to the specifications for maximum load capacity.
- Use the integrated power outlets and USB ports only for compatible devices and within the specified electrical ratings. Always use the on-off switch to power off the charging station when not in use or during electrical storms.
- Keep liquids away from electrical components.
- This product is designed for indoor use only.

3. Setup & Assembly

The SEDETA L Shaped Desk requires assembly. It is recommended that**two people** assemble this desk for ease and safety. A **screwdriver** is required for assembly; other tools are not included.

3.1 Package Contents

Before beginning assembly, verify that all parts are present and undamaged. The package includes all necessary desk

components and hardware. Refer to the included assembly instructions for a detailed list of numbered parts.

3.2 Assembly Steps

1. Unpack all components and lay them out on a protected surface.
2. Follow the step-by-step pictorial instructions provided in the separate assembly manual. Each part is numbered for easy identification.
3. Begin by assembling the main desk frame, ensuring all connections are secure.
4. Proceed to attach the L-shaped extension and the drawer cabinet.
5. Install the three storage drawers, ensuring the full-pull slides operate smoothly.
6. Attach the open storage shelves and adjust the lower shelves to your desired height.
7. Finally, install the power outlet module into the designated cutout on the desktop.
8. Once assembled, carefully move the desk to its final position. Avoid pushing it too tightly into a corner until all final adjustments or access to the back are complete.



Figure 3.1: Desk dimensions and maximum load capacity. The desk measures 67"W x 55.1"D x 29.5"H, with a maximum load capacity of

200 lbs.



Figure 3.2: An aerial view illustrating the 67" and 55.1" lengths of the L-shaped desk, highlighting the spacious desktop for study and work.

4. Operating Instructions

4.1 Drawer System

The desk features three integrated storage drawers. The top two drawers are standard storage drawers, while the bottom drawer is a file drawer designed to accommodate both A4 and letter-sized files. All drawers are equipped with full-pull slides for smooth and complete extension.



Figure 4.1: Detailed view of the three drawers, demonstrating their capacity for general storage, letter-sized files, and A4-sized files.

4.2 Storage Shelves

The side of the desk includes open storage shelves. The lower shelves are adjustable, allowing you to customize the storage space to fit various items, including a CPU tower. This flexibility helps meet diverse storage needs.



Figure 4.2: The adjustable shelf feature, demonstrating its utility for tiered storage or as a dedicated CPU stand.

4.3 Integrated Charging Station

The desk is equipped with a convenient charging station featuring 2 AC outlets (120V/12A) and 2 USB ports (5V/2A). This allows you to power and charge up to four devices simultaneously. A 6.5-foot power cord is provided. The charging station includes an on-off switch for safe and easy power management.

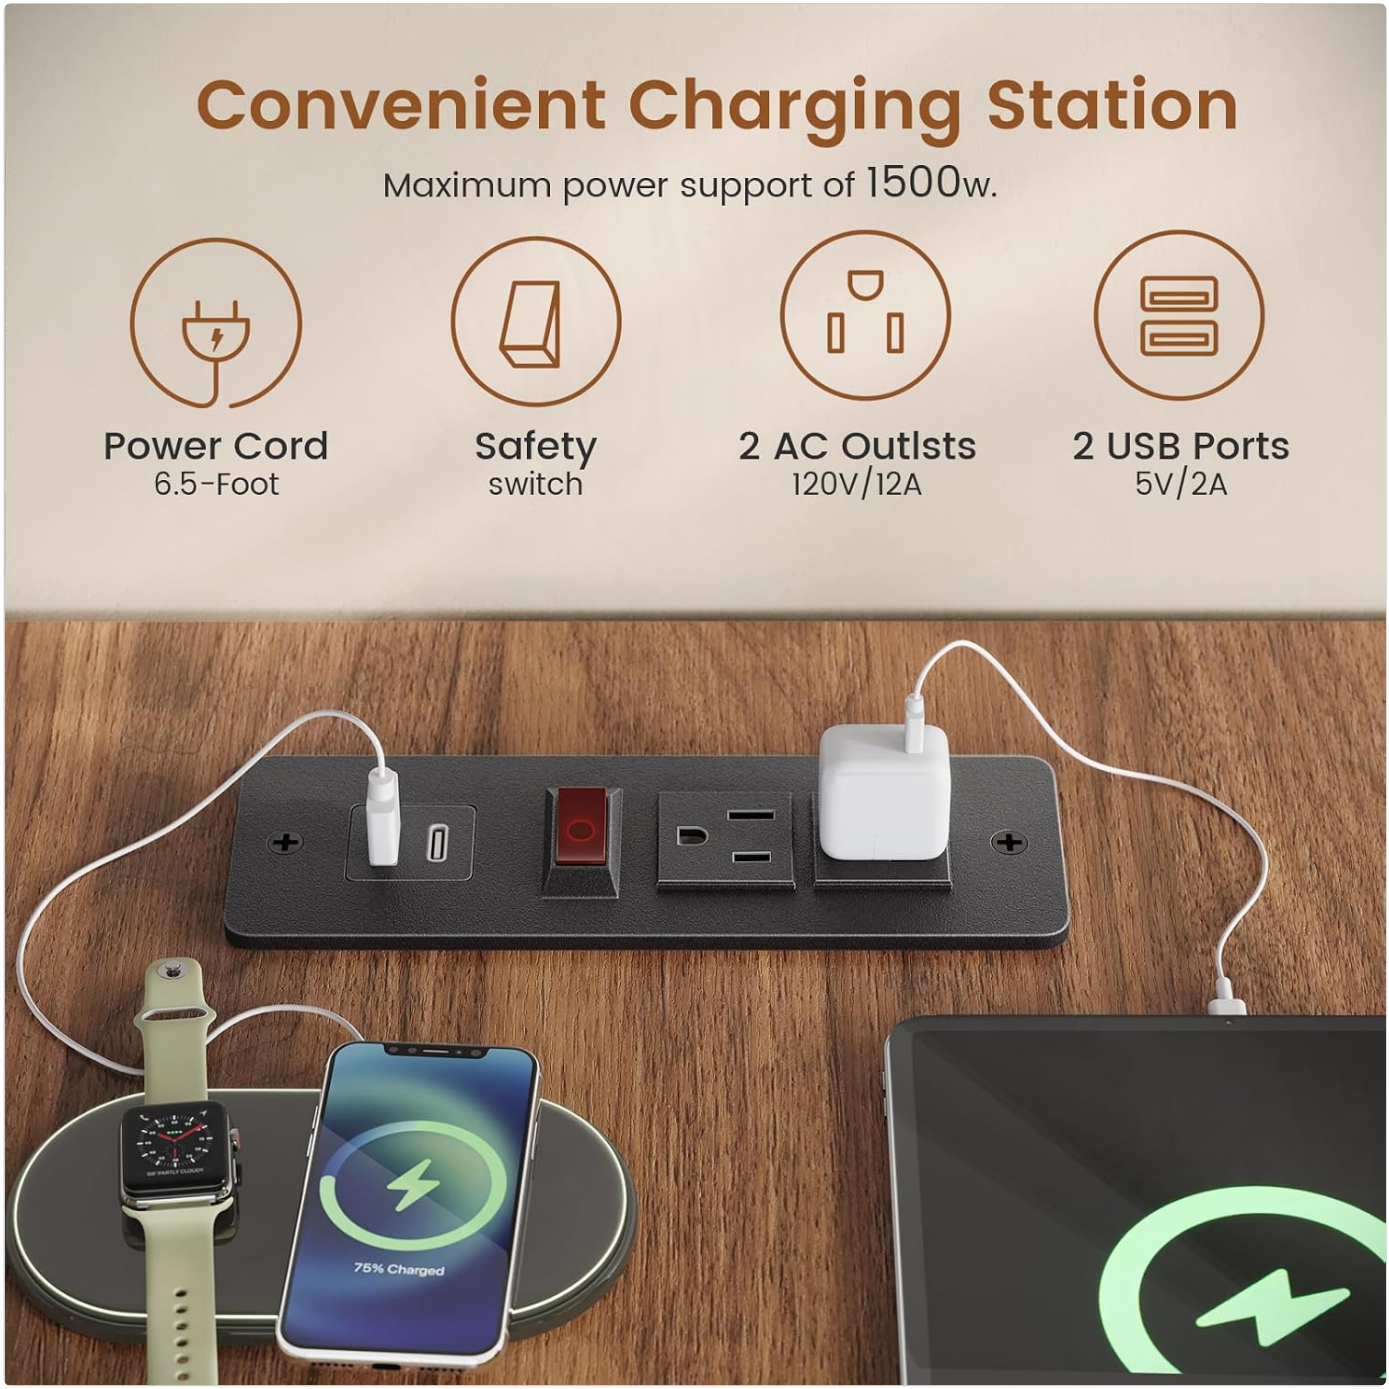


Figure 4.3: The integrated charging station, highlighting its 2 AC outlets, 2 USB ports, safety switch, and 6.5-foot power cord for convenient device charging.

5. Maintenance

To ensure the longevity and appearance of your SEDETA desk, follow these simple maintenance guidelines:

- **Dust Regularly:** Use a soft, dry cloth to dust the desk surfaces regularly.
- **Cleaning Spills:** Wipe up spills immediately with a damp cloth and dry thoroughly. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Drawer Slides:** If drawer slides become stiff, a small amount of silicone lubricant can be applied to ensure smooth operation.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the wood finish.

6. Troubleshooting

This section addresses common issues you might encounter with your SEDETA desk.

Problem	Possible Cause	Solution
Desk is wobbly or unstable.	Loose fasteners; uneven floor.	Ensure all screws and bolts are tightened. Check if the desk is on a level surface; use shims if necessary.
Drawers do not slide smoothly.	Misalignment; debris in slides; dry slides.	Check drawer alignment and ensure nothing is obstructing the slides. Clean any debris. Apply a small amount of silicone lubricant to the slides.
Charging station not working.	Power switch off; not plugged in; overloaded.	Ensure the on-off switch is in the 'on' position. Verify the desk's power cord is securely plugged into a working wall outlet. Do not exceed the maximum power support of 1500W.
Damaged or missing parts upon arrival.	Shipping damage; packaging error.	Do not attempt to assemble. Contact SEDETA customer service immediately for a free replacement or partial refund.

7. Specifications

Feature	Detail
Brand	SEDETA
Model Name	l shaped desk with drawers
Product Dimensions	55.1"D x 67"W x 29.5"H
Item Weight	110 Pounds
Color	Brown
Style	Farmhouse
Base Material	Engineered Wood
Top Material Type	Engineered Wood
Number of Drawers	3 (including 1 file drawer)
Number of Shelves	3 (open shelves, lower adjustable)
Charging Station	2 AC Outlets (120V/12A), 2 USB Ports (5V/2A)
Power Cord Length	6.5-Foot
Maximum Power Support	1500W (for charging station)
Required Assembly	Yes
Recommended People for Assembly	2
Tools Recommended for Assembly	Screw Driver

Feature	Detail
Product Care Instructions	Dust Regularly

8. Warranty & Support

SEDETA is committed to providing high-quality products and customer satisfaction.

8.1 Product Warranty

For specific warranty details and duration, please refer to the warranty information included with your product packaging or contact SEDETA customer service directly. Generally, SEDETA offers support for manufacturing defects and issues arising from normal use.

8.2 Customer Support

If your executive desk arrives damaged, scratched, or with parts missing, please do not hesitate to contact SEDETA customer service. We will replace it for free or provide a partial refund as applicable.
For any questions, concerns, or support needs, please reach out to SEDETA customer service through the retailer's platform where you purchased the product or visit the official SEDETA store page on Amazon for contact information.

Thank you for choosing SEDETA.

© 2025 SEDETA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FJFPTKYB

More documents and user manuals: **https://manuals.plus/**