Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SJCAM C200PRO

SJCAM C200PRO 4K Action Camera User Manual

Model: C200PRO

1. Introduction

This manual provides essential information for the safe and effective operation of your SJCAM C200PRO 4K Action Camera. Please read this manual thoroughly before using the device and retain it for future reference.

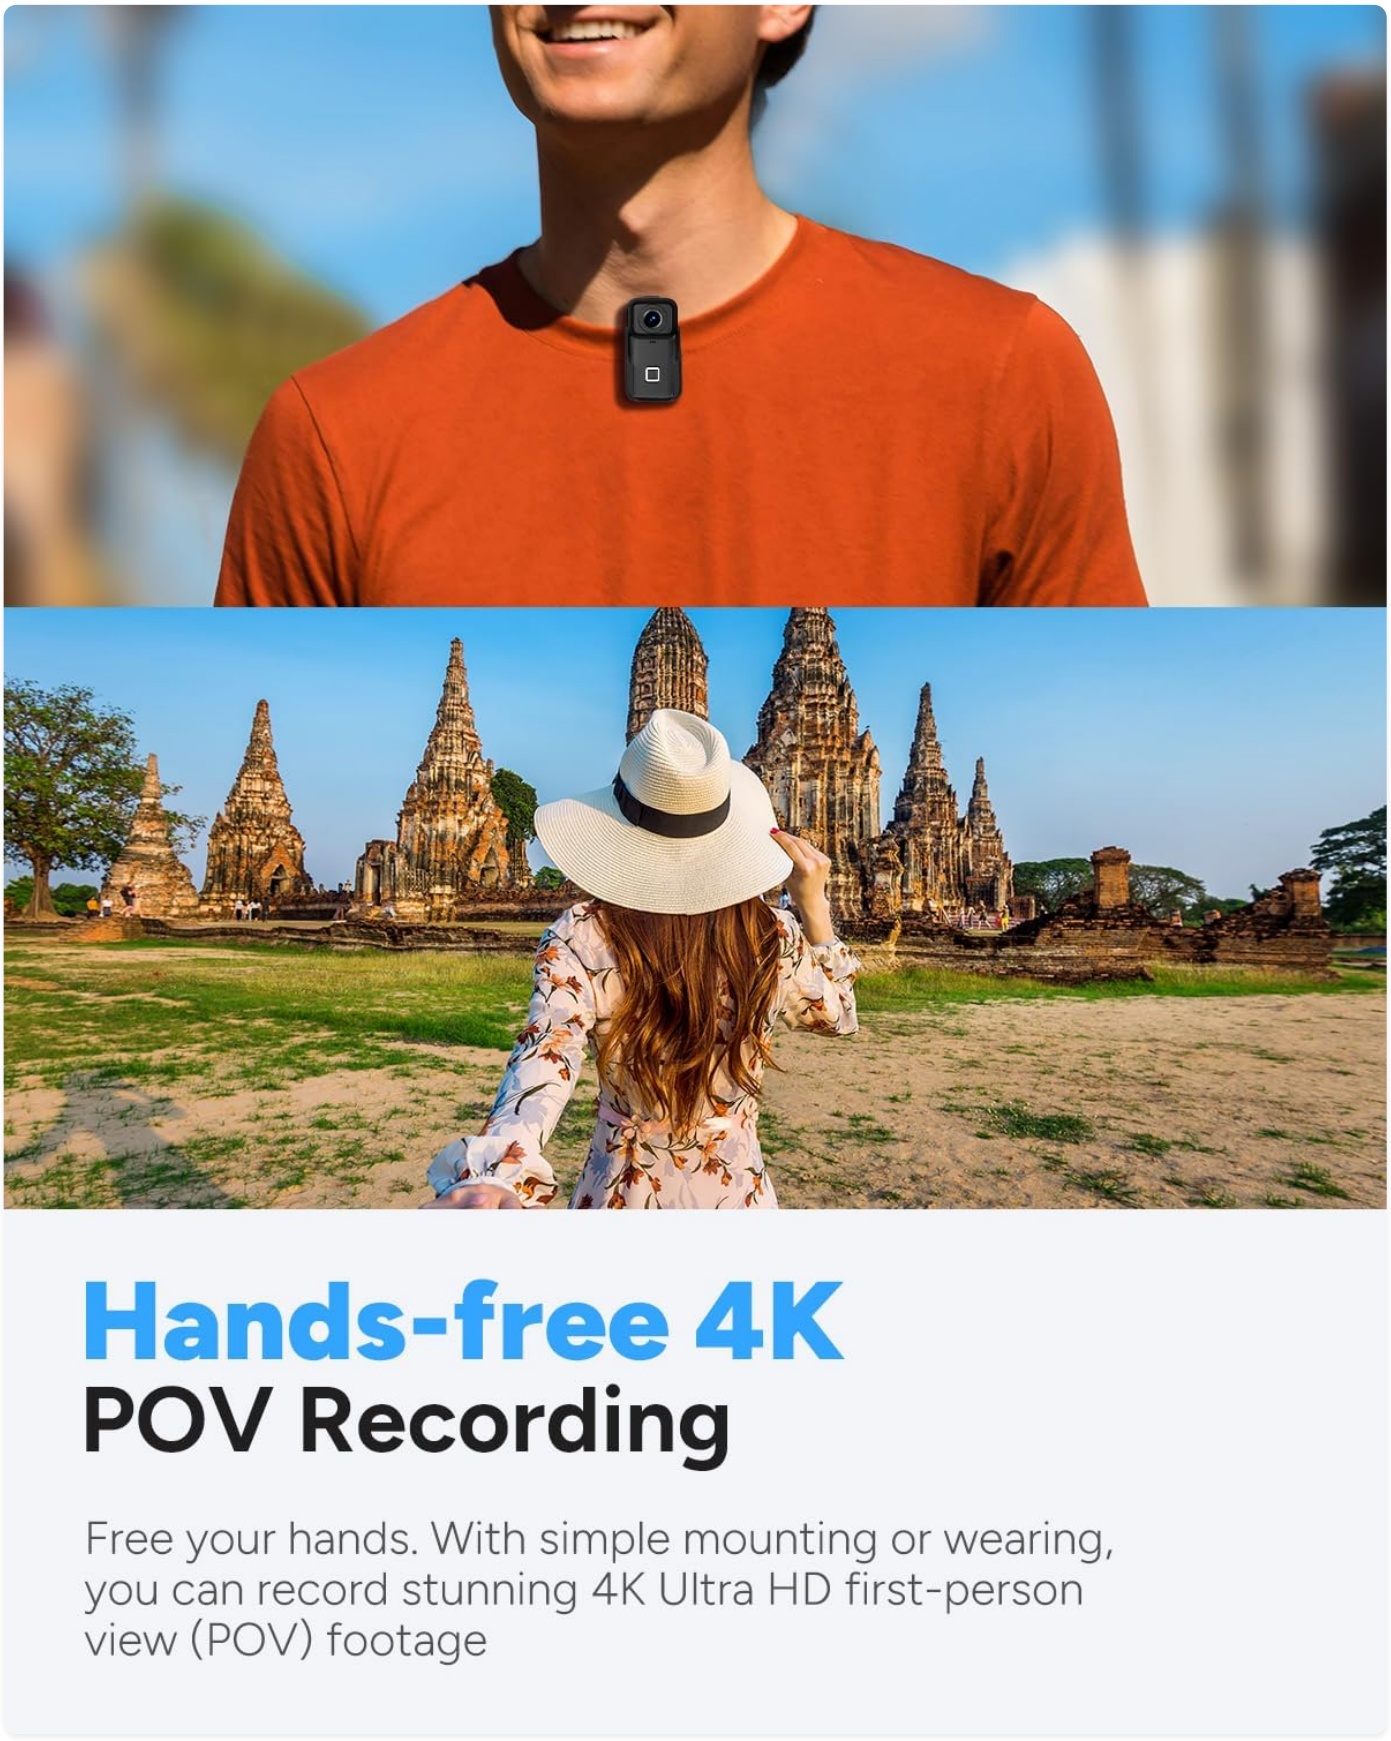


Figure 1: SJCAM C200PRO 4K Action Camera. This image shows the compact, black action camera from a front-side angle, highlighting its lens and main body.

2. What's in the Box

Verify that all items are present in the package:

- SJCAM C200PRO 4K Action Camera

- Waterproof Case (for depths up to 30 meters)
- Mounting Accessories (various clips, bases, and adapters)
- USB Charging Cable
- User Manual (this document)

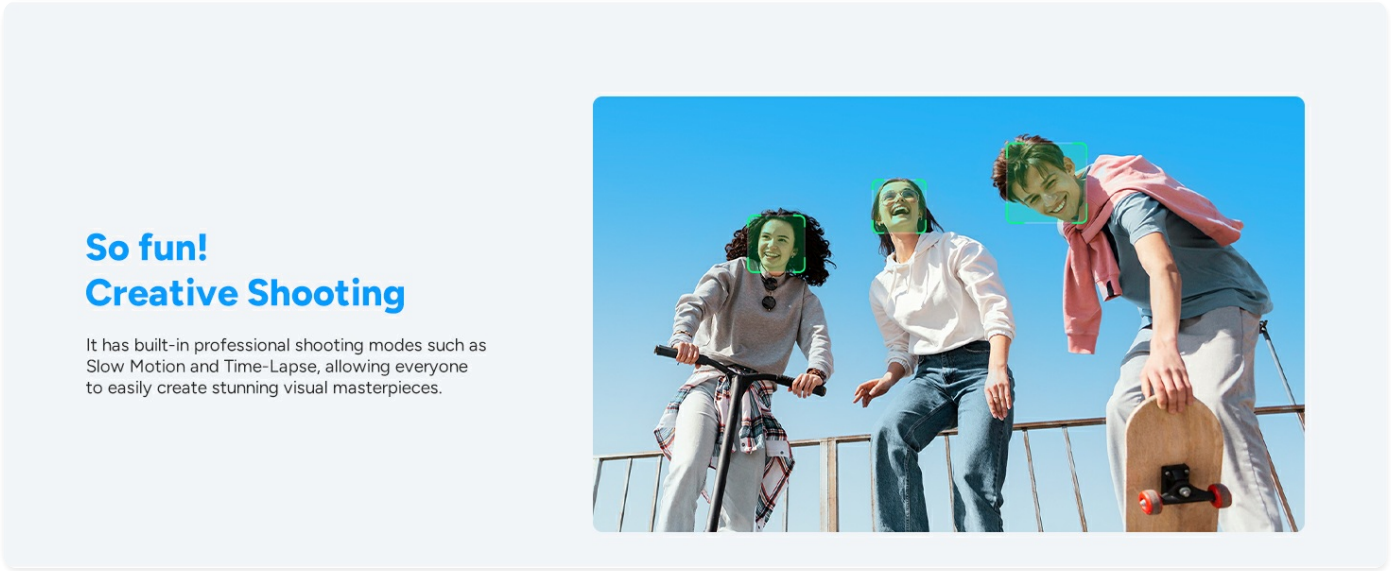


Figure 2: Included Accessories. This image displays the SJCAM C200PRO camera alongside its various mounting accessories, including the waterproof housing, frame mount, and adhesive bases.

3. Camera Overview

The SJCAM C200PRO is a compact 4K action camera designed for versatile recording. Key features include:

- **4K 30fps Video & 20MP Photos:** High-resolution capture for detailed visuals.
- **6-Axis Gyroscopic Stabilization:** Ensures smooth footage even during dynamic activities.
- **Waterproof Design:** Up to 5 meters (16 ft) without a case, and 30 meters (98 ft) with the included waterproof case.
- **1.3-inch HD Touchscreen:** For easy navigation and settings adjustment.
- **Dual-band Wi-Fi (2.4/5GHz):** For quick file transfer and remote control via smartphone.
- **HDR Technology:** Enhances color accuracy and contrast.



Figure 3: Compact Design. This image illustrates the small, lightweight nature of the SJCAM C200PRO, showing it held in a hand to emphasize its portability.

4. Setup

4.1. Charging the Battery

1. Connect the camera to a USB power source (e.g., computer, USB wall adapter) using the provided USB cable.
2. The charging indicator light will illuminate.
3. Charging is complete when the indicator light turns off or changes color (refer to camera display for battery status).

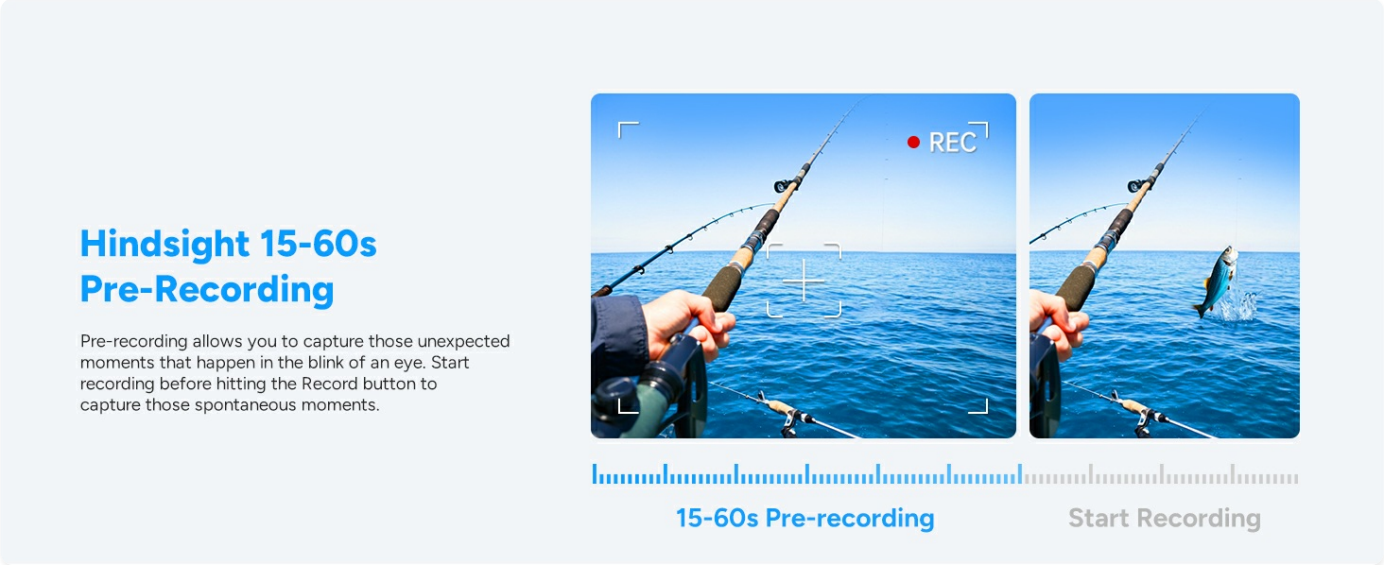


Figure 4: Battery Life. This image highlights the camera's extended battery life, showing the camera next to a timer indicating 150 minutes of operation.

4.2. Inserting a MicroSD Card

A Class 10 or higher MicroSD card (up to 128GB recommended) is required for recording. The card is not included.

1. Locate the MicroSD card slot on the camera.
2. Insert the MicroSD card with the gold contacts facing the correct direction (refer to the camera's diagram near the slot).
3. Gently push the card until it clicks into place. To remove, push it again until it springs out.

4.3. Powering On/Off

- **To Power On:** Press and hold the Power/Mode button for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power/Mode button for a few seconds until the screen turns off.

5. Operating the Camera

5.1. Basic Recording

1. **Video Recording:** From the main screen, ensure video mode is selected. Press the Shutter/OK button to start recording. Press again to stop.
2. **Photo Capture:** Switch to photo mode (usually by short-pressing the Power/Mode button). Press the Shutter/OK button to take a photo.

5.2. Navigating the Touchscreen Menu

Swipe on the 1.3-inch HD touchscreen to access different modes and settings. Tap icons to select options or adjust parameters.

5.3. Image Stabilization

The C200PRO features 6-axis gyroscopic stabilization. This feature is typically enabled by default and helps to smooth out shaky footage. Ensure it is active in settings for optimal video quality during action shots.

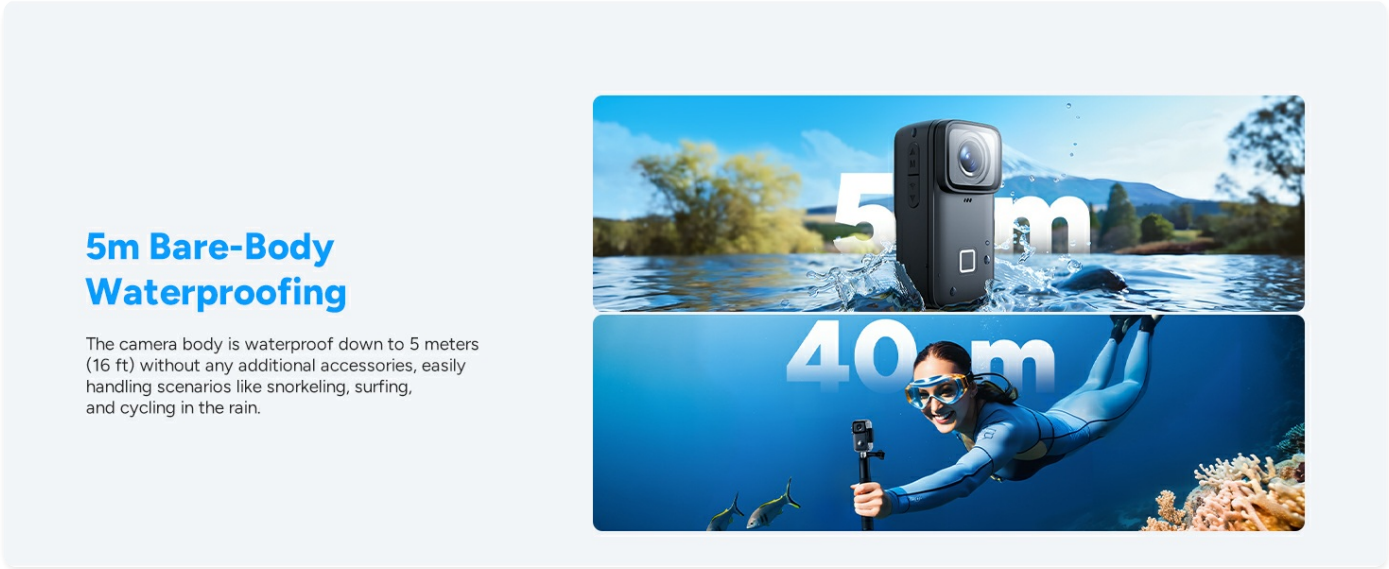


Figure 5: Image Stabilization. This image demonstrates the effectiveness of the 6-axis gyro stabilization, showing a blurred image on the left (stabilization off) and a clear image on the right (stabilization on) during a mountain biking scene.

5.4. Wi-Fi Connectivity

Connect your C200PRO to the SJCAM Zone app on your smartphone for remote control, live preview, and file transfer.

1. Download the "SJCAM Zone" app from your smartphone's app store.
2. On the camera, enable Wi-Fi from the settings menu. The camera's Wi-Fi name (SSID) and password will be displayed.
3. On your smartphone, go to Wi-Fi settings and connect to the camera's Wi-Fi network.
4. Open the SJCAM Zone app. The camera should now be connected.

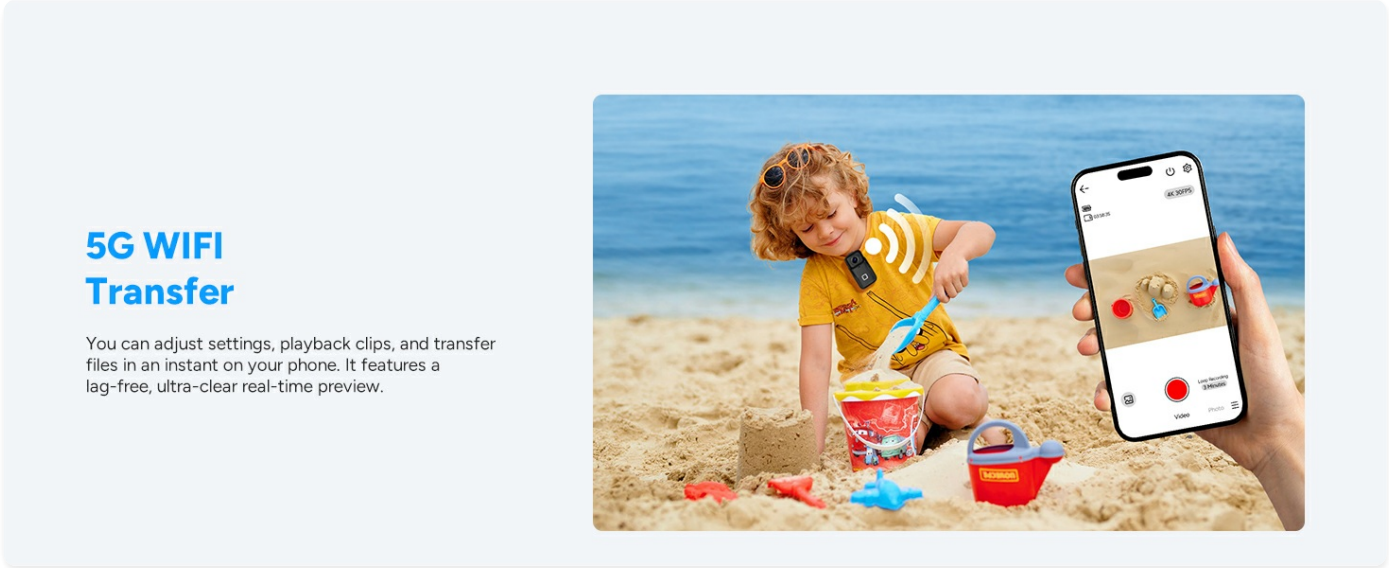


Figure 6: Wi-Fi Transfer. This image shows a child playing on a beach while the camera is recording, with a smartphone displaying the live camera feed via Wi-Fi, illustrating seamless file transfer and remote control.

5.5. Waterproof Usage

The C200PRO is waterproof to 5 meters (16 ft) without its case. For deeper water activities, use the included waterproof case.

- **Bare Camera:** Suitable for splashes, rain, and shallow water activities like snorkeling. Ensure all ports are securely

closed before exposure to water.

- **With Waterproof Case:** Allows diving up to 30 meters (98 ft). Always ensure the case is properly sealed before submerging.

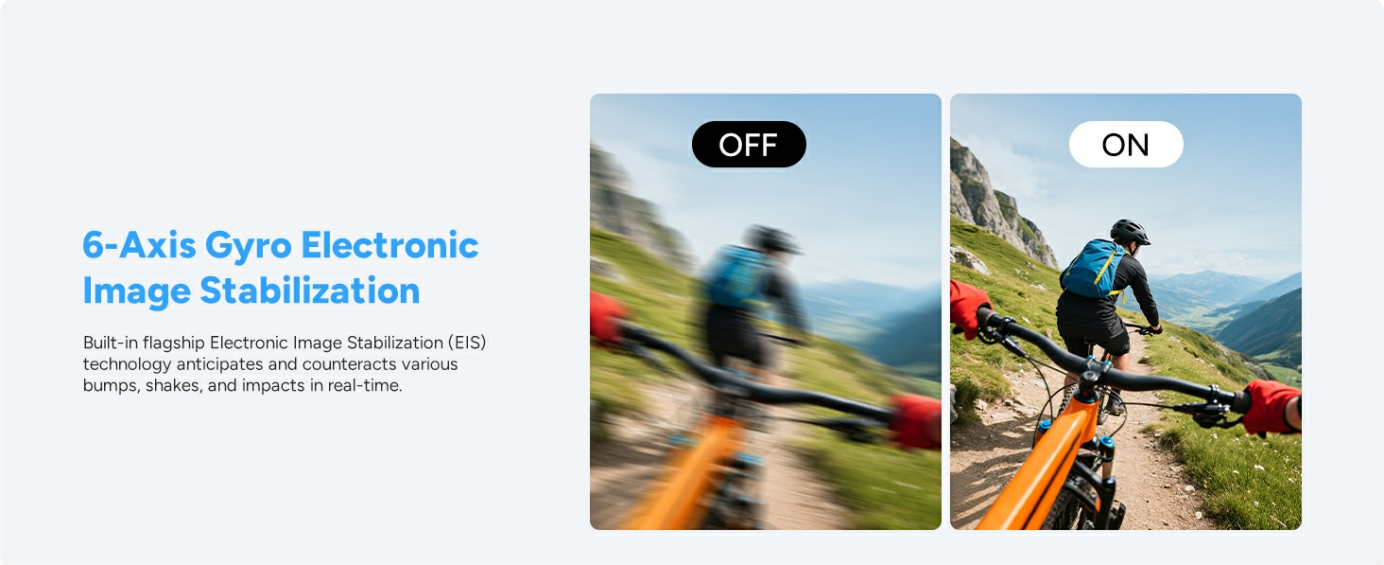


Figure 7: Waterproofing. This image visually represents the camera's waterproofing capabilities, showing it both in a splash of water (5m bare-body) and with a diver underwater (40m with case, though product states 30m).

6. Maintenance

- **Cleaning:** Use a soft, lint-free cloth to clean the camera lens and screen. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Waterproof Case Care:** After use in saltwater, rinse the waterproof case with fresh water and allow it to air dry. Check the O-ring seal regularly for debris or damage.

7. Troubleshooting

Problem	Possible Solution
Camera does not power on.	Ensure the battery is charged. Try connecting to a power source.
Cannot record video/take photos.	Check if a MicroSD card is inserted and formatted. Ensure there is sufficient space.
Wi-Fi connection issues.	Ensure Wi-Fi is enabled on the camera and smartphone. Restart both devices. Check app permissions.
Footage is shaky.	Verify that 6-axis stabilization is enabled in the camera settings.
Camera freezes.	Press and hold the Power button for 10 seconds to force a shutdown. If persistent, try updating firmware or resetting to factory settings.

8. Specifications

Feature	Detail
Model	C200PRO
Video Resolution	Up to 4K (3840x2160) at 30fps
Photo Resolution	20MP
Image Stabilization	6-Axis Gyroscopic (EIS)
Waterproofing (Bare)	5 meters (16 ft)
Waterproofing (With Case)	30 meters (98 ft)
Display	1.3-inch HD Touchscreen
Wi-Fi	2.4GHz / 5GHz
Storage	MicroSD card, up to 128GB (Class 10 or higher)
Battery Life	Approximately 150 minutes (at 1080p)
Weight	78g (2.7 oz)
Connectivity	USB
Sensor Type	CMOS
Lens Type	Wide Angle

9. Warranty and Support

SJCAM products typically come with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official SJCAM website.
For technical support, firmware updates, or further assistance, please visit the official SJCAM support page or contact their customer service.
Official SJCAM Website: www.sjcam.com

© 2026 SJCAM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FJFSK6G9

More documents and user manuals: **https://manuals.plus/**