Whirlpool WHK26404XP7E

Whirlpool WHK26404XP7E No-Frost Combined Refrigerator User Manual

Model: WHK26404XP7E

1. Introduction

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Whirlpool WHK26404XP7E No-Frost Combined Refrigerator. Please read this manual thoroughly before using the appliance and keep it for future reference.
For further assistance, please refer to the official Whirlpool support resources.

2. Safety Information

Important Safety Instructions:

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Keep ventilation openings clear of obstruction.
- Unplug the appliance before cleaning or performing maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. Setup and Installation

3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

3.2 Placement

- Place the refrigerator on a firm, level surface.
- Ensure adequate ventilation around the appliance. Maintain a minimum distance of 10 cm from the rear wall and 5 cm from side walls.
- Avoid direct sunlight and heat sources (e.g., radiators, ovens).

3.3 Electrical Connection

Connect the appliance to a properly grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate.

3.4 Initial Start-up

After placement, wait at least 4 hours before plugging in the appliance to allow the refrigerant to settle. Once plugged in, set the temperature control to the recommended setting and allow the refrigerator to cool for several hours before loading food.

4. Operating Instructions

4.1 Control Panel

The control panel is located on the upper part of the refrigerator door. It allows you to adjust temperature settings and activate special functions.



Image 1: Front view of the Whirlpool WHK26404XP7E combined refrigerator, showing the control panel on the upper door.

4.2 Temperature Settings

Use the control panel to set the desired temperature for both the refrigerator and freezer compartments. Recommended settings are typically 4°C (39°F) for the refrigerator and -18°C (0°F) for the freezer.

4.3 Food Storage Guidelines

- **Refrigerator Compartment:** Store fresh foods, dairy products, and cooked meals. Utilize the various shelves and drawers for optimal organization.
- **Crisper Drawers:** Designed for fruits and vegetables to maintain freshness.

- **Freezer Compartment:** Store frozen foods. Ensure packages are sealed to prevent freezer burn.



Image 2: Interior view of the refrigerator compartment, showing adjustable shelves, door bins, and crisper drawers for organized food storage.



Image 3: Close-up view of the "Crisper" drawer, designed to maintain optimal humidity for fruits and vegetables.



Image 4: Detail of a transparent door bin, providing additional storage for bottles and smaller items.



Image 5: Interior view of the freezer compartment, featuring multiple transparent drawers for organized storage of frozen goods.

5. Maintenance and Cleaning

5.1 Cleaning the Interior

Unplug the appliance before cleaning. Clean the interior regularly with a solution of mild detergent and warm water. Rinse thoroughly and dry with a soft cloth. Avoid abrasive cleaners or solvents.

5.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. For stainless steel finishes, use a specialized stainless steel cleaner. Do not use abrasive pads or harsh chemicals.

5.3 No-Frost System

This appliance features a No-Frost system, which automatically prevents ice build-up in the freezer compartment,

eliminating the need for manual defrosting.

5.4 Door Seals

Regularly check and clean the door seals to ensure a tight closure. A damaged or dirty seal can lead to inefficient operation.

6. Troubleshooting

Before contacting service, please check the following common issues:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply.	Check if the plug is properly inserted and the circuit breaker is not tripped.
Refrigerator is not cold enough.	Door not closed properly; temperature setting too high; excessive food load.	Ensure door is sealed; adjust temperature setting lower; avoid overloading.
Unusual noises.	Appliance not level; objects vibrating against the unit.	Adjust leveling feet; ensure nothing is touching the back or sides.
Water on the floor.	Drain hole blocked.	Clear the drain hole at the back of the refrigerator compartment.

7. Specifications

Feature	Detail
Model Number	WHK26404XP7E
Brand	Whirlpool
Type	Combined Refrigerator (Fridge-Freezer)
Total Capacity	355 Liters (approximate)
Dimensions (H x W x D)	210.2 cm x 66.1 cm x 70.7 cm
Weight	83 kg
Defrost System	Total No-Frost
Color/Finish	Inox (Stainless Steel look)

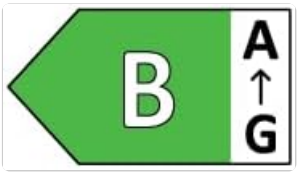


Image 6: Energy efficiency label, indicating the appliance's energy class (B in this example, based on the image provided).

8. Warranty and Support

For warranty information, please refer to the warranty card included with your appliance or visit the official Whirlpool

website. For technical support, spare parts, or service requests, please contact Whirlpool customer service.
Whirlpool Official Website: www.whirlpool.com

© 2025 Whirlpool Corporation. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question