Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Voukad H1972

Voukad H1972 Body Trimmer Instruction Manual

Model: H1972 | Brand: Voukad

1. Product Overview

The Voukad H1972 Body Trimmer is designed for precise and safe hair removal across various body areas. It features an upturned carbon steel blade for sensitive zones, a constant voltage engine to prevent painful pulling, and an integrated adjustable guard for versatile trimming lengths. The device is waterproof, includes an LED spotlight, and comes with a convenient charging dock.

2. Safety Information

- Always use with caution to avoid nicks and cuts, especially on sensitive skin.
- Do not submerge the trimmer in water; only rinse it.
- Allow the trimmer to cool down before using it again to prevent burns.
- Do not use the trimmer while it is charging.
- Keep the trimmer clean and dry when not in use to prevent bacterial growth.
- Avoid sharing the trimmer with others to prevent cross-contamination.
- Always follow the instructions provided with the product for safe and optimal operation.

3. Package Contents

The Voukad H1972 Body Trimmer package includes the following items:

- Voukad H1972 Body Trimmer (Avocado Green)

- Charging Dock
- USB-C Charging Cable
- Integrated Adjustable Guard (5-in-1)
- Cleaning Brush
- Lubricating Oil

4. Setup and Charging

4.1 Initial Charge

Before first use, fully charge your trimmer. The device can be charged using the provided charging dock or directly via the USB-C cable.

- Place the trimmer onto the charging dock, ensuring the USB-C port aligns.
- Connect the USB-C cable to the dock and a suitable power source.
- Alternatively, plug the USB-C cable directly into the trimmer's charging port.
- A flashing red light indicates low battery and charging is in progress. The light will turn solid white when fully charged.
- A full charge takes approximately 1.5 hours and provides up to 240 minutes of runtime.



Figure 1: Voukad H1972 Body Trimmer in its charging dock, illustrating the charging process and organized storage.

4.2 Unlocking the Trimmer

If the light flashes and the machine cannot start, long-press the power switch for 5 seconds to unlock it.

5. Operating Instructions

5.1 Power On/Off

Press the power button once to turn the trimmer on or off.

5.2 Using the Adjustable Guard

The integrated adjustable guard allows for 5 different trimming lengths (2.5mm, 3.5mm, 4.5mm, 5.5mm, 6.5mm, 7.5mm). To adjust the length, simply slide the thumb switch on the guard.



Figure 2: Close-up of the integrated adjustable guard, showing the different length settings.

5.3 Wet/Dry Use

The Voukad H1972 is IPX7 waterproof, making it suitable for both wet and dry trimming. It can be used in the shower for convenience and easy cleanup.



Figure 3: The waterproof trimmer in use during a shower, highlighting its wet-use capability.

5.4 LED Spotlight

The built-in LED spotlight illuminates the trimming area, helping to navigate tricky spots and ensure no hair is missed, especially in low-light conditions.

5.5 Trimming Sensitive Areas

The specialized upturned carbon steel blade is designed to glide over sensitive skin without causing nicks or cuts. For best results in sensitive areas (e.g., groin, armpits), stretch the skin taut and move the trimmer slowly with the blade side down.

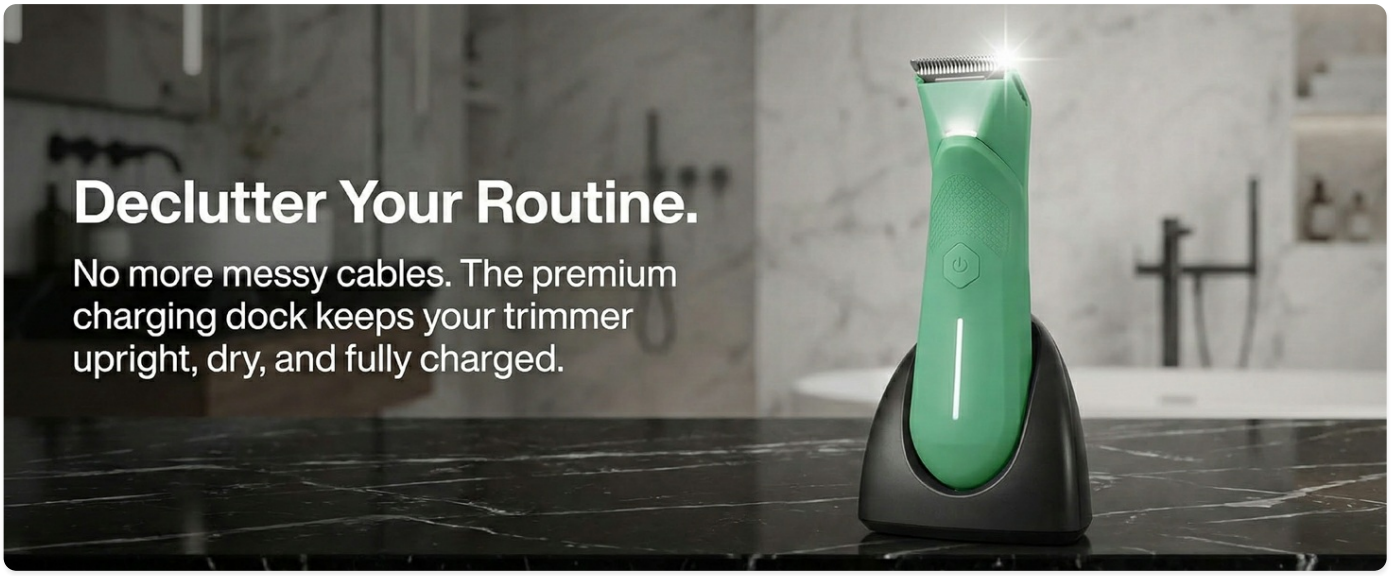


Figure 4: The trimmer's skin-safe blade demonstrated on a balloon, showing its ability to prevent nicks.

5.6 Constant Power Engine

The constant voltage engine maintains 100% torque and speed even when the battery is low, ensuring a smooth, pain-free trim without snagging or pulling hair.

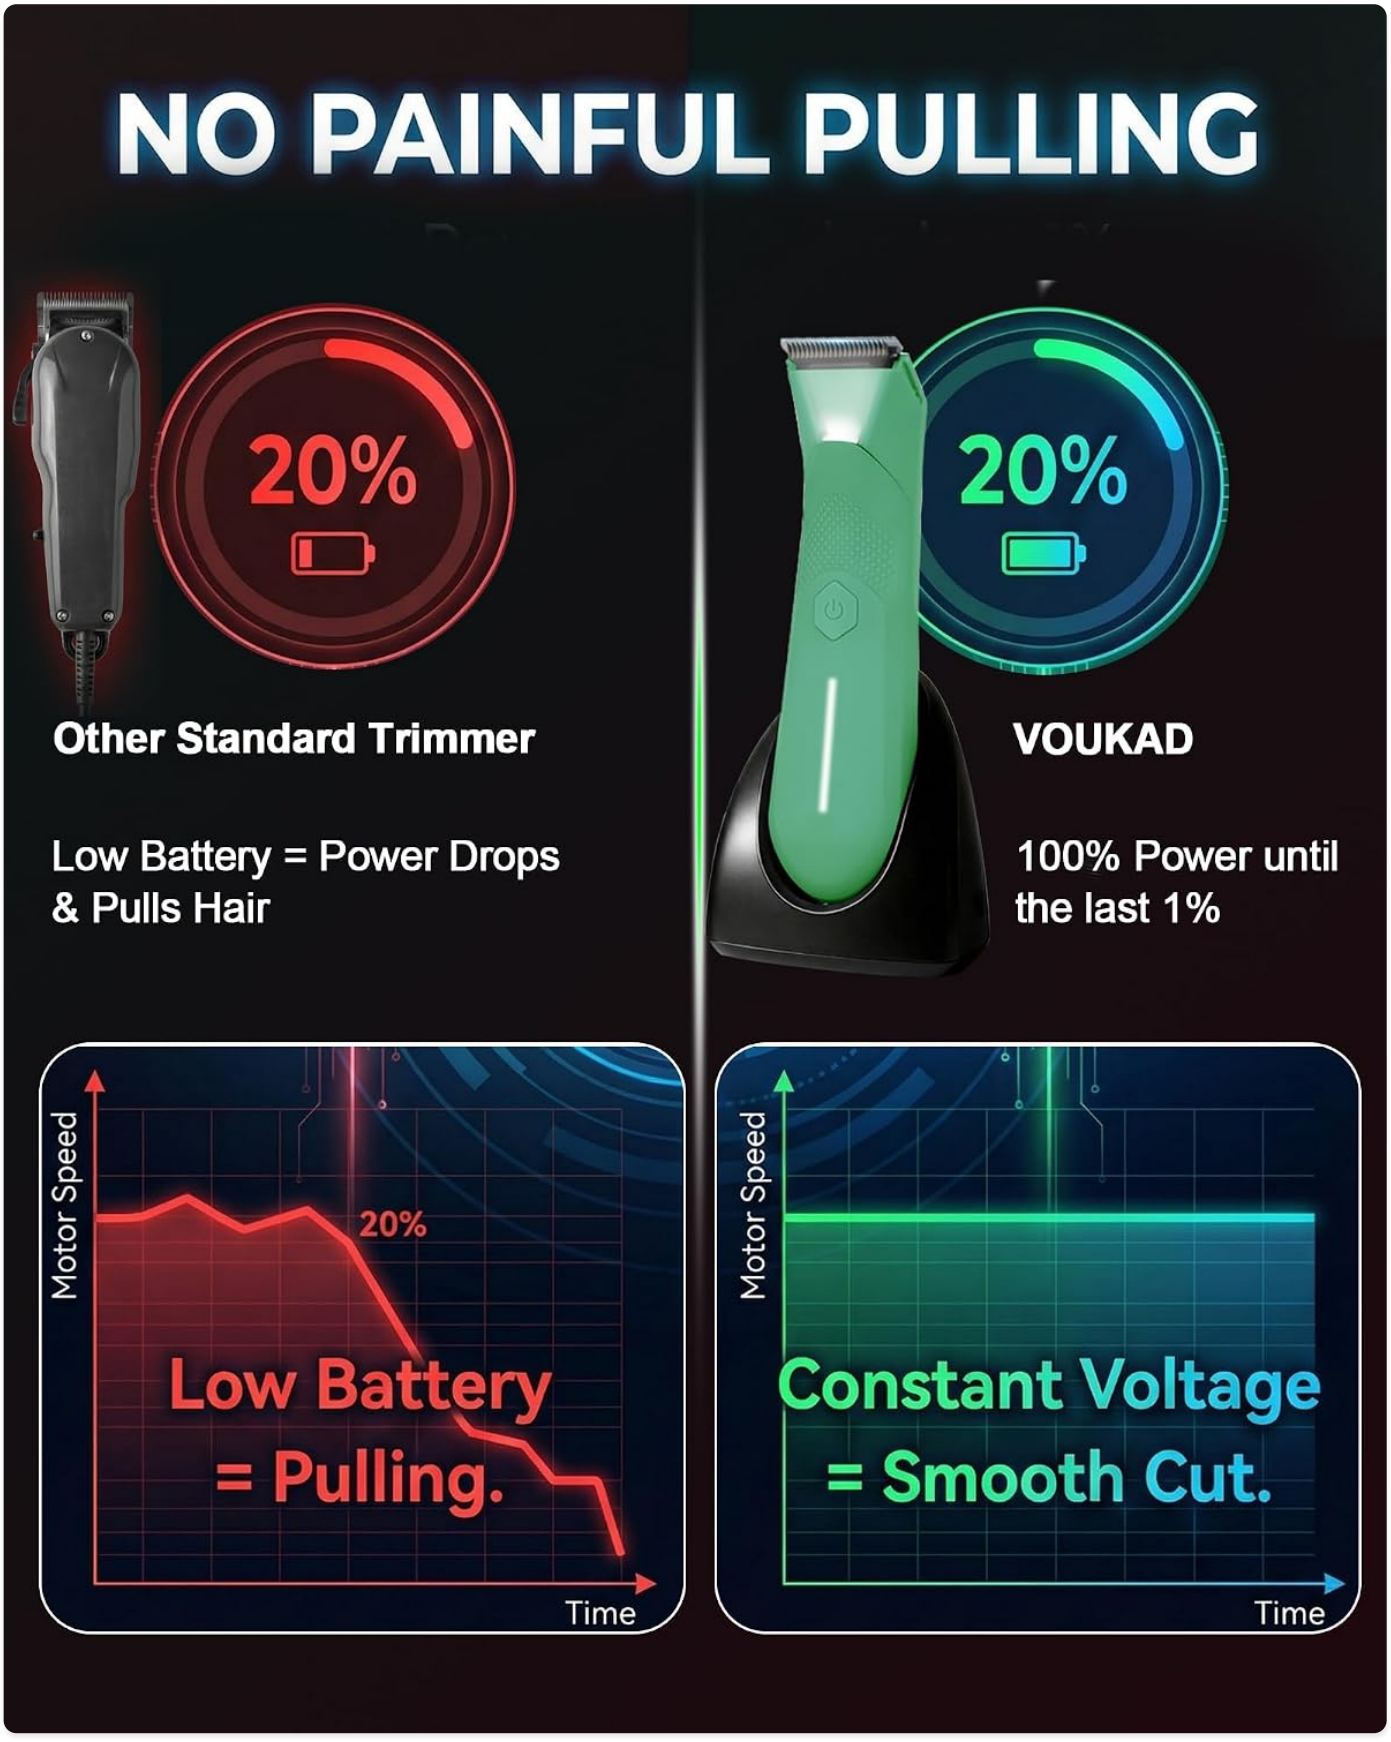


Figure 5: Diagram illustrating the constant power engine, which prevents hair pulling even with low battery.

6. Maintenance

6.1 Cleaning

After each use, rinse the trimmer head under running water. Use the provided cleaning brush to remove any trapped hairs. Ensure the trimmer is dry before storing or charging.

Your browser does not support the video tag.

Video 1: Demonstration of the Voukad H1972 Body Trimmer's waterproof feature and ease of cleaning under running water.

6.2 Lubrication

Periodically apply a small amount of the provided lubricating oil to the blades to maintain optimal performance and reduce friction. This helps ensure smooth operation and extends the life of the blades.

7. Troubleshooting

- **Trimmer not turning on:** Ensure the device is fully charged. If the light flashes, long-press the power button for 5 seconds to unlock the travel lock.
- **Hair pulling/snagging:** Ensure the blades are clean and lubricated. Charge the device fully as low battery can reduce power. Stretch the skin taut during use.
- **Reduced cutting performance:** Clean the blades thoroughly. Apply lubricating oil. Ensure the battery is adequately charged.

8. Specifications

Feature	Specification
Model Number	H1972
Brand	Voukad
Blade Material	Ceramic, Stainless Steel
Waterproof Rating	IPX7
Power Source	Battery Powered (1 12V battery included)
Charging Time	Approx. 1.5 hours
Running Time	Approx. 240 minutes
Special Features	Battery Indicator, Detachable Head, Lighted (LED), Travel Lock, Waterproof
Recommended Uses	Chest, Genital, Leg, Under Arm
UPC	850071880465

9. Warranty and Support

For any questions, concerns, or support needs regarding your Voukad H1972 Body Trimmer, please refer to the contact information provided in your product packaging or visit the official Voukad website for assistance.

© 2026 Voukad. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FJM2BXY7

More documents and user manuals: **https://manuals.plus/**