**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**MXV H21007**

# MXV 70-Inch Fireplace TV Stand with 36-Inch Electric Fireplace

Model: H21007
Brand: MXV

## Important Safety Information

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not overload the TV stand. Ensure the weight of your television and other items does not exceed the stand's maximum capacity.
- Place the TV stand on a level, stable surface to prevent tipping.
- Keep flammable materials at least 3 feet (0.9 meters) away from the front of the electric fireplace and away from the sides and rear.
- Do not operate the fireplace with a damaged cord or plug, or if the heater malfunctions or has been dropped or damaged in any manner.
- Ensure proper ventilation around the fireplace unit. Do not block air vents.
- Unplug the fireplace from the power outlet before performing any maintenance or cleaning.
- This product is intended for indoor use only.

## Package Contents

Your MXV Fireplace TV Stand will arrive in two separate packages. Please ensure you have received both packages before beginning assembly. Verify all components against the included parts list in your physical manual.



Image: Overview of the fireplace unit and TV console frame components, indicating the product comes in two packages.

- TV Stand Components (various engineered wood panels, hardware)
- 36-inch Electric Fireplace Unit
- Remote Control for Fireplace and LED Lights

- Assembly Instructions Manual

## Assembly Instructions

Assembly typically requires 1-2 people and takes approximately 2 hours. Follow the detailed step-by-step instructions provided in the physical manual included with your product. Ensure all parts are present and undamaged before starting.

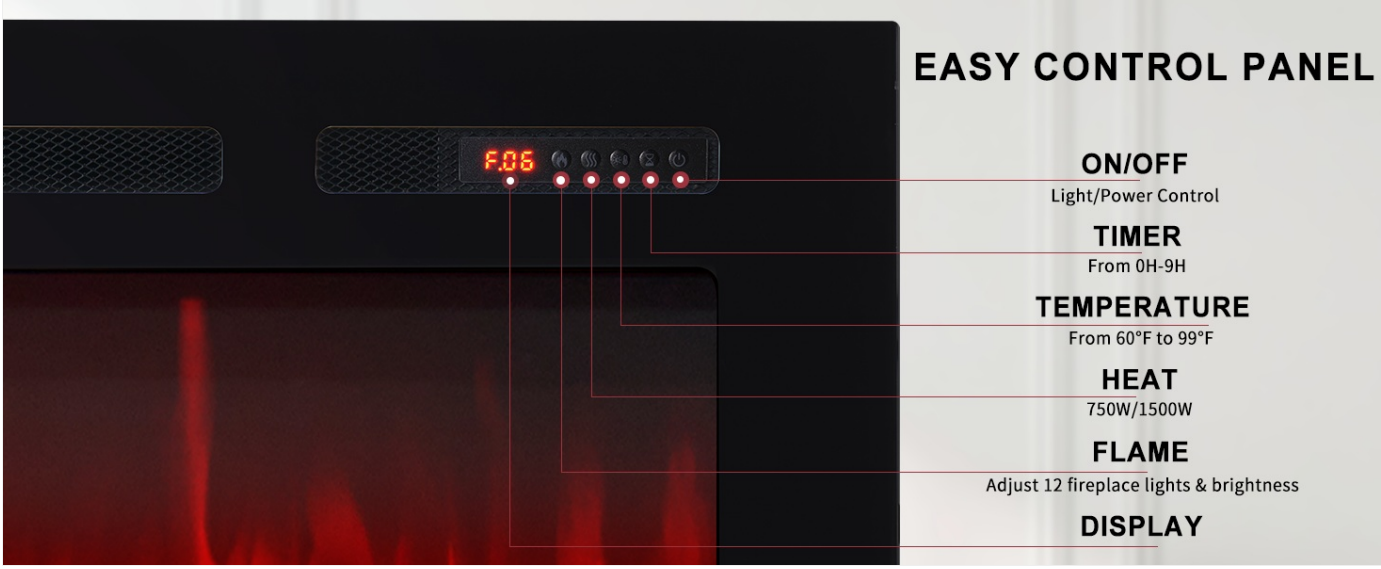



Image: Structural diagram of the MXV TV stand, highlighting key dimensions and sections for assembly reference.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Identify each part using the labels and diagrams in your manual.
2. **Assemble the Main Frame:** Begin by connecting the base and side panels of the TV stand using the provided hardware. Ensure all connections are secure.
3. **Install Shelving and Dividers:** Insert the internal shelves and dividers according to the manual's diagrams.
4. **Integrate the Electric Fireplace:** Carefully slide the 36-inch electric fireplace unit into its designated central compartment. Secure it using the specified screws.
5. **Attach Cabinet Doors:** Mount the cabinet doors to the side compartments. Adjust hinges as needed for proper alignment.
6. **Connect LED Lighting:** Install the LED light strips in the designated areas. Connect them to the power source as instructed.
7. **Final Checks:** Once assembled, gently move the stand to its desired location. Ensure all connections are tight and the stand is stable.

*Note:* Some users have reported that installing the fireplace glass front after the unit is fully secured can be challenging. Consider attaching the glass front to the fireplace unit before fully securing the fireplace into the stand, if your manual allows for this sequence.

## Operating Instructions

### Electric Fireplace Operation

The electric fireplace can be controlled via the integrated control panel or the included remote control.



Image: Detailed view of the electric fireplace control panel, showing buttons for power, timer, temperature, heat, flame color, and display.

- **Power On/Off:** Press the power button to turn the fireplace on or off.
- **Temperature Control:** Adjust the temperature between 60°F and 99°F using the temperature buttons. The unit heats up to 400 square feet.
- **Heat Settings:** Select between 750W and 1500W heat output.
- **Flame Colors:** Choose from 12 flame color options to customize the ambiance.
- **Flame Brightness:** Adjust the flame brightness across 5 settings.
- **Timer Function:** Set the operational timer from 0 to 9 hours.



Image: A visual guide showcasing the 12 available flame colors and 5 adjustable brightness levels for the electric fireplace.

### LED Lighting Operation

The integrated LED lights can be controlled using the provided remote control.

- **Color Selection:** Choose from 12 vibrant LED colors to match your mood or decor.
- **Brightness Adjustment:** Adjust the LED brightness across 5 levels.

Your browser does not support the video tag.

Video: An official product video from MXV demonstrating the features of the Fireplace TV Stand, including the electric fireplace and LED lighting. This video is 27 seconds long.

## Maintenance

Regular maintenance ensures the longevity and safe operation of your TV stand and electric fireplace.

- **Cleaning the Stand:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Cleaning the Fireplace:** Ensure the fireplace is unplugged and cool before cleaning. Use a soft, dry cloth to clean the glass and exterior surfaces. Do not spray liquids directly onto the unit.
- **Ventilation:** Periodically check that the air intake and exhaust vents of the fireplace are clear of dust and obstructions.
- **Cord Inspection:** Regularly inspect the power cord for any signs of damage. If damaged, discontinue use and contact customer support.

## Troubleshooting

If you encounter issues with your MXV Fireplace TV Stand, refer to the following common solutions:

| Problem | Possible Cause | Solution |
| --- | --- | --- |
| Fireplace does not turn on. | No power, unit unplugged, circuit breaker tripped. | Check power connection, ensure outlet is functional, reset circuit breaker. |

| Problem | Possible Cause | Solution |
|---|---|---|
| No heat output. | Heat function not activated, temperature set too low, overheat protection engaged. | Activate heat function, increase temperature setting, check for obstructions around vents. Allow unit to cool if overheat protection is active. |
| Remote control not working. | Dead batteries, remote out of range, sensor obstructed. | Replace batteries, ensure clear line of sight to the fireplace sensor, operate within recommended range. |
| LED lights not functioning. | Loose connection, power issue. | Check LED strip connections, ensure power adapter is securely plugged in. |

If the problem persists after attempting these solutions, please contact MXV customer support for further assistance.

## Specifications

- **Brand:** MXV
- **Model Name:** H21007
- **Product Type:** Fireplace TV Stand
- **Material:** Engineered Wood
- **Color:** Grey-black (for this variant)
- **TV Stand Size:** 70 Inches (length)
- **Maximum Compatible TV Size:** Up to 80 Inches
- **Fireplace Size:** 36 Inches (electric insert)
- **Power Source:** Corded Electric
- **Heating Coverage:** Up to 400 sq ft
- **Temperature Range:** 60°F to 99°F
- **Heat Output:** 750W / 1500W
- **Flame Options:** 12 colors, 5 brightness levels
- **LED Light Options:** 12 colors, 5 brightness levels
- **Safety Features:** Overheat protection, CSA/ETL certified
- **Assembly:** Required, instructions included

## Warranty and Support

This MXV product comes with a limited warranty. For specific warranty details, please refer to the warranty card included in your product packaging or contact MXV customer support. If you require assistance with assembly, operation, or troubleshooting, please reach out to our support team. We aim to respond to inquiries within 24 hours.

For customer support, please visit the official MXV website or refer to the contact information provided in your product manual.


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0FJX5RVX9**

More documents and user manuals: **https://manuals.plus/**