Bellemave Bellemave Triple Bunk Bed

Bellemave Triple Bunk Bed User Manual

Model: Twin Over Twin Over Full, White

Introduction

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Bellemave Triple Bunk Bed. Please read all instructions carefully before assembly and use. Retain this manual for future reference.

Important Safety Information

- Always use the guardrails to prevent falls.
- Ensure the bed is assembled correctly and the anti-tip hardware is securely attached to prevent tip-overs.
- Do not exceed the weight capacity of 350 pounds per upper and middle bunk. The bottom bunk has no weight limit.
- This bunk bed cannot be separated into three individual beds.
- Only use mattresses of the specified size for each bunk.
- Keep children away from the assembly area until assembly is complete.

Setup and Assembly

Assembly is required for this Bellemave Triple Bunk Bed. All necessary parts and hardware are included. It is recommended that two adults perform the assembly.

Before You Begin:

- Unpack all components and verify against the parts list (not provided in this manual, refer to your packaging).
- Ensure you have sufficient space for assembly.
- This product ships in 2 boxes. Confirm both boxes have been received before starting assembly.
- If any parts are missing or damaged, do not proceed with assembly. Contact customer support immediately.

Assembly Steps:

1. Follow the step-by-step instructions provided in the separate assembly guide included with your product packaging.
2. Ensure all screws and fasteners are tightened securely.

3. Attach the anti-tip hardware to a wall stud as instructed to prevent accidental tipping.
4. The movable ladder can be installed on either side of the bunk bed to suit your room layout.



Image: Fully assembled Bellemave Triple Bunk Bed, white metal frame, with mattresses and bedding.

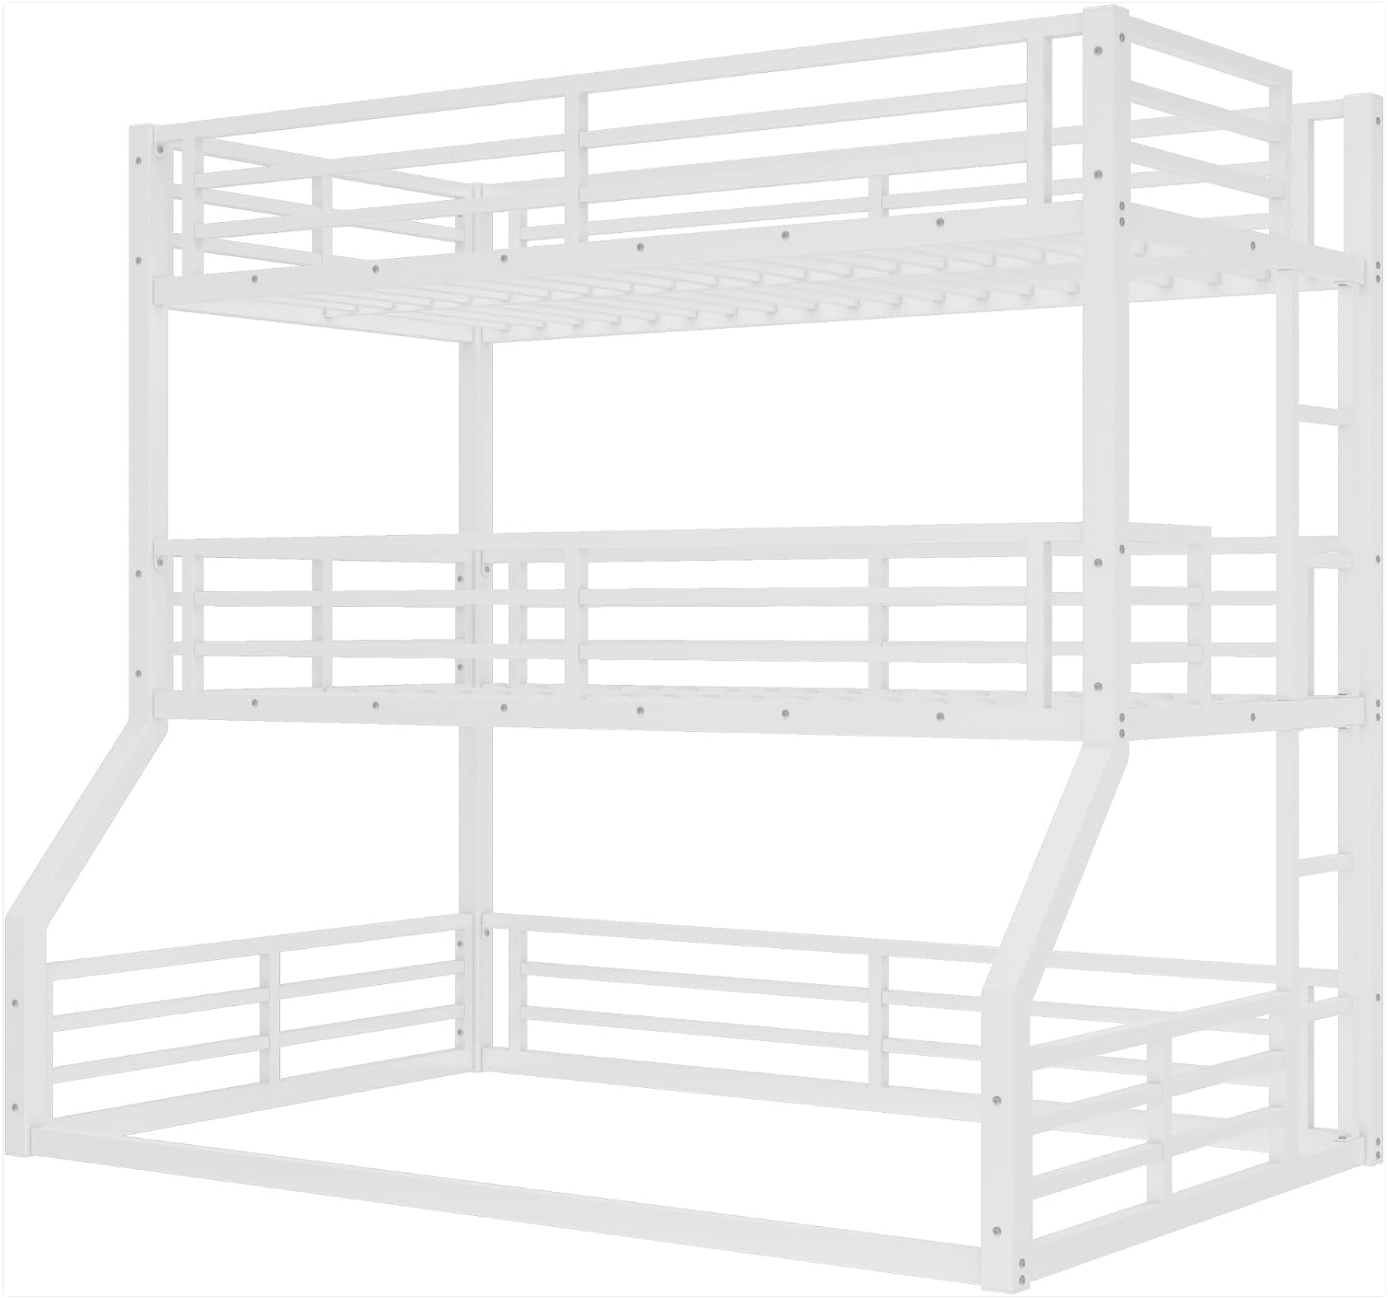


Image: Detail of the metal frame and bed slats, showing the sturdy construction.

Your browser does not support the video tag.

Video: An overview of the Bellemave Twin Over Twin Over Full Bunk Bed, showcasing its design and features in a room setting.

Operating Instructions

This section outlines the proper use of your Bellemave Triple Bunk Bed.

General Use:

- Ensure mattresses are properly seated on the bed slats. No box spring is needed.
- The upper and middle bunks have a weight capacity of 350 lbs each. The bottom bunk has no weight limit. Do not exceed these limits.
- Use the ladder for accessing the upper and middle bunks. Do not climb on the bed frame directly.
- The bed features noise-reducing rubber stoppers to keep slats firmly in place for a quiet sleep experience.

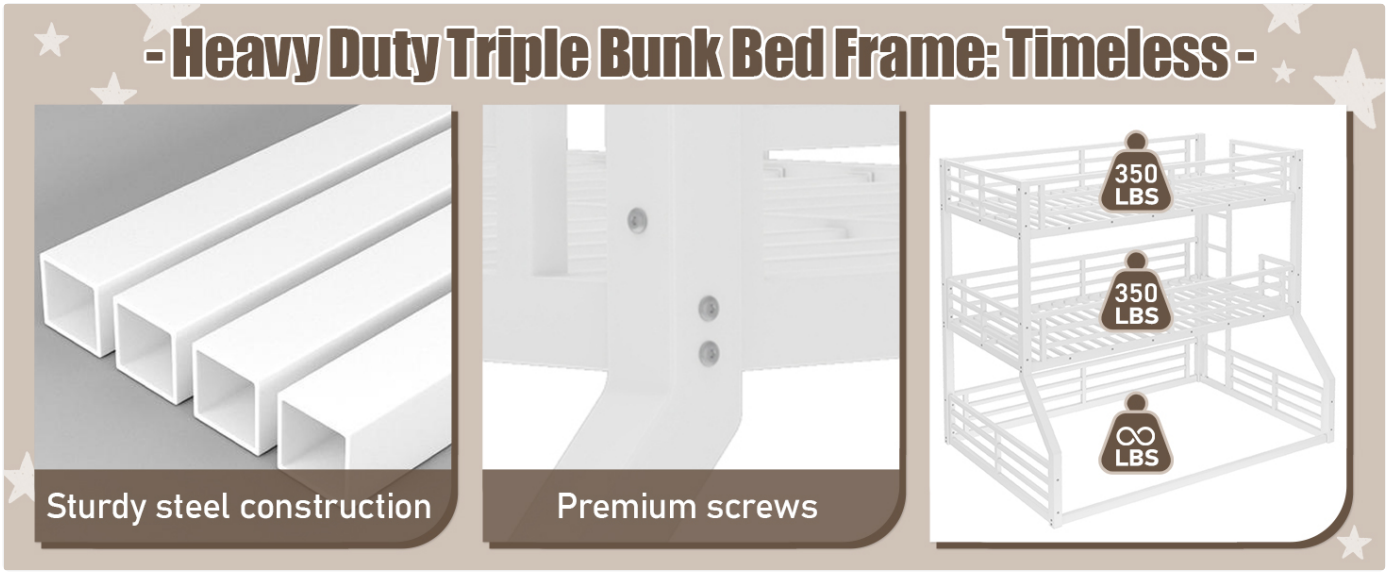


Image: Close-up of the noise-reducing rubber stoppers designed to stabilize bed slats.



Image: Illustration of the adjustable ladder, showing it can be positioned on either side of the bed.

Maintenance

Regular maintenance ensures the longevity and safety of your bunk bed.

- **Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the powder-coated finish.
- **Inspection:** Periodically check all bolts and screws to ensure they remain tight. Re-tighten if necessary.
- **Structural Integrity:** Inspect the bed frame for any signs of damage or wear. Discontinue use if any structural damage is observed and contact customer support.

Troubleshooting

This section addresses common issues you might encounter with your Bellemave Triple Bunk Bed.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose fasteners; improper assembly.	Ensure all bolts and screws are securely tightened. Review assembly instructions to confirm correct installation.
Missing parts or hardware during assembly.	Packaging error; parts misplaced.	Check all packaging thoroughly. If parts are still missing, contact Bellemave customer support with your purchase details.
Squeaking noises.	Loose connections; friction between metal parts.	Tighten all fasteners. Ensure rubber stoppers are correctly placed on slats. Apply a small amount of silicone lubricant to contact points if necessary.

Specifications

Feature	Detail
Model	Bellemave Triple Bunk Bed
Size	Twin over Twin over Full
Color	White
Product Dimensions (L x W x H)	77.6" x 56.7" x 78.7"
Material	Metal (Powder Coated Finish)
Weight Capacity (Upper/Middle/Bottom)	350 lbs / 350 lbs / No limit
Number of Slats (Upper/Middle/Bottom)	19 / 19 / 0 (Bottom bunk uses full mattress directly on frame)
Special Features	Guardrails, Adjustable Ladder, Noise-Reduced Design, Storage Shelf (integrated)
Assembly Required	Yes
Item Weight	56 pounds
UPC	197793811750

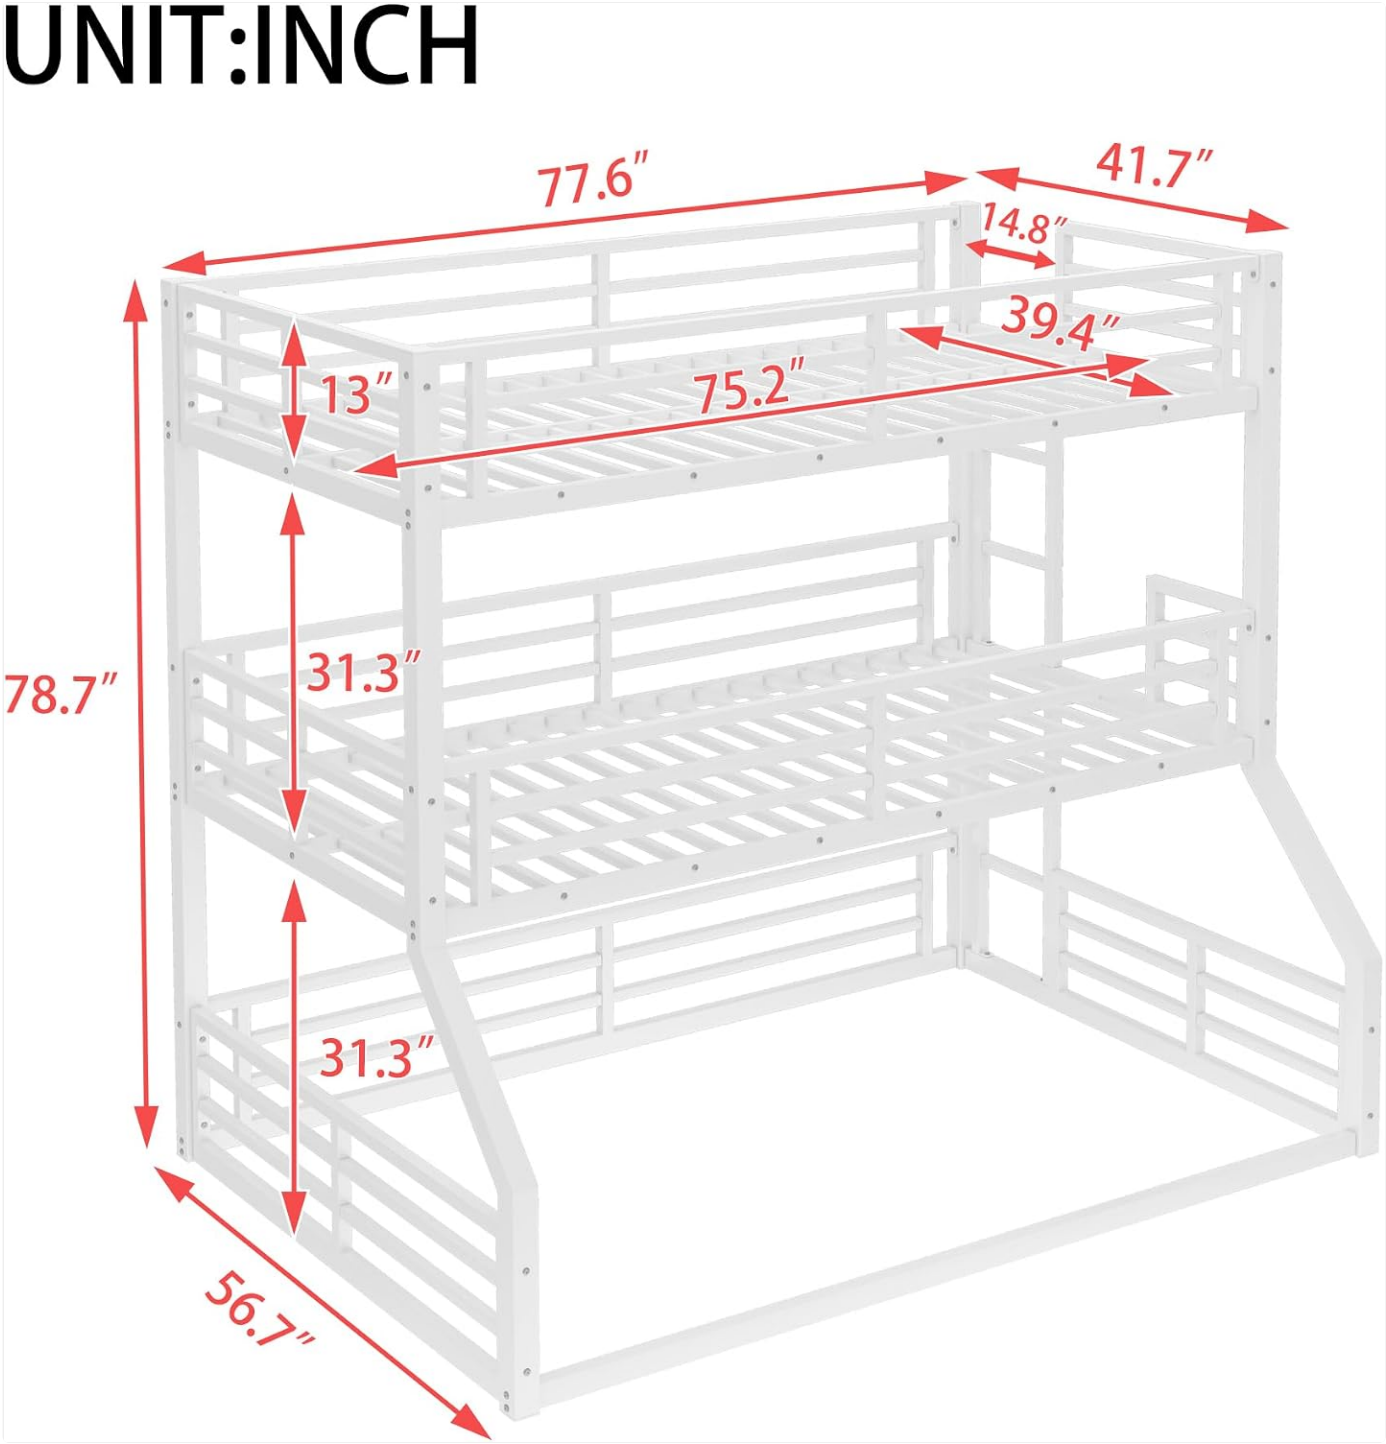


Image: Technical drawing showing the dimensions of the triple bunk bed in inches.

Warranty Information

Specific warranty details are not provided within this manual. For information regarding product warranty, please refer to the documentation included with your purchase or contact Bellemave customer support directly.

Customer Support

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Bellemave customer support:

Email: US-VC@bellemavehome.com

Please include your purchase details and model number when contacting support.

© 2025 Bellemave. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question