Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Conyat X7

Conyat X7 Open Ear Headphones User Manual

Model: X7

1. Introduction

Thank you for choosing the Conyat X7 Open Ear Headphones. These wireless earbuds are designed to provide a comfortable listening experience while maintaining awareness of your surroundings. This manual provides detailed instructions on how to set up, operate, and maintain your headphones.

2. Package Contents

Please verify that all items listed below are included in your package:

- 2 x Conyat X7 Wireless Earbuds
- 1 x Fast Charging Case
- 1 x USB-C Charging Cable
- 1 x User Manual



Image: Contents of the Conyat X7 Open Ear Headphones package.

3. Product Overview

The Conyat X7 headphones feature an open-ear design with secure ear hooks for comfort and stability. The charging case includes a digital display for battery status.



Image: Conyat X7 Open Ear Headphones in their charging case.



Image: Close-up of the charging case showing the digital battery display and earbuds.

Key Components:

- **Earbuds:** Left (L) and Right (R) earbuds with integrated ear hooks.
- **Touch Control Area:** Located on the outer surface of each earbud for various functions.
- **LED Indicator:** Provides status information (pairing, charging).
- **Charging Contacts:** On the earbuds and inside the case for power transfer.
- **Charging Case:** Stores and charges the earbuds, features a digital battery display.
- **USB-C Charging Port:** On the charging case for external power input.

4. Setup

4.1 Initial Charging

Before first use, fully charge the Conyat X7 headphones and charging case. Connect the provided USB-C cable to the charging port on the case and a power source. The digital display on the case will show the charging progress. A full charge for the case takes approximately 2 hours. The earbuds will charge automatically when placed in the case.



Image: Charging the Conyat X7 case via USB-C, with battery display.

The earbuds provide up to 8 hours of continuous listening on a single charge, and the charging case extends the total playtime to approximately 48-50 hours.



Image: Battery life overview, showing 8 hours per charge and 58 hours total with the charging case.

4.2 Pairing with a Device

The Conyat X7 headphones utilize advanced Bluetooth 5.4 technology for fast and stable connections.

1. **Power On:** Open the charging case. The earbuds will automatically power on and enter pairing mode. The LED indicators on the earbuds will flash.
2. **Activate Bluetooth:** On your device (smartphone, tablet, laptop), enable Bluetooth.
3. **Select Device:** Search for "X7" in the list of available Bluetooth devices and select it to connect.
4. **Confirmation:** Once connected, the LED indicators on the earbuds will stop flashing, and you will hear an audible confirmation.

The earbuds will automatically reconnect to the last paired device when taken out of the case, provided Bluetooth is enabled on the device.



Image: Illustration of one-step pairing process with a mobile device.

4.3 Wearing the Earbuds

The Conyat X7 features an open-ear design with adjustable ear hooks for a secure and comfortable fit.

1. **Unfold Ear Hooks:** Take out the headphones and unfold the ear hooks to their maximum angle.
2. **Slide Behind Ear:** Slide the ear hook behind your ear.
3. **Adjust Earbuds:** Turn the earbuds to adjust them firmly to the most comfortable angle, ensuring the sound outlet is positioned correctly near your ear canal without entering it.



Image: Step-by-step guide on how to wear the open ear earbuds.

The 90° rotatable ear hooks allow for flexible adjustment to fit various ear shapes, providing a stable and comfortable experience during activities.

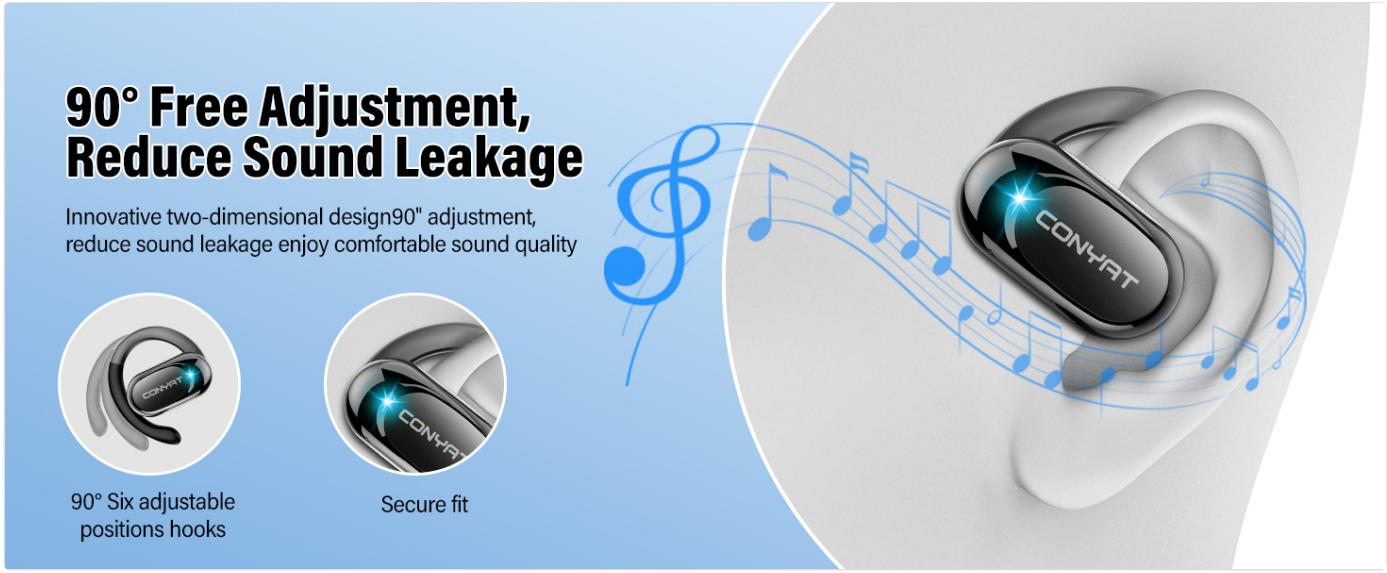


Image: Detail of the 90° adjustable ear hook for optimal fit.

5. Operating Instructions

The Conyat X7 earbuds feature intuitive touch controls for managing music playback, calls, and voice assistant functions.

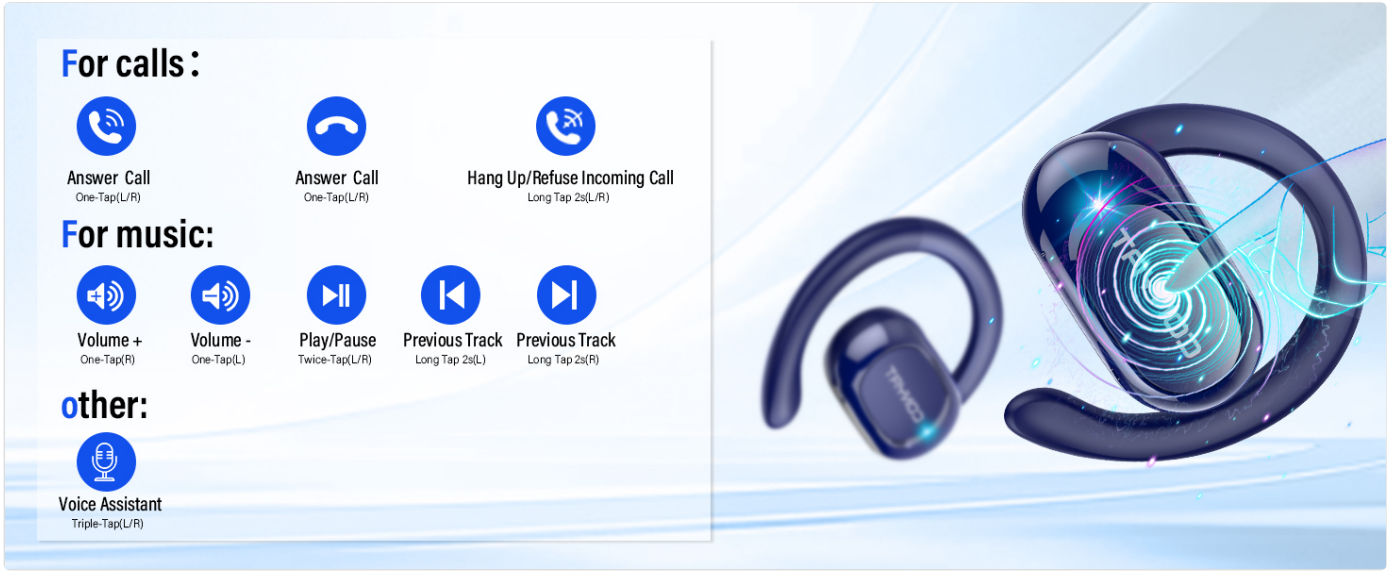


Image: Overview of touch control functions for Conyat X7 earbuds.

5.1 Touch Control Functions

Function	Action	Earbud
Power On	Open charging case	Both
Power Off	Place in charging case and close lid	Both
Play/Pause	Double-tap	L/R
Next Track	Long press (2 seconds)	Right
Previous Track	Long press (2 seconds)	Left
Volume Up	Single tap	Right

Function	Action	Earbud
Volume Down	Single tap	Left
Answer/End Call	Single tap	L/R
Reject Call	Long press (2 seconds)	L/R
Activate Voice Assistant	Triple-tap	L/R

5.2 Call Quality

The Conyat X7 headphones feature ENC (Environmental Noise Cancellation) technology to enhance call clarity by filtering out ambient noise, ensuring your voice is picked up clearly even in outdoor environments.



Image: ENC Noise Cancellation for clear call quality.

6. Maintenance

6.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure the charging contacts on both the earbuds and the case are clean and dry to prevent charging issues.

6.2 Water Resistance

The Conyat X7 earbuds are rated IP7 waterproof, meaning they can withstand sweat and splashes. They are suitable for workouts and outdoor activities.

- Do not submerge the earbuds in water for extended periods.
- Ensure the earbuds are completely dry before placing them back into the charging case to prevent damage.
- The charging case is not waterproof.

Image: Conyat X7 earbuds demonstrating IP7 waterproof and sweatproof capabilities.

6.3 Storage

When not in use, store the earbuds in their charging case to protect them and ensure they remain charged.

7. Troubleshooting

If you encounter any issues with your Conyat X7 headphones, please refer to the following common solutions:

- **No Sound:**
  - Ensure earbuds are charged.
  - Check device volume and earbud volume.
  - Verify earbuds are properly connected to your device via Bluetooth.
- **Pairing Failure:**
  - Ensure earbuds are in pairing mode (LEDs flashing).
  - Turn off Bluetooth on other nearby devices to avoid interference.
  - Forget/delete "X7" from your device's Bluetooth list and try pairing again.
  - Restart your device and the earbuds (by placing them in the case and closing/opening the lid).
- **Charging Issues:**
  - Ensure the USB-C cable is securely connected to both the case and the power source.
  - Check if the charging contacts on the earbuds and inside the case are clean and free of debris.
  - Try a different USB-C cable or power adapter.
- **Intermittent Connection:**
  - Ensure your device is within the Bluetooth range (up to 15 meters).
  - Avoid physical obstructions between the earbuds and your device.
  - Minimize interference from other wireless devices.

8. Specifications

Feature	Specification
Model Name	X7
Bluetooth Version	5.4
Audio Driver Type	14.2mm Dynamic Driver
Earbud Battery Life	Up to 8 hours (single charge)
Total Battery Life (with Case)	Up to 48-50 hours
Charging Time (Case)	Approximately 2 hours
Water Resistance Level	IP7
Connectivity Technology	Wireless (Bluetooth)

Feature	Specification
Control Type	Touch Control
Item Weight	100 Grams (total package); approx. 10g per earbud
Product Dimensions	1.97 x 1.57 x 2.36 inches (charging case)
Bluetooth Range	15 Meters
Ear Placement	Open Ear

9. Warranty and Support

Conyat is committed to providing high-quality products and customer satisfaction.

- **12-Month Quality Guarantee:** Your Conyat X7 headphones are covered by a 12-month quality guarantee from the date of purchase.
- **30-Day Worry-Free Trial:** Enjoy a 30-day trial period to ensure complete satisfaction.
- **24-Hour Customer Service:** For any inquiries, technical support, or warranty claims, please contact Conyat customer service. Refer to the product packaging or the official Conyat website for contact details.



Image: Conyat customer service, trial, and warranty information.

© 2025 Conyat. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FJXYJX9N

More documents and user manuals: **https://manuals.plus/**