Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TPG Replacement Battery Door Cover

TPG Replacement Battery Door Cover Instruction Manual

For Bose Wave Radio/CD Audio System Models AWRC-1P and AWRC-1G

1. Introduction

This manual provides instructions for the installation and maintenance of your TPG Replacement Battery Door Cover. This product is designed to replace the original battery compartment lid for specific Bose Wave Radio/CD Audio System models.

Compatibility: This replacement battery door cover is specifically designed for Bose Wave Radio/CD Audio System models AWRC-1P and AWRC-1G (top-loading CD systems only).




This image displays two Bose Wave Radio/CD Audio Systems, one in white (AWRC-1G) and one in black (AWRC-1P), highlighting the compatible models for this replacement battery door cover. Both units are top-loading CD systems.

2. Package Contents

Please verify that your package contains the following item:

- 1 x TPG Replacement Battery Door Cover Lid

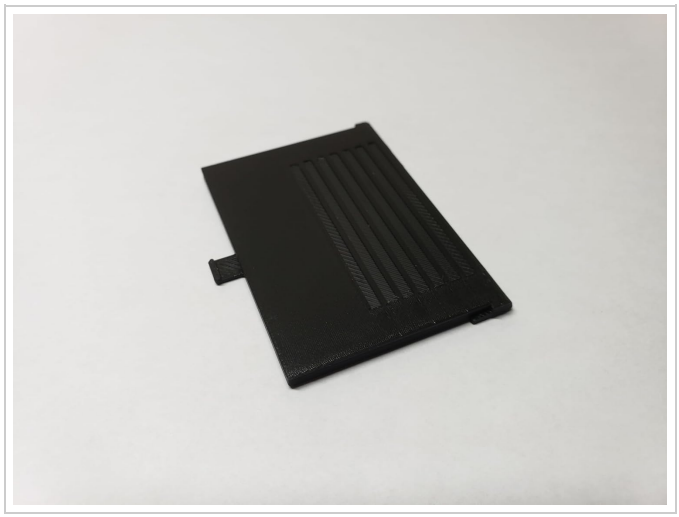


This image shows the black TPG Replacement Battery Door Cover Lid, a rectangular component with a small tab on one side and textured ridges on its surface.

3. Installation Instructions

This section details the steps required to install the TPG Replacement Battery Door Cover on your compatible Bose Wave Radio/CD Audio System.

1. **Prepare the System:** Ensure your Bose Wave Radio/CD Audio System is powered off and unplugged from the electrical outlet before proceeding with the installation.
2. **Locate Battery Compartment:** Carefully turn the Bose system over to access the bottom panel. The battery compartment is typically located on the underside.
3. **Remove Existing Cover (if applicable):** If an old or damaged battery door cover is present, gently slide it out or unclip it from the compartment.

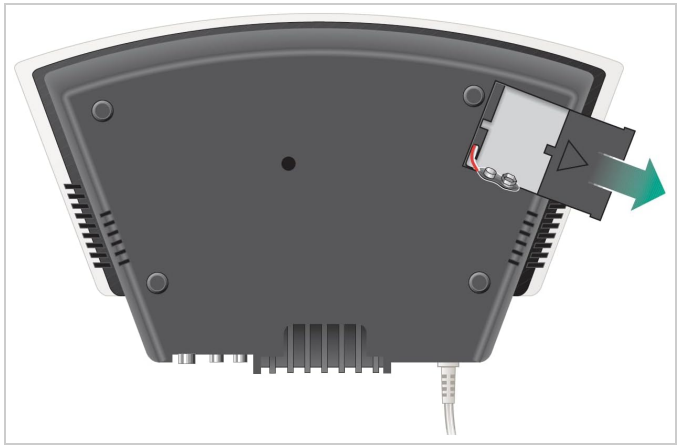

This diagram illustrates the underside of the Bose Wave Radio/CD Audio System, showing the battery compartment with a battery being removed or inserted. The arrow indicates the direction for sliding the battery in or out.

4. **Insert New Battery Door Cover:** Align the TPG Replacement Battery Door Cover with the battery compartment opening. The small tab on the cover should face outwards, allowing for easy removal.
5. **Secure the Cover:** Gently slide the new cover into place until it clicks or sits flush with the system's housing. Ensure it is securely fastened to prevent dust and debris from entering the battery compartment.
6. **Final Check:** Verify that the cover is properly seated and does not wobble.

4. Maintenance

The TPG Replacement Battery Door Cover requires minimal maintenance.

- **Cleaning:** Wipe the cover with a soft, dry cloth to remove dust. Avoid using abrasive cleaners or solvents, as these may damage the ABS material.
- **Inspection:** Periodically check the cover for any signs of damage or wear. Ensure it remains securely in place.

5. Specifications

Feature	Detail
Item Type	9V Battery Door Cover Lid
Material	ABS Plastic
Compatibility	Bose Wave Radio/CD Audio System Models AWRC-1P, AWRC-1G (top-loading CD systems only)
Dimensions (L x W x H)	Approximately 2 x 1.5 x 0.12 inches
Weight	Approximately 0.2 ounces

6. Troubleshooting

- **Cover Does Not Fit:**

  Ensure your Bose Wave Radio/CD Audio System is one of the compatible models (AWRC-1P or AWRC-1G, top-loading CD systems). Verify that the cover is oriented correctly before attempting to slide it into place. Do not force the cover.

- **Cover Feels Loose:**

  Re-seat the cover, ensuring it is fully inserted and flush with the system's housing. If the issue persists, inspect the compartment and the cover for any obstructions or manufacturing defects.

7. Warranty and Support

For warranty information or technical support regarding your TPG Replacement Battery Door Cover, please refer to the retailer or manufacturer's official website. Specific warranty details are not provided in this manual.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FK34H2QV

More documents and user manuals: **https://manuals.plus/**