V-Guard VIC 02 V2

V-GUARD VIC 02 V2 Induction Cooktop User Manual

Model: VIC 02 V2

1. Introduction

This manual provides essential information for the safe and efficient operation of your V-GUARD VIC 02 V2 Induction Cooktop. Please read it thoroughly before using the appliance and retain it for future reference.

2. Important Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure proper ventilation around the cooktop during operation.

- Only use induction-compatible cookware.
- The surface remains hot after use. Please do not touch immediately.

3. Product Overview

3.1 Components

The V-GUARD VIC 02 V2 Induction Cooktop consists of the following main components:

- Crystalline Glass Pane Cooking Surface
- Control Panel with Digital Display
- Power Cord
- Ventilation Openings (located on the sides and bottom)

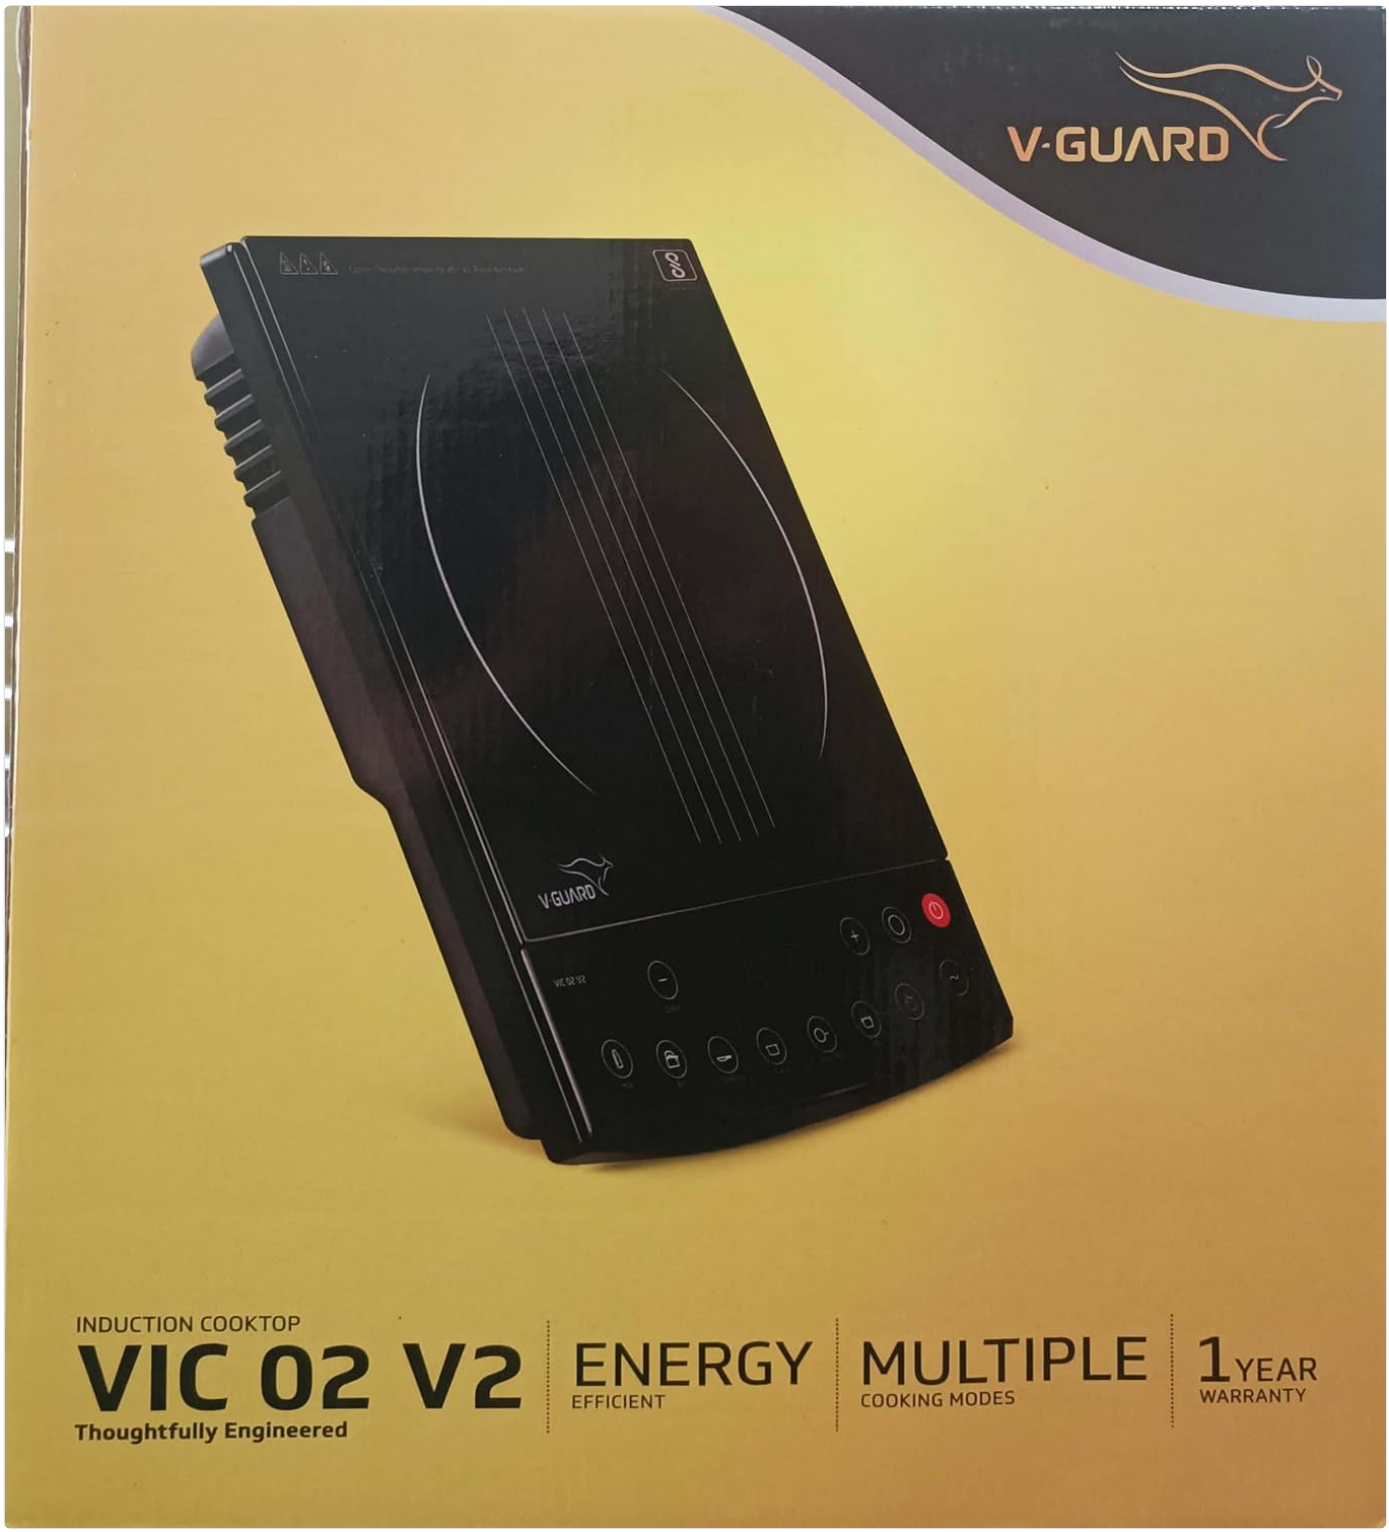


Image: Top view of the V-GUARD VIC 02 V2 Induction Cooktop, showing the crystalline glass cooking surface and the integrated control panel at the front.

3.2 Control Panel

The control panel features soft-touch buttons and a digital display for easy operation.

- **ON/OFF Button:** Powers the cooktop on or off.
- **Digital Display:** Shows power level, temperature, or timer settings.
- **Up (+) / Down (-) Buttons:** Adjust power, temperature, or timer settings.
- **Timer/Preset Button:** Activates the timer function or selects preset cooking times.
- **Cooking Mode Buttons:** Dedicated buttons for Milk, Boil, Deep Fry, Curry, Dosa/Roti, Idli, and Manual modes.
- **Child Lock Button:** Activates or deactivates the child lock feature.

- **Voltage Button:** Displays current voltage.



Image: Close-up of the V-GUARD VIC 02 V2 Induction Cooktop control panel, showing the digital display, ON/OFF button, Up/Down controls, Timer/Preset, Child Lock, Voltage, and various cooking mode buttons.

4. Setup

1. **Unpacking:** Carefully remove the induction cooktop from its packaging. Retain the packaging for future storage or transport.
2. **Placement:** Place the cooktop on a flat, stable, heat-resistant surface. Ensure there is adequate ventilation space (at least 10-15 cm) around all sides of the unit to prevent overheating. Do not place it near water sources or heat-sensitive materials.
3. **Power Connection:** Plug the power cord into a standard 230V AC, 50Hz electrical outlet. Ensure the outlet is properly grounded.
4. **Initial Cleaning:** Before first use, wipe the glass cooking surface with a soft, damp cloth.

5. Operating Instructions

5.1 Basic Operation

1. Place induction-compatible cookware centrally on the cooking zone.
2. Press the **ON/OFF** button to power on the cooktop. The digital display will illuminate.
3. Select a desired cooking mode (e.g., Milk, Boil, Deep Fry, Curry, Dosa/Roti, Idli, or Manual).
4. If using Manual mode, adjust the power level or temperature using the **Up (+)** and **Down (-)** buttons. The cooktop operates at 1400W maximum power.
5. To turn off, press the **ON/OFF** button again. The cooktop will beep and the display will turn off.

5.2 Cooking Modes

The V-GUARD VIC 02 V2 offers 8 preset cooking modes for convenience:

- **Milk:** Optimized for heating milk.
- **Boil:** Ideal for boiling water or other liquids.
- **Deep Fry:** Maintains a consistent temperature suitable for deep frying.
- **Curry:** Pre-set for cooking curries.
- **Dosa/Roti:** Specific setting for preparing flatbreads like Dosa and Roti.
- **Idli:** Designed for steaming Idli.
- **Manual:** Allows for custom power and temperature adjustments using the Up/Down buttons.

5.3 Timer Function

The timer function allows you to set a cooking duration, after which the cooktop will automatically shut off.

1. While cooking, press the **Timer/Preset** button. The display will show a default time.
2. Use the **Up (+)** and **Down (-)** buttons to adjust the desired cooking time.
3. The timer will start counting down. Once the time expires, the cooktop will automatically switch off.

5.4 Child Lock

The child lock feature prevents accidental operation or changes to settings.

- To activate: Press and hold the **Child Lock** button for a few seconds until an indicator appears on the display. All other buttons will be locked.
- To deactivate: Press and hold the **Child Lock** button again for a few seconds until the indicator disappears.

6. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction cooktop.

- Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.
- Wipe the crystalline glass surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive ceramic hob cleaner.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the surface.
- Clean the control panel with a soft, damp cloth. Ensure no liquid enters the buttons or display area.
- Keep the ventilation openings clear of dust and debris to ensure proper airflow. Use a soft brush or vacuum cleaner to gently clean them.
- Never immerse the cooktop in water or any other liquid.

7. Troubleshooting

If you encounter issues with your V-GUARD VIC 02 V2 Induction Cooktop, refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Cooktop does not turn on.	Not plugged in. Power outage. Faulty power outlet.	Ensure the power cord is securely plugged into a working outlet. Check your household's power supply. Try plugging another appliance into the same outlet to verify it's working.
Cooktop beeps and displays an error code (e.g., E0, E1).	No cookware or incorrect cookware. Overheating. Internal fault.	Place induction-compatible cookware on the cooking zone. Allow the cooktop to cool down. Ensure ventilation is not blocked. Unplug the cooktop for 5 minutes, then plug it back in. If the error persists, contact customer support.
Cooking power is low or inconsistent.	Cookware not fully compatible. Voltage fluctuations.	Ensure cookware has a flat, magnetic base and is sized appropriately for the cooking zone. Check the voltage display (if available) or consult an electrician if frequent fluctuations occur.
Child lock cannot be activated/deactivated.	Button not held long enough.	Press and hold the Child Lock button for approximately 3 seconds.

8. Specifications

Model Number	VIC 02 V2
Power Consumption	1400 W
Input Voltage	230V AC, 50Hz (Standard)
Dimensions (L x W x H)	35 x 28 x 25 Centimeters
Item Weight	2 kg 600 g
Cooking Modes	8 (Milk, Boil, Deep Fry, Curry, Dosa/Roti, Idli, Manual)
Special Features	Child Lock, Digital Display, Energy Efficient, Multiple Cooking Modes, Timer Function, Voltage Protection
Heating Elements	1
Surface Material	Crystalline Glass Pane

9. Warranty and Support

Your V-GUARD VIC 02 V2 Induction Cooktop comes with a comprehensive warranty to ensure peace of mind.

- **Product Warranty:** 1-year comprehensive warranty on the entire product from the date of purchase.
- **Induction Coil Warranty:** An extended 3-year warranty specifically for the induction coil.

For warranty claims, technical assistance, or any other support, please refer to the contact information provided in your warranty card or visit the official V-Guard website.
Included Components: Induction Cooktop, User Manual, Warranty Card.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question