Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HOMCOM 001-019V01BK

HOMCOM 84-inch 16:9 Portable Projector Screen with Tripod

Model: 001-019V01BK

1. Introduction

Thank you for choosing the HOMCOM 84-inch 16:9 Portable Projector Screen with Tripod. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new projector screen. Please read these instructions carefully before use and retain them for future reference.

2. Safety Instructions

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the screen on a flat, stable surface to prevent tipping.
- Keep children and pets away during assembly and operation.
- Do not expose the screen to direct sunlight for prolonged periods or extreme temperatures.
- Avoid using abrasive cleaners or sharp objects on the screen surface.
- When adjusting the height, ensure the locking mechanisms are securely fastened to prevent accidental collapse.
- Do not hang anything on the screen or tripod.

3. Package Contents

Please verify that all the following items are included in your package:

- 1 x Projector Screen (84-inch, 16:9 aspect ratio)
- 1 x Tripod Stand
- 1 x Instruction Manual

4. Setup Instructions

Follow these steps to assemble your projector screen:

1. **Unpack Components:** Carefully remove the projector screen and tripod stand from the packaging. Place all components on a

clean, flat surface.

2. **Set Up the Tripod:**



Description: A view of the sturdy tripod base, designed to provide stability for the projector screen.

Extend the legs of the tripod stand outwards until they are fully spread and stable. Ensure the tripod is balanced and does not wobble.

3. **Attach the Screen to the Tripod:**



Description: An illustration highlighting the adjustable height feature of the tripod stand, allowing the screen to be set between 1.82m and 2.4m.

Locate the mounting bracket on top of the tripod stand. Carefully lift the projector screen casing and align it with the bracket. Secure the screen to the tripod using the provided locking mechanism.

4. **Adjust Screen Height:**



Description: A close-up of the blue locking mechanism on the tripod, used to secure the screen at the desired height.

Loosen the height adjustment lock on the tripod pole. Raise or lower the screen to your desired viewing height (between 1.82m and 2.4m). Once the desired height is achieved, tighten the lock securely.

5. **Extend the Screen:** Gently pull down the screen from its casing. The screen will lock into place at various intervals. Pull down slightly further to release the lock and retract the screen when finished.

Your browser does not support the video tag.

Video: This video demonstrates the HOMCOM 84-inch portable projector screen in various usage scenarios, highlighting its ease of setup and versatility for both indoor and outdoor entertainment.

5. Operating Instructions

To ensure the best viewing experience, consider the following:

- **Viewing Angle:**



Description: A graphic demonstrating the wide 160-degree viewing angle of the projector screen, allowing comfortable viewing from various positions.

The screen offers a wide 160-degree viewing angle, allowing viewers to enjoy clear images from various positions without significant loss of brightness or color accuracy.


- **Screen Material:**



Description: This diagram details the three-layer construction of the screen material, including the HD layer, image-sensitive layer, and black backing for optimal image quality and light blocking.

The screen is constructed with a high-quality, three-layer matte plastic with a black backing to prevent light penetration, ensuring vibrant and sharp images.

- **Optimal Viewing Distance:**

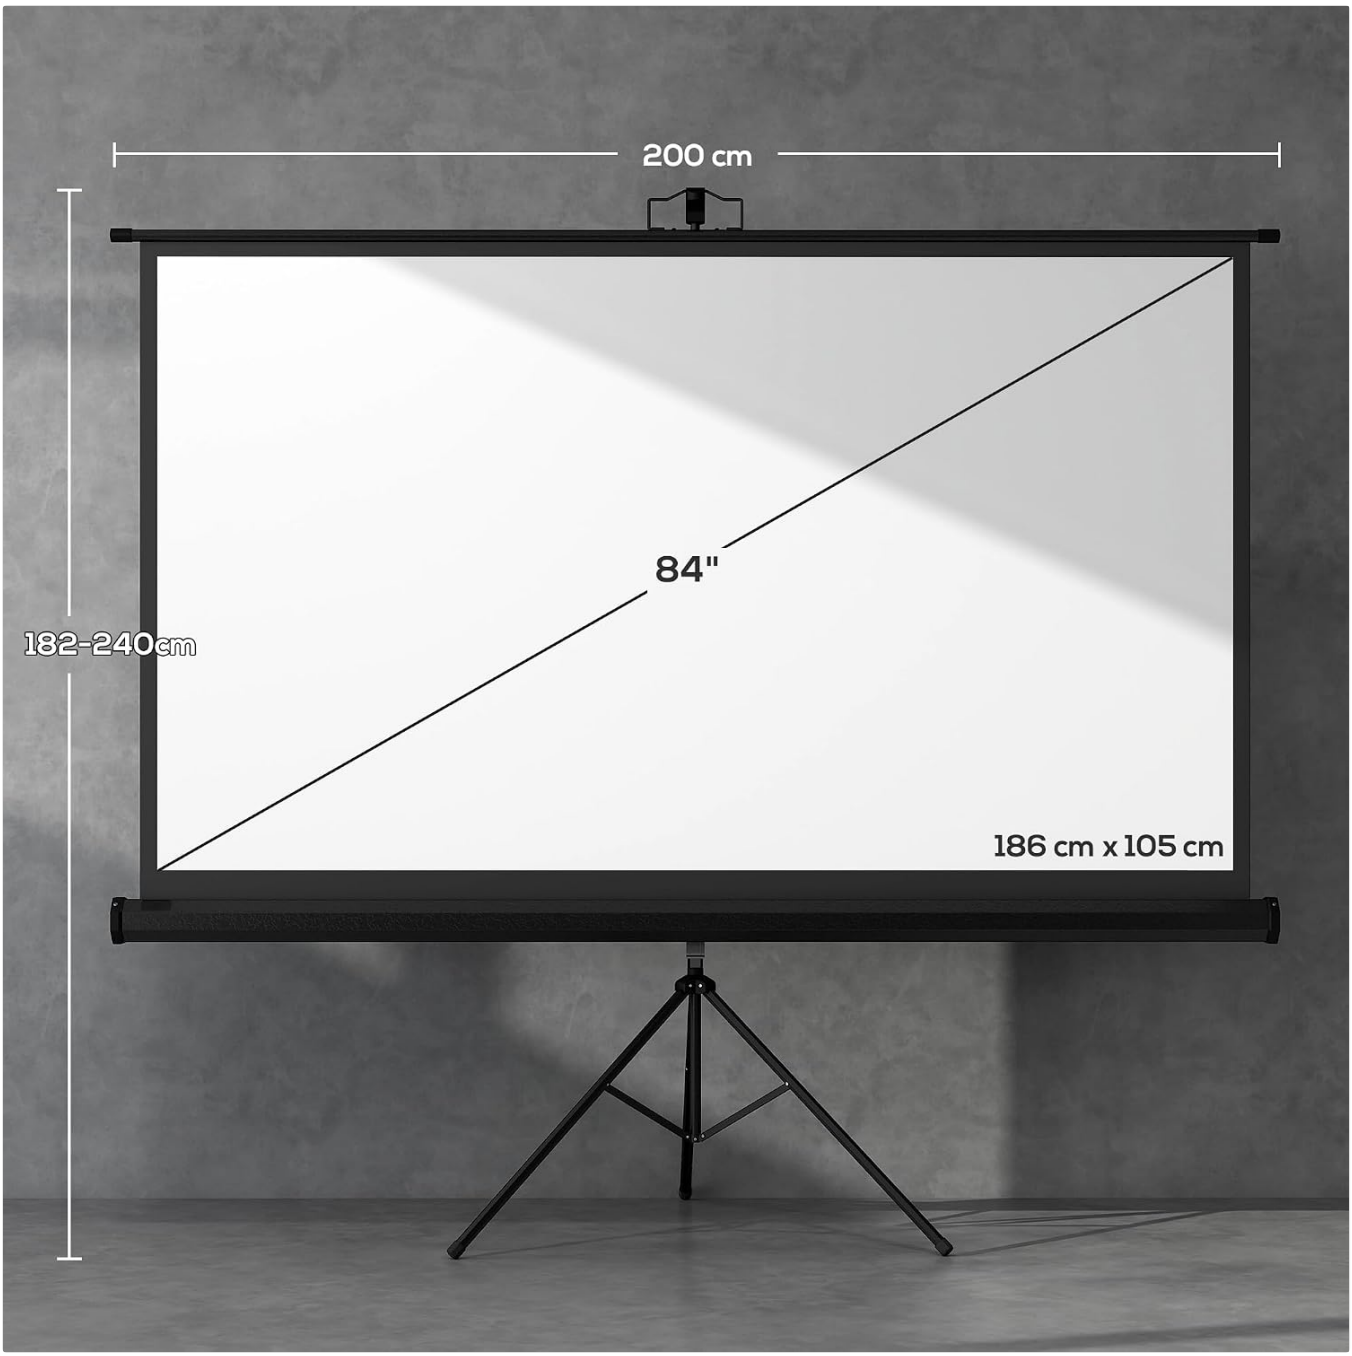

Description: This graphic provides recommended viewing distances for 84-inch, 100-inch, and 120-inch screens to achieve the best visual effect.

For an 84-inch screen, an optimal viewing distance of 2-2.5 meters is recommended for the best visual experience.

- **Applications:**



Description: A compilation of scenarios demonstrating the versatility of the projector screen for home entertainment, business presentations, and educational purposes.

This portable screen is suitable for various environments, including home cinema, outdoor movie nights, office presentations, conference rooms, and classrooms.

6. Maintenance

Proper care will extend the life of your projector screen:

- **Cleaning the Screen:** Use a soft, damp cloth with mild soap and water to gently wipe the screen surface. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the screen material. Allow the screen to air dry completely before retracting.
- **Cleaning the Tripod:** Wipe the tripod stand with a dry or slightly damp cloth to remove dust and dirt.
- **Storage:** When not in use, retract the screen fully into its casing and fold the tripod stand. Store the screen in a dry, cool place, away from direct sunlight and moisture.

7. Troubleshooting

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Screen appears wrinkled or wavy.	New screen material, improper storage.	Allow the screen to hang fully extended for a few days. Ensure proper storage to avoid creases.
Screen is unstable or wobbles.	Tripod legs not fully extended or locked. Uneven surface.	Ensure tripod legs are fully extended and the locking mechanisms are secure. Place the tripod on a flat, level surface.
Poor image quality (blurry, dim).	Projector settings, screen alignment, ambient light.	Check your projector's focus and brightness settings. Ensure the projector is aligned correctly with the screen. Minimize ambient light for optimal viewing.
Screen does not retract smoothly.	Mechanism obstruction or damage.	Gently pull the screen down slightly to release the lock, then guide it slowly back into the casing. Do not force it. If the issue persists, contact customer support.

8. Specifications

Key technical details for your HOMCOM projector screen:

- **Model Number:** 001-019V01BK
- **Screen Size (Diagonal):** 84 inches
- **Aspect Ratio:** 16:9
- **Display Dimensions:** 186L x 105A cm (73.2 x 41.3 inches)
- **Overall Dimensions:** 200L x 8P x 118A cm (78.7L x 3.1P x 46.5A inches)
- **Adjustable Height:** 1.82 m to 2.4 m (71.7 to 94.5 inches)
- **Viewing Angle:** 160 Degrees
- **Screen Finish:** Matte
- **Material:** Metal, Plastic
- **Weight:** 7.6 kg (16.7 lbs)
- **Operation Mode:** Manual
- **Mounting Type:** Tripod Mount

9. Warranty and Support

Your HOMCOM projector screen comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or any questions regarding your product, please contact the retailer or manufacturer's customer support with your purchase details and model number (001-019V01BK).

Please visit the HOMCOM Store for more information and other products.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FKGN5XRB

More documents and user manuals: **https://manuals.plus/**