QIBOX XP-W17C-C

QIBOX Portable Bottle Warmer User Manual

Model: XP-W17C-C

Brand: QIBOX

Introduction

Thank you for choosing the QIBOX Portable Bottle Warmer. This device is designed for convenient and efficient heating of breast milk, formula, or other beverages while on the go. Featuring fast heating, precise temperature control, and a large capacity, it ensures your baby's milk is always at the perfect temperature. Made with food-grade materials, it prioritizes safety and ease of use.
Key features include:

- **Fast Heating:** 120W power warms 4oz refrigerated milk to 98°F in approximately 3 minutes 50 seconds, and 4oz room-temp water to 113°F in 3 minutes.
- **Food-Grade Materials:** Constructed from 100% food-grade, BPA-free materials, including SUS 316L stainless steel, ensuring safety and preventing contamination.
- **Large Battery Capacity:** A 4000mAh battery heats 8 (4-oz) portions of refrigerated breast milk or 20 (4-oz) portions of water on a single charge.
- **Fast Charging:** 30W fast charging fully recharges the device in under 2 hours.
- **17oz Large Capacity:** Provides ample capacity for multiple feedings, suitable for outdoor use.
- **Precise Temperature Control:** Adjustable temperature range from 99°F to 212°F, allowing for accurate heating to meet various needs.
- **Long-Lasting Heat Retention:** Maintains water temperature at 122°F for up to 24 hours under normal summer conditions when heated to 212°F.

Safety Precautions

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Temperature Warning:** After using the device at high temperatures, allow it to cool for 30-40 minutes before

charging to prevent charging issues due to high-temperature protection.

- **Water Immersion:** Do not rinse or immerse the main body of the product in water. This can damage the electronic components.
- **Dry Heating:** Never heat the bottle when empty. Ensure there is liquid inside before activating the heating function.
- **Charging Port:** Always close and seal the silicone cover on the charging port before cleaning. Keep the charging port dry at all times to avoid moisture damage.
- **Power Supply:** Use only the original adapter (12V/3A) or other compatible adapters with the included charging cable (5V/2A). Using incompatible power supplies may cause product damage.
- **Child Safety:** This product is not a toy. Keep it out of reach of children and individuals with limited physical, sensory, or mental capabilities. Adult supervision is required when in use around children.
- **Overfilling:** Do not fill liquid above the MAX level indicated inside the bottle to prevent overflow when boiling.
- **Handling:** Avoid abnormal conditions. If abnormal heating, unusual odor, deformation, or unusual noise occurs, discontinue use immediately.

Package Contents

Your QIBOX Portable Bottle Warmer package includes the following items:

- 1x QIBOX Portable Bottle Warmer
- 1x 2-in-1 Silicone Cleaning Brush
- 1x Power Adapter
- 1x USB-A to USB-C Charging Cable
- 1x User Manual
- 1x Packaging Box



Image: The QIBOX Portable Bottle Warmer and its accessories neatly packaged in the box.

Setup

Initial Charging

Before first use, fully charge your QIBOX Portable Bottle Warmer. Connect the provided USB-A to USB-C charging cable to the device's charging port and plug the adapter into a power outlet. The battery icon on the display will indicate charging status. A full charge typically takes less than 2 hours with the 30W fast charging capability.

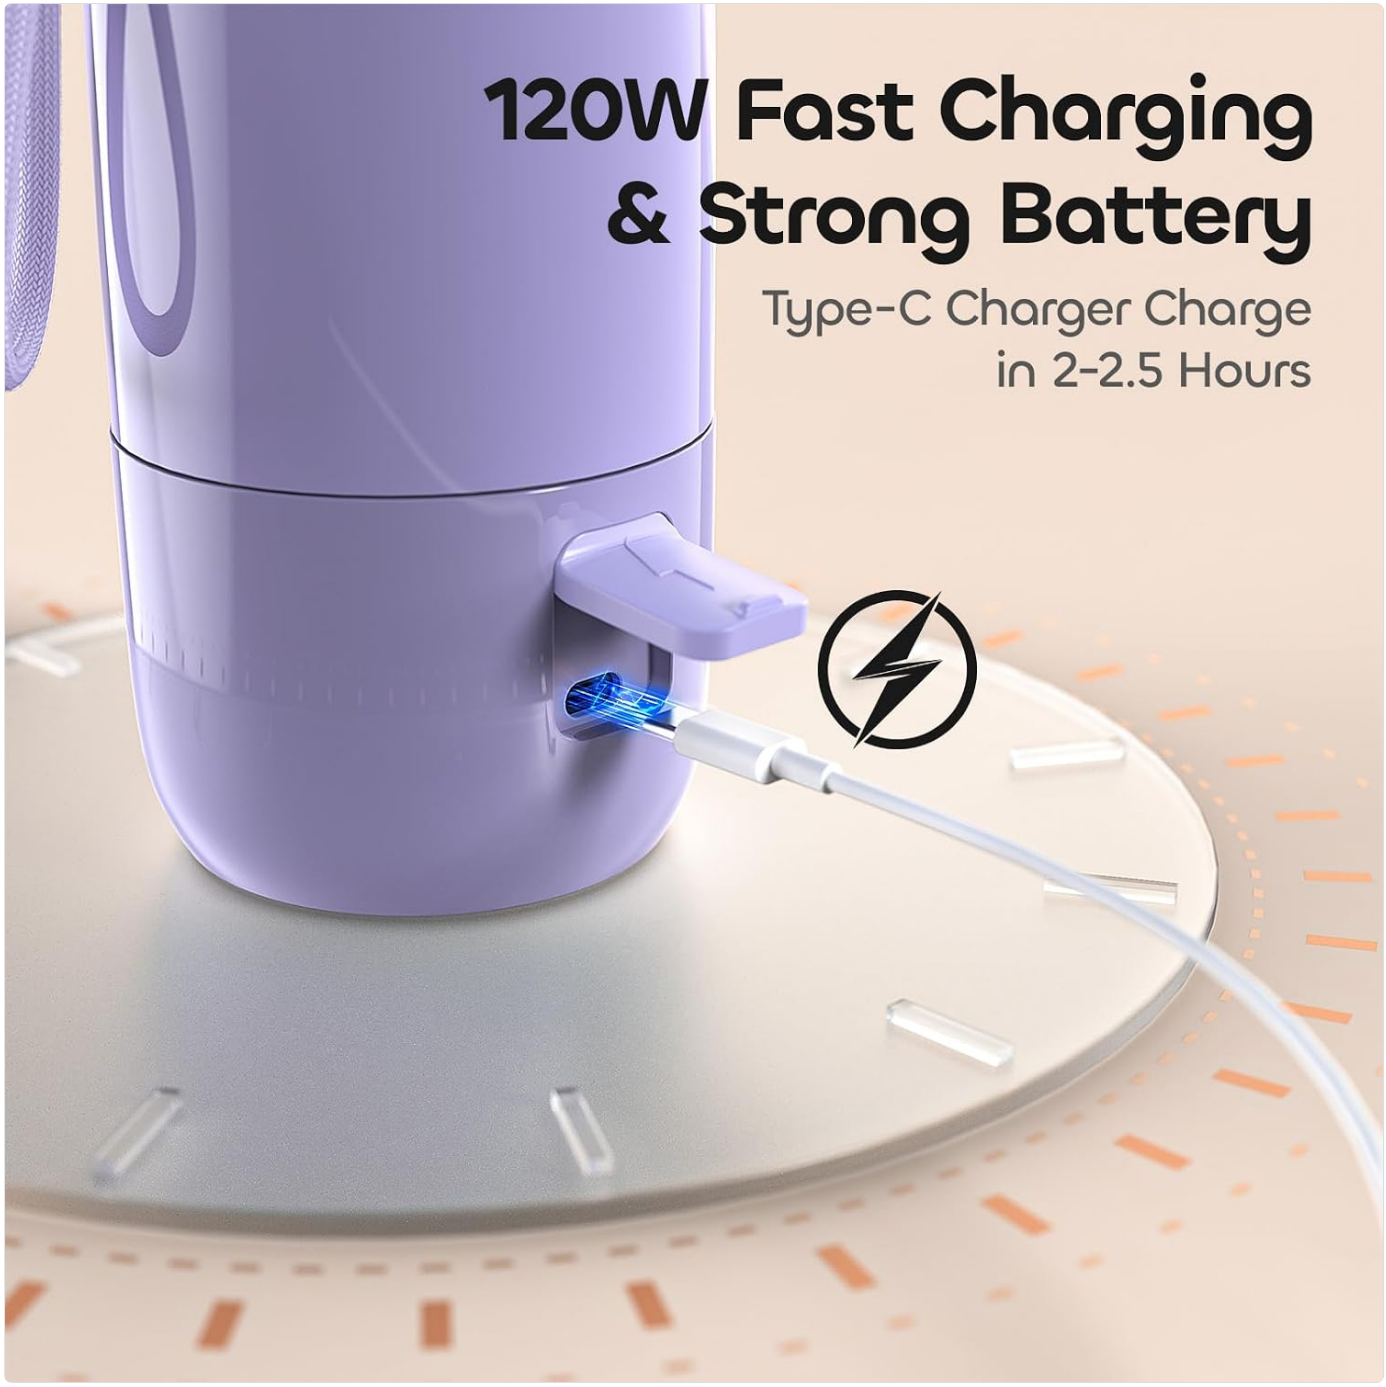


Image: The portable bottle warmer being charged via its USB-C port.

First Use Cleaning

Before using the bottle warmer for the first time, thoroughly clean all parts that will come into contact with milk or water. Use the included silicone brush and mild detergent, then rinse with clean water. You may also perform a sterilization cycle as described in the 'Operating Instructions' section.

Operating Instructions

Power On/Off

- **To Turn On:** Double-click the power button (). The display will show the real-time water temperature. The display turns off after 3 seconds to save power.

- **Standby Mode:** Long-press the power button (). The display will show "---". The screen turns off after 1 minute of inactivity.
- **To Turn Off:** Short-press the power button (). The device will power down.

Temperature Setting

To set your desired heating temperature:

1. From Standby Mode ("---"), press the up arrow (∧). The digits will blink, indicating the default temperature (113°F).
2. Short press the up arrow (∧) to increase the temperature.
3. Short press the down arrow (∨) to decrease the temperature.
4. The device will automatically save your selected temperature and begin heating in 3 seconds.

Video: Demonstrates how to power on the QIBOX Portable Bottle Warmer and adjust the temperature settings using the touch controls.

Child Lock

The child lock feature prevents accidental changes to settings or operation:

- **Auto-Lock:** The device automatically activates the child lock after 60 seconds of inactivity.
- **Locked State:** When locked, a lock icon () is displayed, and all buttons are disabled. Pressing any other button in this state will trigger a beep and cause the lock icon to flash.
- **To Unlock:** Long-press the lock icon () to deactivate the child lock.
- **To Re-lock:** Long-press the lock icon () for 3 seconds to re-enable the child lock.

Keep-Warm Function

Once the desired temperature is reached:

- The device will emit 3 beeps to signal the end of the heating process.
- It will then automatically maintain the set temperature for up to 24 hours.
- After 24 hours or if the power button is short-pressed, the device will return to standby mode.

Sterilization Mode

To sterilize the bottle warmer:

1. Add 1.7-3.4 oz (50-100ml) of clean water into the bottle.
2. Turn on the bottle (double-click power button).
3. Press and hold the power button () and the up arrow (∧) simultaneously.
4. A 30-minute sterilization cycle will begin, indicated by a chasing lights display on the screen.

Maintenance

Cleaning

Regular cleaning ensures hygiene and extends the life of your bottle warmer:

1. **Disassembly:** Unscrew the top lid and remove any detachable silicone parts.

2. **Washing:** Use the included 2-in-1 silicone brush and a mild, baby-safe detergent to clean the interior and all components. The brush is designed to reach all corners.
3. **Rinsing:** Rinse all components thoroughly under clean running water to remove any detergent residue.
4. **Drying:** Allow all parts to air dry completely before reassembling or storing.
5. **Sterilization:** For deep cleaning and disinfection, perform the sterilization mode as described in the 'Operating Instructions' section.

Care Instruction: *Hand Wash only. Do not put the electronic base in a dishwasher.*



Image: Visual guide demonstrating the cleaning process for the bottle warmer, including disassembling parts and using the cleaning brush.

Troubleshooting

If you encounter any issues with your QIBOX Portable Bottle Warmer, please refer to the following common solutions:

- **Device Not Turning On:** Ensure the battery is sufficiently charged. Connect the charger and check if the battery icon appears on the display.
- **Not Heating Properly:** Verify that the desired temperature is set correctly and the child lock is not active. Ensure there is liquid inside the bottle.
- **Charging Issues After High-Temperature Use:** If the device was recently used at a high temperature, allow it to cool down for 30-40 minutes before attempting to charge. This is a safety feature to prevent damage.
- **Display Not Responding:** Check if the child lock is active. Long-press the lock icon to deactivate it.
- **Leakage:** Ensure all lids and seals are properly tightened and in place before use. The double lid leak-proof design requires both parts to be securely fastened.

If the problem persists after trying these steps, please contact QIBOX customer support for further assistance.

Specifications

Feature	Specification
Model	XP-W17C-C
Product Dimensions	3.2 x 3.2 x 10 inches
Item Weight	2.3 pounds
Battery Type	1 Lithium Polymer battery (included)
Battery Capacity	4000mAh
Charging Power	30W Fast Charging
Heating Power	120W
Material Composition	BPA-free, SUS 316L Stainless Steel Food-grade Materials
Temperature Range	99°F to 212°F
Care Instructions	Hand Wash

Warranty & Support

QIBOX products are manufactured to the highest quality standards. For warranty information, technical support, or any product-related inquiries, please contact QIBOX customer service. Keep your purchase receipt as proof of purchase for any warranty claims.
For further assistance, please visit the QIBOX Store on Amazon.

© 2026 QIBOX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question