ROCKPOINT HX2025-46

ROCKPOINT 80-Inch Fireplace TV Stand (Model HX2025-46) User Manual

Model: HX2025-46

Introduction

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your new ROCKPOINT 80-Inch Fireplace TV Stand. Please read this manual thoroughly before assembly and use to ensure safe and efficient operation. Keep this manual for future reference.

Important Safety Information

WARNING: Keep away from naked flame or direct heat sources. Always ensure the unit is placed on a stable, level surface. Do not overload the shelves or top surface. Follow all electrical safety guidelines when connecting the electric fireplace.

- Ensure all parts are present and undamaged before assembly.
- Do not use power tools for assembly unless specified, as this may damage the product.
- Keep children and pets away from the assembly area.
- Always unplug the electric fireplace before cleaning or maintenance.
- Do not block the air vents of the electric fireplace.

Package Contents

Your ROCKPOINT Fireplace TV Stand is delivered in two separate boxes. Please ensure you have received both packages before beginning assembly. Each box contains specific components necessary for the complete unit.
Verify all parts against the included parts list in your physical instruction manual. If any parts are missing or damaged, please contact customer support.

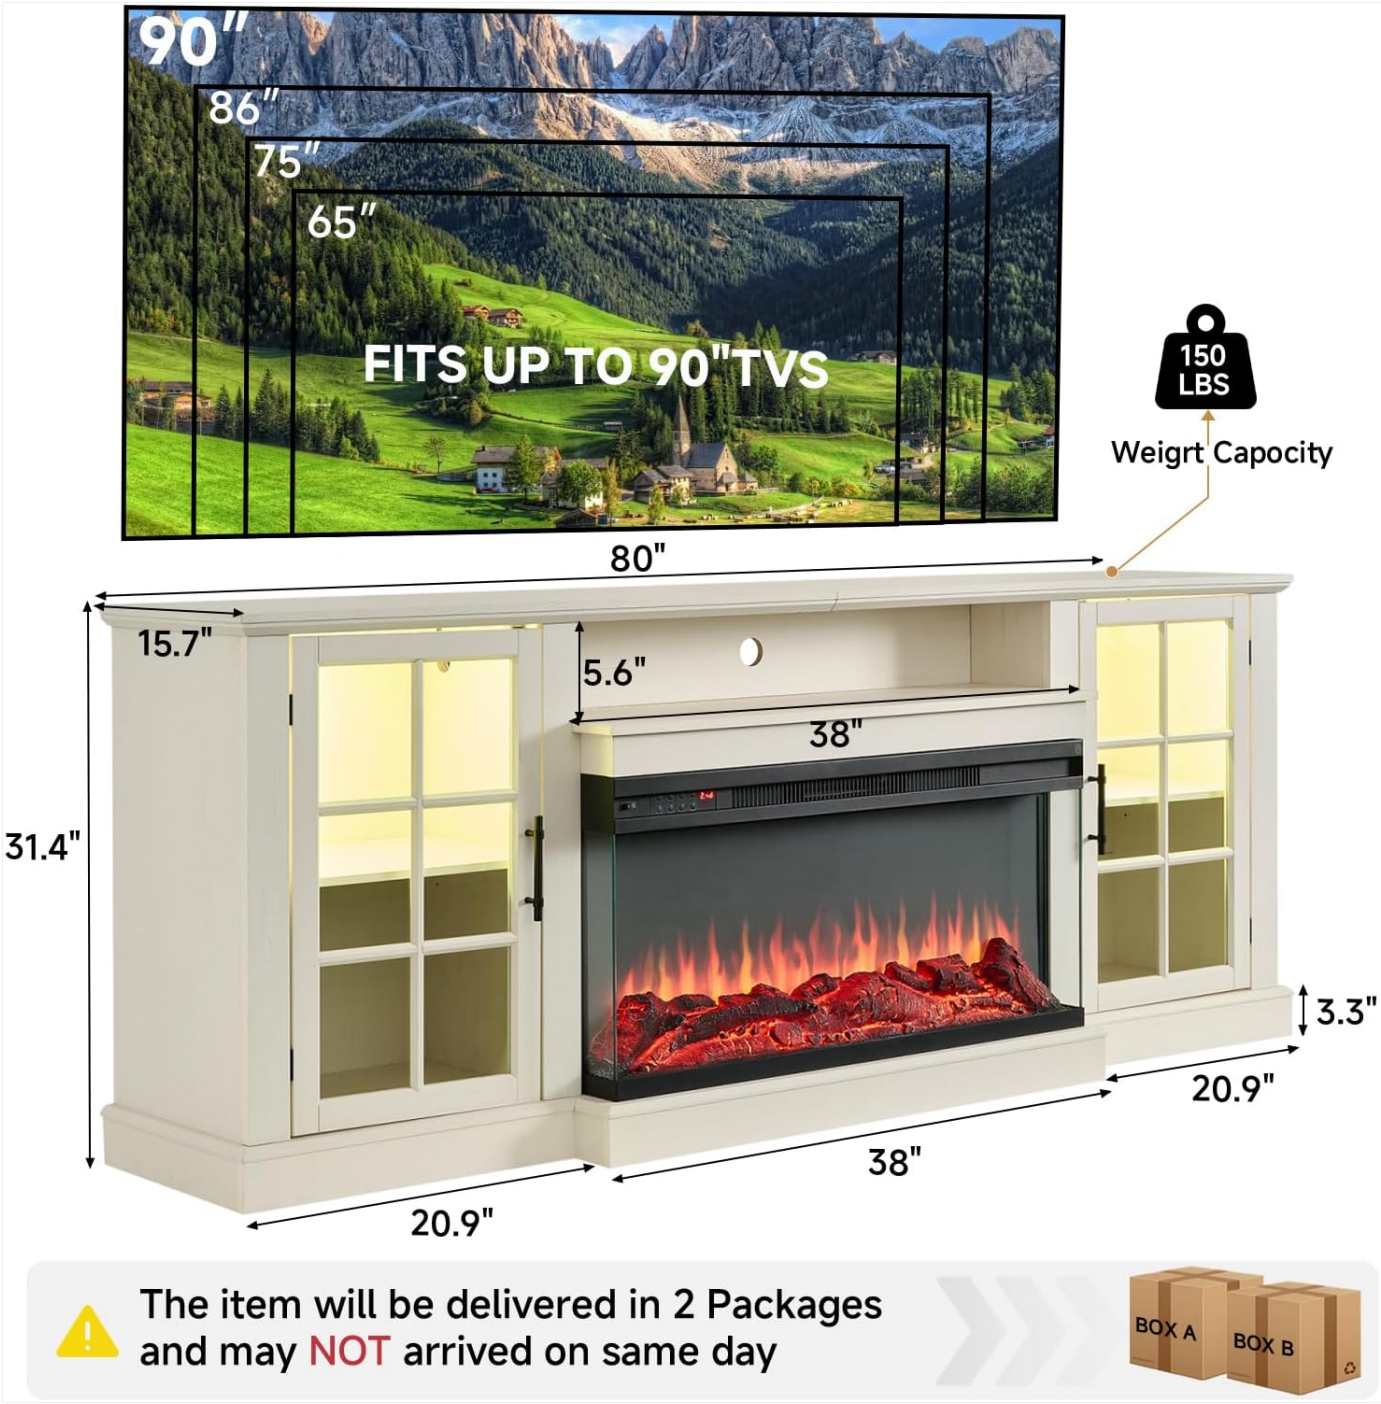


Image: Product dimensions and two-box delivery information.

Assembly Instructions

Assembly of the ROCKPOINT Fireplace TV Stand requires careful attention to detail. It is recommended to have two people for assembly. Please refer to the detailed step-by-step instructions and diagrams provided in the physical assembly manual included with your product.

1. Unpack all components and lay them out on a soft, clean surface to prevent scratches.
2. Identify all hardware and panels using the provided parts list.
3. Follow the numbered steps in the manual to assemble the main frame of the TV stand.
4. Install the electric fireplace insert according to its specific instructions.
5. Attach the glass doors and adjustable shelves.
6. Ensure all connections are secure before placing a television or other items on the stand.

Tip: Organize parts alphabetically or by step number before you begin to streamline the process.

Product Features

- **3-Sided Glass Display Fireplace:** Enjoy expansive views of realistic 3D flame effects. Features 5 flame brightness settings, 12 backlight colors, and 12 LED light strip colors.
- **Customizable Ambiance:** Adjust flame color, brightness, and speed via the digital LED display or remote control.
- **Integrated Heater:** The electric fireplace includes heating tubes with adjustable temperature settings (60°F to 84°F, with an additional 99°F boost) to provide warmth for up to 400 sq. ft.
- **Energy-Saving Timer:** Set the heater to operate for specific durations (0.5H, 1H, 2H…up to 9H) to conserve energy.
- **Flexible & Spacious Storage:** Combines open shelving and hidden compartments behind glass doors for organizing media equipment, accessories, and decor.
- **Cable Management:** Integrated holes keep LED strips and other wires organized and out of sight.
- **Durable Construction:** Crafted from modern MDF and premium PB, offering scratch-resistant, water-resistant, and odorless properties.
- **Highboy-Thickened Tabletop:** The 80-inch wide surface accommodates TVs up to 90 inches.



Image: The ROCKPOINT 80-Inch Fireplace TV Stand with a television and decorative items.



Image: Detailed view of the TV stand's construction and features.

Operating Instructions

Electric Fireplace Operation

The electric fireplace can be controlled via the digital LED display on the unit or the included remote control.

- **Power On/Off:** Press the power button on the unit or remote.
- **Flame Brightness:** Use the dimmer function (BR.1-BR.5 or bb.5-bb.1) to select from 5 settings.
- **Flame Colors:** Choose from 12 distinct flame colors to match your mood or decor.
- **Backlight Colors:** Select from 12 backlight colors for the fireplace.
- **Heater Control:** Adjust the temperature from 60°F to 84°F. An additional 99°F boost setting is available.
- **Timer Function:** Set the heater to turn off automatically after 0.5, 1, 2, ... up to 9 hours.

- **Child Lock:** Activate the child lock feature to prevent unintended changes to settings.



Image: Electric fireplace control panel and remote functions.



Image: Available flame colors and brightness levels.

LED Light Strip Operation

The multi-color LED light strips can be customized to enhance the ambiance of your entertainment center. Refer to the specific instructions for the LED strip controller for detailed color and mode adjustments.



Image: Multi-color LED light strip in action.

Maintenance

- **Cleaning:** Wipe the surfaces with a dry cloth. For stubborn marks, use a slightly damp cloth and immediately dry with a clean, soft cloth. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Fireplace Care:** Ensure the electric fireplace vents are clear of obstructions. Periodically check the power cord for any damage.
- **Hardware:** Periodically check and tighten any loose hardware to maintain stability.

Troubleshooting

- **Fireplace Not Turning On:**
  - Check if the power cord is securely plugged into a working outlet.
  - Ensure the main power switch on the fireplace unit is in the "ON" position.
  - Verify that the remote control batteries (2 AAA, included) are correctly installed and not depleted.
- **No Heat Output:**
  - Confirm the heater function is activated and the temperature setting is above the ambient room temperature.
  - Check for any obstructions blocking the heater's air intake or exhaust vents.
- **LED Lights Not Working:**
  - Ensure the LED light strip is properly connected to its power source.
  - Check the LED controller for proper function.
- **Unit is Unstable:**

- Re-check all assembly hardware to ensure screws and connectors are fully tightened.
- Ensure the unit is on a flat, level surface.

For further assistance, please contact ROCKPOINT customer support.

Specifications

Feature	Detail
Brand	ROCKPOINT
Model Number	HX2025-46
Product Dimensions	80 x 15.7 x 31.4 inches (L x W x H)
Item Weight	112 pounds
Material	Engineered Wood (MDF, PB)
Color	White
TV Size Compatibility	Up to 90 inches
Fireplace Size	36 Inch Electric Fireplace
Fireplace Features	3-Sided Glass, 5 Flame Brightness Settings, 12 Backlight Colors, 12 LED Flame Colors, Heater (60°F-84°F, 99°F boost), Timer (0.5H-9H), Child Lock
Special Features	Glass Door Storage Cabinet, LED Light Strips, Cable Management Holes
Power Source	Electric (2 AAA batteries for remote, included)
Product Care	Wipe with Dry Cloth

Warranty and Support

For warranty information, technical support, or to order replacement parts, please refer to the contact information provided in your product packaging or visit the official ROCKPOINT website. Please have your model number (HX2025-46) and purchase date ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question