EUHOMY WC003-X3UBS-USZX-AZ

EUHOMY Bottom Loading Water Cooler Dispenser

Model: WC003-X3UBS-USZX-AZ

Introduction

This manual provides essential information for the safe and efficient operation of your EUHOMY Bottom Loading Water Cooler Dispenser. Please read all instructions carefully before use and retain this manual for future reference.
The dispenser offers three temperature modes: cold, warm, and hot, catering to various beverage needs. It features a bottom-loading design for 3 or 5-gallon water bottles, eliminating the need for heavy lifting. Safety features include a child lock for hot water dispensing and LED indicator lights for operational status and low water alerts.

Setup Instructions

1. **Unpacking:** Carefully remove the water cooler from its packaging. Ensure all components are present and undamaged.
2. **Placement:** Place the dispenser on a flat, stable surface away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
3. **Initial Cleaning:** Before first use, clean the removable drip tray and wipe down the exterior.
4. **Water Bottle Installation:**



Image: Bottom loading water dispenser with its lower compartment door open, revealing a 5-gallon water bottle being slid into place. The water pump tube is visible, ready to be inserted into the bottle.

Open the lower compartment door. Remove the cap from a 3 or 5-gallon water bottle. Insert the water pump tube into the bottle opening, ensuring a secure fit. Slide the water bottle into the compartment and close the door.

5. **Power Connection:** Plug the power cord into a grounded electrical outlet.
6. **Activate Heating/Cooling:** On the back of the unit, locate the switches for hot and cold water. Turn both switches to the 'ON' position. Allow approximately 15-30 minutes for the water to reach desired temperatures.

Video: A demonstration of unpacking and setting up the EUHOMY water dispenser, including installing a 5-gallon water bottle into the bottom-loading compartment and activating the hot and cold water switches.

Operating Instructions

1. **Dispensing Cold Water:** Place your cup under the cold water spout. Press the cold water button to dispense.
2. **Dispensing Warm Water:** Place your cup under the warm water spout. Press the warm water button to dispense.
3. **Dispensing Hot Water (with Child Lock):**

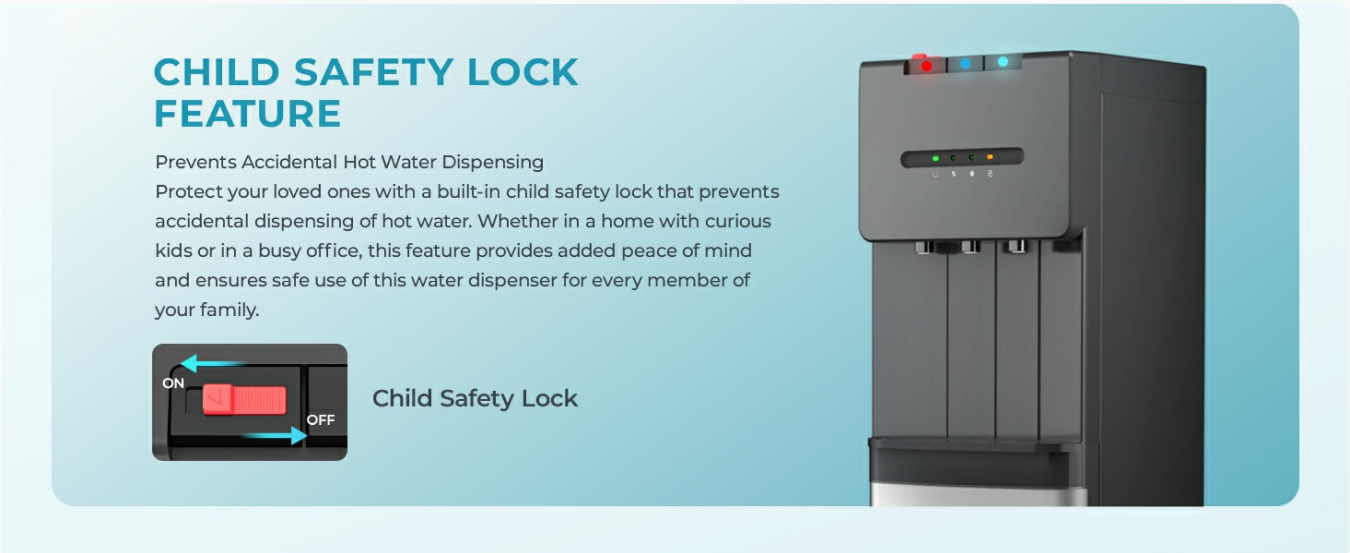


Image: A close-up view of the water dispenser's top panel, highlighting the red child safety lock switch next to the hot water button.

Place your cup under the hot water spout. To dispense hot water, first slide the child safety lock mechanism, then press the hot water button. Release the button to stop dispensing.

4. **LED Indicators:** The front panel features LED lights indicating power, hot water status, cold water status, and a low water alert. A red light for low water indicates the bottle needs replacement.



Image: A graphic illustrating the three temperature modes available: Hot (187-203°F), Warm (Room Temperature), and Cold (41-50°F), with corresponding icons and water being dispensed into glasses.

Maintenance

1. **Drip Tray Cleaning:** The removable drip tray should be emptied and cleaned regularly to prevent overflow and maintain hygiene.



Image: A close-up of the water dispenser's base, illustrating how the removable drip tray can be easily lifted out for cleaning.

2. **Exterior Cleaning:** Wipe the exterior of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Internal Cleaning:** Refer to the full user manual for detailed instructions on internal cleaning and descaling procedures, typically recommended every 3-6 months.

Troubleshooting

- **No Water Dispensing:** Check if the water bottle is empty and properly installed. Ensure the power cord is securely plugged in.
- **Water Not Hot/Cold:** Verify that the hot/cold switches on the back of the unit are turned 'ON'. Allow sufficient time for heating/cooling.
- **Leaking:** Ensure the water bottle is correctly seated and the pump tube is properly inserted. Check the drip tray for

overflow.

- **Unusual Noise:** Some operational noise is normal during heating or cooling cycles. If noise is excessive or persistent, ensure the unit is on a level surface.

For further assistance, please contact customer support.

Specifications

Feature	Detail
Color	Black
Material	Plastic
Capacity	3 or 5 Gallons (bottle not included)
Product Dimensions (D x W x H)	12"D x 14"W x 41"H
Wattage	550 watts
Installation Type	Freestanding
Access Location	Bottom
Hot Water Temperature	187-203 Degrees Fahrenheit
Cold Water Temperature	41-50 Degrees Fahrenheit
Power Source	Corded Electric
Model Number	WC003-X3UBS-USZX-AZ
UPC	850077022807



Image: A diagram illustrating the physical dimensions of the EUHOMY water dispenser, showing its height, width, and depth.

Warranty and Support

Your EUHOMY Bottom Loading Water Cooler Dispenser is backed by a **1-year warranty**. For any assistance, questions, or concerns, please reach out to our support team. Contact information can be found on our official website or in the packaging materials.

© 2023 EUHOMY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question