Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

mstoekn YND-60H

mstoekn YND-60H 1500W PTC Ceramic Electric Space Heater User Manual

Model: YND-60H

1. Introduction

Thank you for purchasing the mstoekn YND-60H 1500W PTC Ceramic Electric Space Heater. This manual provides important information for the safe and efficient operation of your new heater. Please read all instructions carefully before use and retain this manual for future reference.

2. Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow these basic precautions:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has an automatic tip-over safety switch that shuts off the heater if it is accidentally knocked over.
- This heater is equipped with an overheat protection feature that automatically turns off the heater if it overheats.

- The heater uses flame-retardant materials and features a reinforced plug for enhanced safety.

3. Package Contents

- mstoekn YND-60H Space Heater
- Remote Control (requires 2 AAA batteries, not included)
- User Manual

4. Product Overview

The mstoekn YND-60H is a 23-inch ceramic tower heater designed for indoor use, featuring multiple heating modes, precise thermostat control, and safety features.



Image: Front view of the mstoekn YND-60H 1500W PTC Ceramic Electric Space Heater, showcasing its sleek design and digital display.

Components:

- **Digital Display:** Located on the top panel, shows current temperature and settings.
- **Touch Control Panel:** Buttons on the top for manual operation.
- **Heating Grille:** Front mesh covering the PTC ceramic heating elements.

- **3D Flame Effect Window:** Located at the bottom front, displays a realistic flame simulation.
- **Base:** Provides stability for the tower design.
- **Rear Air Intake with Removable Filter:** Located at the back for air intake and easy cleaning.
- **Integrated Handle:** For convenient portability.

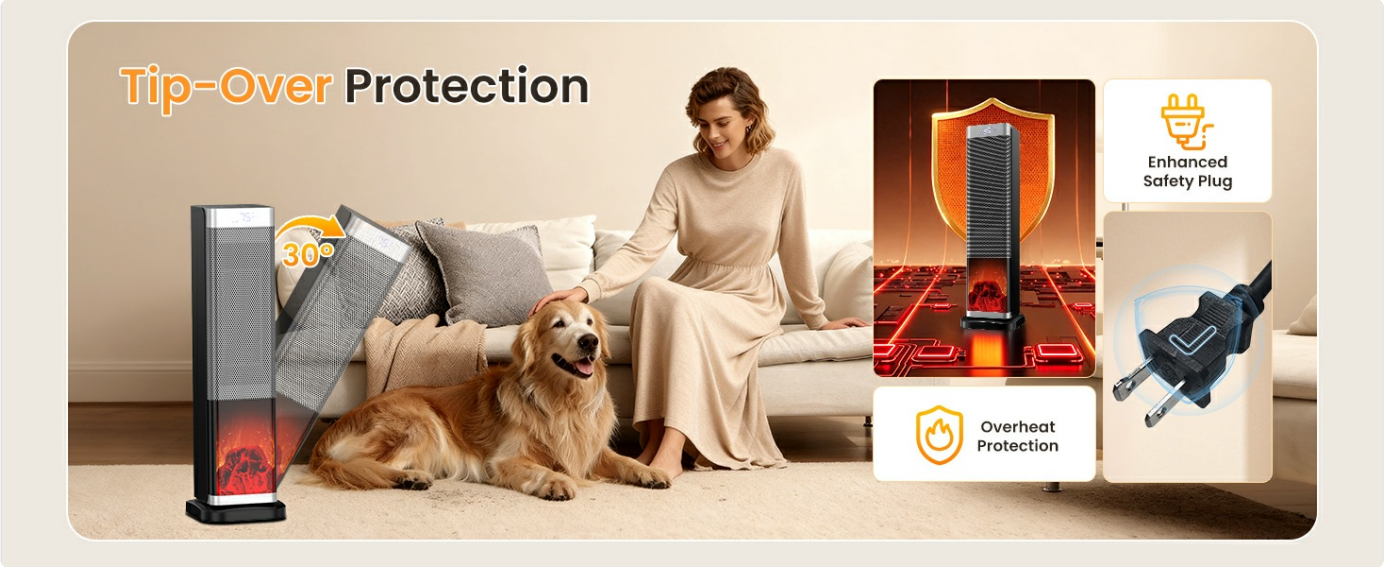


Image: Diagram illustrating the heater's features including the 12H timer, touch control LED display, 3 heating modes (Natural Wind, Low Heat, High Heat), 70° widespread oscillation, remote control, and carry handle.

5. Setup

1. Unpack the heater and all accessories from the box.
2. Place the heater on a firm, level surface. Ensure it is at least 3 feet (0.9 meters) away from walls, furniture, and other objects.
3. Plug the power cord into a grounded 120V AC electrical outlet.
4. Insert 2 AAA batteries into the remote control (batteries not included).

6. Operating Instructions

The heater can be operated using the touch control panel on the top of the unit or the included remote control.

Video: A user demonstrates the unboxing and initial setup of the mstoekn YND-60H heater, highlighting the control panel and remote functions.

Control Panel Functions:

- **Power Button (On/Off):** Press to turn the heater on or off. After turning off, the fan will continue to run for 30 seconds to cool down the unit.
- **Mode Button:** Cycle through heating modes: Natural Wind (8W), Low Heat (1000W), High Heat (1500W), and ECO mode.
- **Temperature Adjustment (+/-):** Adjust the desired temperature from 59°F to 95°F in 1°F increments.
- **Timer Button:** Set the auto-off timer from 1 to 12 hours.
- **Oscillation Button:** Activate or deactivate the 70° oscillation function.
- **Flame Effect Button:** Turn the 3D realistic flame effect on or off.



Image: The digital display showing temperature and mode indicators, with labels for Natural Wind (8W), Low Heat (1000W), and High Heat (1500W).

ECO Mode:

In ECO mode, the heater intelligently adjusts its power output (1500W or 1000W) to maintain your set temperature, saving energy. The heater will reduce power once the room reaches the desired temperature.



Image: Visual representation of the ECO mode, showing temperature adjustment from 59°F to 95°F in 1°F increments, and how the heater automatically reduces power to maintain the set temperature.

Oscillation:

The 70° oscillation feature helps distribute heat evenly across a wider area, up to 300 sq ft.



Image: An overhead view showing the heater oscillating 70 degrees, illustrating its wide-angle heating coverage for up to 300 sq ft.

3D Flame Effect:

Enjoy a realistic 3D flame effect at the base of the heater, creating a cozy ambiance without actual fire.

Video: A user demonstrates the heater's operation, including adjusting temperature, turning on/off the flame effect, and showing the oscillation feature.

7. Remote Control

The remote control duplicates all functions available on the heater's touch control panel. It requires 2 AAA batteries (not included).

- **Power (On/Off)**
- **Mode Selection**
- **Temperature Up/Down**
- **Timer Setting**
- **Oscillation Control**
- **Flame Effect On/Off**

8. Maintenance

Cleaning the Air Filter:

The heater features a removable air filter on the rear panel to capture larger dust particles. Regular cleaning ensures optimal performance.

1. Ensure the heater is turned off and unplugged from the power outlet.
2. Locate the removable filter cover on the back of the unit.
3. Gently open and remove the filter.
4. Clean the filter by washing it with water or using a soft brush to remove accumulated dust.
5. Allow the filter to dry completely before reinserting it.
6. Snap the filter back into place securely.

Video: A user demonstrates how to remove and clean the rear air filter of the mstoekn YND-60H heater.

9. Troubleshooting

If the device suddenly shuts down or encounters other issues, please check the following:

- **No Power:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the circuit breaker has tripped.
- **Heater Shuts Off Unexpectedly:** This may be due to the tip-over protection or overheat protection activating. Ensure the heater is on a stable surface and not covered. Allow it to cool down before restarting.
- **Remote Control Not Working:** Check if the AAA batteries are correctly inserted and not depleted.
- **Reduced Heat Output:** Clean the air filter to ensure proper airflow.

If problems persist, please do not hesitate to contact customer support.

10. Specifications

Brand	mstoekn
Model Number	YND-60H
Special Feature	Fast Heating
Color	BLACK&SILVER
Form Factor	Tower
Indoor/Outdoor Usage	Indoor

Product Dimensions	7"D x 7"W x 22.8"H
Mounting Type	Floor Mount
Room Type	Bedroom, Living Room
Heat Output	1500 Watts
Fuel Type	Electric
Number of Speeds	4 (Natural Wind, Low Heat, High Heat, ECO)
Min Temperature Setting	59 Degrees Fahrenheit
Max Temperature Setting	95 Degrees Fahrenheit
Item Weight	8.38 pounds
UPC	769310939584

11. Warranty and Support

For any questions, concerns, or issues regarding your mstoekn YND-60H space heater, please contact the seller directly for assistance. Refer to your purchase documentation for specific warranty details.

Each item has a unique code that we verify before shipping, ensuring product authenticity and quality.

© 2026 mstoekn. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FLD6HF73

More documents and user manuals: **https://manuals.plus/**