Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Rebecco Z30

Rebecco Z30 10-inch Android 15 Tablet User Manual

Model: Z30 (K70)

Introduction

Welcome to your new Rebecco Z30 10-inch Android 15 Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully to ensure optimal performance and longevity of your tablet.

What's in the Box

Upon unboxing your Rebecco Z30 tablet, you should find the following items:

- 1 x Rebecco Z30 Tablet
- 1 x Charger Adapter
- 1 x USB-C Charging Cable
- 1 x User Manual (this document)



Image: The Rebecco Z30 tablet, charger adapter, and USB-C charging cable neatly packaged within its box.

Setup

1. **Initial Charge:** Before first use, ensure your tablet is fully charged using the provided USB-C cable and

charger adapter.

2. **Power On:** Press and hold the Power Button located on the side of the tablet until the screen turns on.
3. **Language Selection:** Follow the on-screen prompts to select your preferred language.
4. **Wi-Fi Connection:** Connect to a stable Wi-Fi network (2.4 GHz or 5 GHz) to access online features and download updates.
5. **Google Account Setup:** Sign in with your Google account or create a new one to access the Google Play Store and other Google services.
6. **Security Setup:** Configure your preferred screen lock method, such as PIN, pattern, or Face Unlock.

For a visual guide on setting up your tablet, please watch the video below:

Your browser does not support the video tag.

Video: A user demonstrates the unboxing and initial setup process of the Rebecco Z30 Android 15 Tablet, including powering on and connecting to Wi-Fi.

Key Features

Powerful Processor

The Rebecco Z30 is equipped with an Octa-core Cortex processor (Unisoc T310, up to 2 GHz) and runs on the latest Android 15 system. This configuration ensures faster performance, smooth multitasking, and a responsive user interface for daily tasks, gaming, and entertainment.



Image: A visual representation of the tablet's powerful Octa-core Cortex T310 processor, highlighting its 800MHz GPU, 2.0GHz A75 core, and 1.8GHz A55 cores.

Immersive HD Touchscreen

Experience vibrant visuals on the 10-inch HD IPS display with a 1280x800 pixel resolution and a 16:10 aspect ratio. With Widevine L1 certification, you can enjoy high-definition streaming from popular platforms. Dual BOX speakers provide clear audio for an immersive experience.

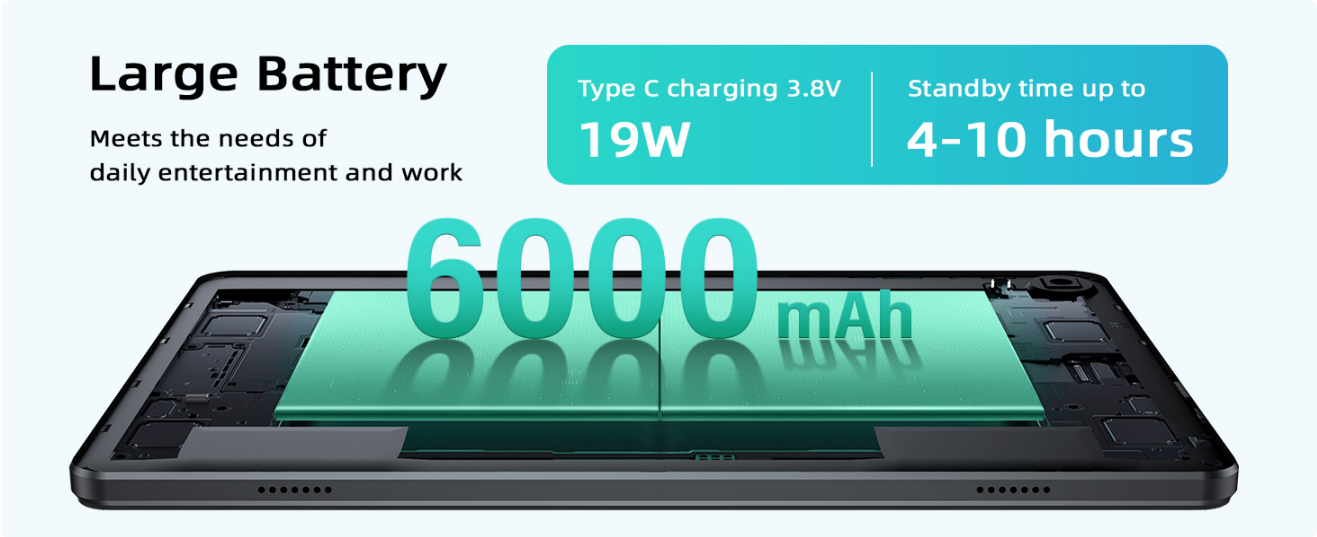


Image: The Rebecco Z30 tablet showcasing a vibrant landscape on its 10.1-inch IPS HD display, emphasizing its 1280x800 resolution.

Massive Storage Capacity

The tablet features 18GB of RAM (6GB physical + 12GB virtual) for smooth gaming and app switching, along with 128GB of built-in storage. This can be expanded up to 1TB using a TF (MicroSD) card, providing ample space for apps, games, photos, and movies.

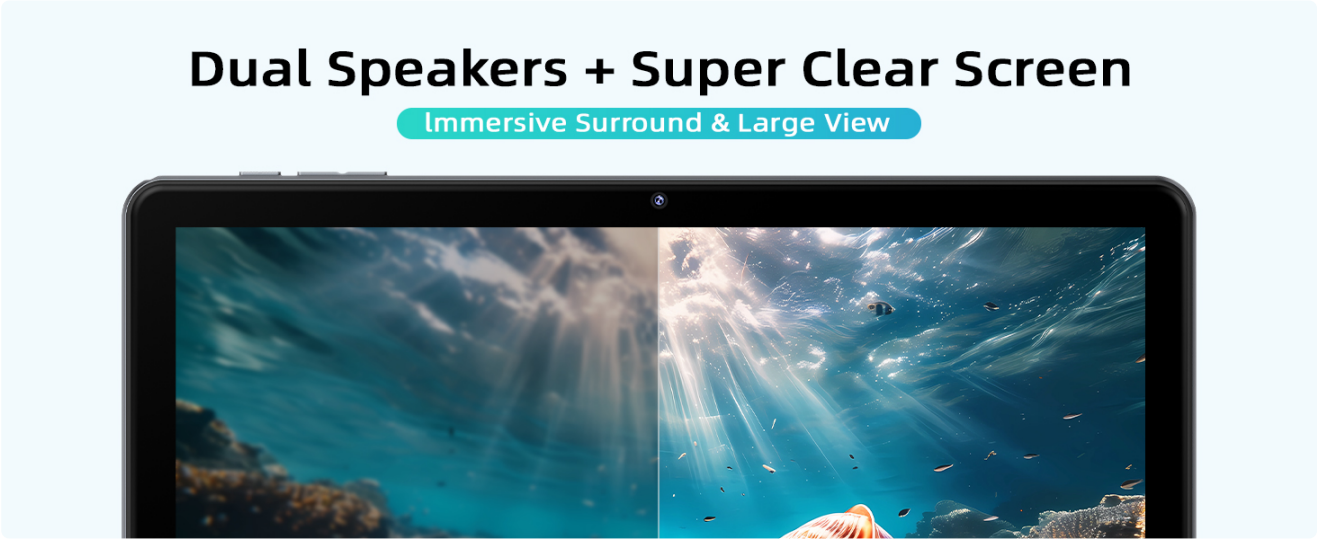


Image: The Rebecco Z30 tablet displaying various app icons and a MicroSD card being inserted, symbolizing its 18GB RAM, 128GB ROM, and 1TB expandable storage.

Long-lasting Battery

A powerful 6000mAh lithium polymer battery provides over 10 hours of average use, making it suitable for extended work, entertainment, study, or travel without frequent recharging.



Image: The Rebecco Z30 tablet connected to a Type-C charger, with a prominent '6000 mAh' graphic and icons indicating battery life for gaming, web browsing, streaming, and reading.

Dual High-Definition Cameras

Capture moments with the 8MP rear camera (with auto-focus) and enjoy clear video calls with the 5MP front camera. The tablet supports FHD 1080p video capture resolution.



Image: A close-up of the Rebecco Z30 tablet's rear and front cameras, highlighting the 8MP rear camera with auto-focus and the 5MP front camera for HD video calls, alongside various user photos.

Advanced Connectivity

Stay connected with fast and stable 2.4 GHz/5G dual-band Wi-Fi and Bluetooth V5.0. The tablet also features a USB-C port for fast data transfer and charging, and a 3.5mm audio jack for headphones.

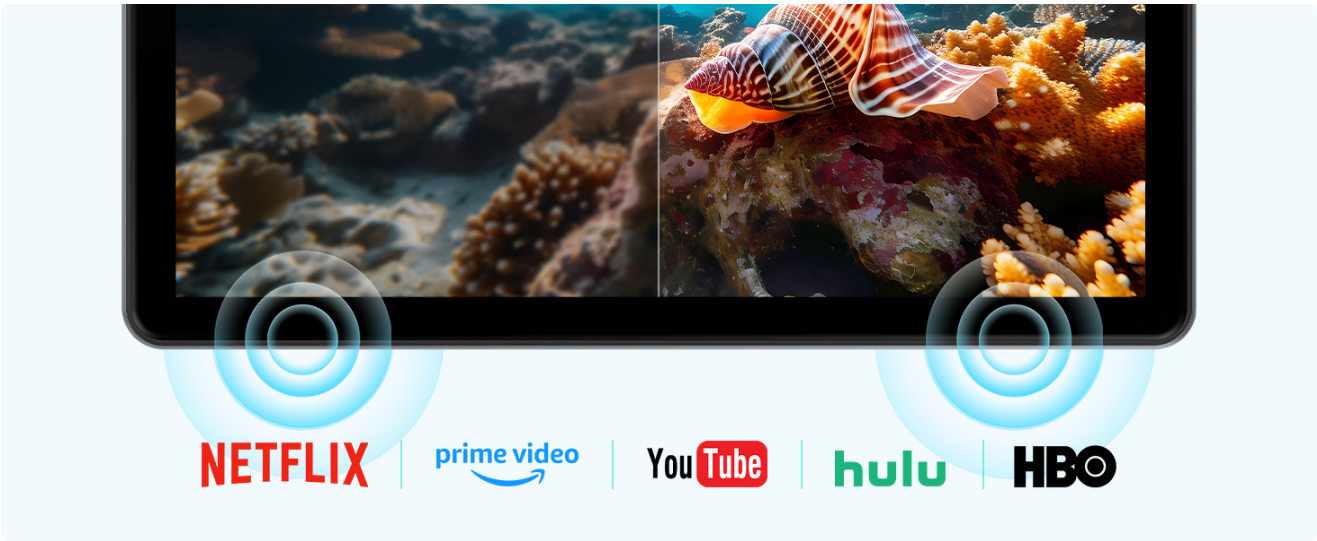


Image: The Rebecco Z30 tablet showcasing its quick connection features, including Bluetooth 5.0 and dual-band Wi-Fi (2.4G/5G), with a gaming scene on the screen.

Operating Instructions

Physical Overview

Familiarize yourself with the tablet's physical components:



Image: A diagram illustrating the locations of the Rear Camera, Front Camera, Volume buttons, Power Button, 3.5mm Headphone Jack, TF card slot, Charging Port, and Speakers on the Rebecco Z30 tablet.

- **Power Button:** Press and hold to power on/off or restart. Short press to lock/unlock the screen.
- **Volume Buttons:** Adjust media volume, ringtone volume, and alarm volume.
- **USB-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** Connect wired headphones.
- **TF Card Slot:** Insert a MicroSD card for expandable storage.
- **Cameras:** Front (5MP) and Rear (8MP) cameras for photos and videos.

Special Functions

- **Face Unlock:** Securely unlock your device using facial recognition.
- **Split Screen Function:** Use two apps simultaneously by splitting the screen.
- **Eye Care Mode:** Reduces blue light emission to protect your eyes during prolonged use.
- **Reading Mode:** Optimizes display settings for a comfortable reading experience.
- **FM Radio:** Enjoy local radio stations (76MHz ~ 90MHz).
- **GMS Certified:** Access to Google Mobile Services, including Google Play Store, Gmail, Maps, and more.

Watch this video for a demonstration of the tablet's features and user interface:

Your browser does not support the video tag.

Video: A user navigates through the Rebecco Z30 tablet's interface, demonstrating app usage, settings, and camera functions.

Maintenance

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid extreme temperatures and do not let the battery completely drain frequently.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security.
- **Storage Management:** Periodically clear unnecessary files and apps to free up storage space and maintain speed.

Troubleshooting

- **Tablet not powering on:** Ensure the tablet is charged. If it doesn't turn on after charging, press and hold the power button for 10-15 seconds.
- **Slow performance:** Close unused applications, clear cache, or consider a factory reset if issues persist.
- **Wi-Fi connectivity issues:** Restart your router and tablet. Ensure you are within range of the Wi-Fi signal.
- **Apps crashing:** Update the app to its latest version. If the problem continues, uninstall and reinstall the app.

Specifications

Feature	Specification
Brand	Rebecco
Model Name	Z30
Model Number	K70
Operating System	Android 15
Processor	Unisoc T310 Octa-core Cortex (up to 2 GHz)
RAM Memory	18 GB (6GB + 12GB virtual)
Internal Storage	128 GB
Expandable Storage	Up to 1 TB (TF card)
Screen Size	10 Inches

Display Resolution	1280x800 Pixels (IPS HD)
Display Refresh Rate	60 Hz
Rear Camera	8 MP
Front Camera	5 MP
Battery Capacity	6000 mAh
Average Battery Life	10 Hours
Connectivity	2.4 GHz/5G Wi-Fi, Bluetooth V5.0, USB-C
Audio Jack	3.5 mm
Special Features	Widevine L1, Dual BOX Speakers, Face Unlock, Eye Care Mode, Split Screen, Reading Mode, FM Radio, GPS-Enabled, Supports USB OTG
Item Weight	0.87 Grams
Dimensions (L x W x Th)	9.4"L x 6.2"W x 0.3"Th

Warranty and Support

Your Rebecco Z30 tablet comes with a **1-year limited warranty**. For warranty claims, technical support, or further assistance, please refer to the contact information provided in your product packaging or visit the official Rebecco store on Amazon.
You can visit the Rebecco Store for more information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FLJB1PFF

More documents and user manuals: **https://manuals.plus/**