Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Voukad H1906

Voukad H1906 Electric Beard Trimmer User Manual

Model: H1906

1. Introduction

Thank you for choosing the Voukad H1906 Electric Beard Trimmer. This device is designed for precise grooming of beards, mustaches, face, and ear hair. Please read this manual thoroughly before first use to ensure safe and optimal performance. Keep this manual for future reference.

2. Important Safety Instructions

- Avoid using the trimmer near water sources unless specified. The device is IPX7 waterproof, allowing for wet use and rinsing, but do not submerge the charging base.
- Do not use on infants.
- Follow recommended cleaning and maintenance procedures as outlined in this manual.
- Keep out of reach of children.
- Ensure the trimmer is fully charged before initial use.
- Do not attempt to repair or disassemble the trimmer yourself. Contact customer support for assistance.

3. Product Components

Package Contents

- Voukad H1906 Electric Hair Trimmer Handle
- U-shaped Beard Trimmer Head
- Detailer Trimmer Head (Steel)
- Nose/Ear Hair Trimmer Head
- Length Comb (2 pieces)
- Soft Pouch

- USB-C Charging Cable
- Cleaning Brush

Product Overview



Image: The Voukad H1906 trimmer handle shown with its interchangeable U-shaped beard trimmer, detailer trimmer, and nose/ear hair trimmer attachments.

4. Setup and Charging

Charging the Trimmer

Before first use, fully charge the trimmer. Connect the USB-C charging cable to the trimmer and a compatible USB power source (adapter not included). The charge indicator light will show charging status. A full charge takes approximately 90 minutes and provides up to 120 minutes of cordless runtime.

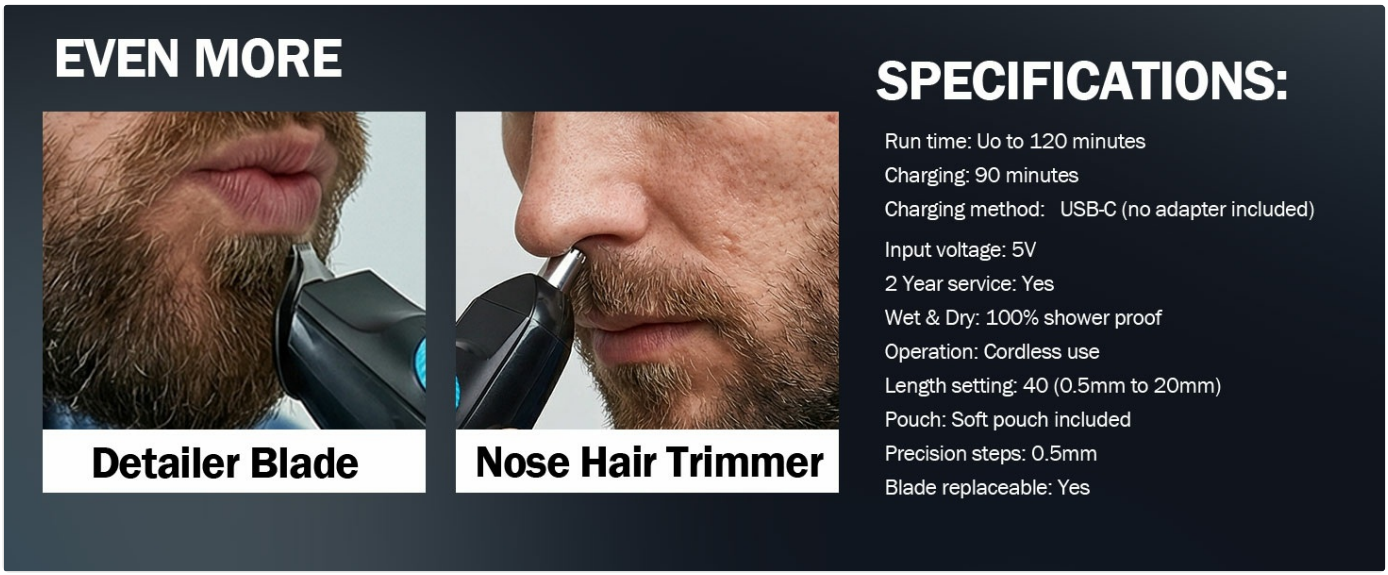


Image: The trimmer's detachable blade and USB-C charging port, highlighting its convenient charging method.

Attaching and Detaching Trimmer Heads

1. To attach a head: Align the desired trimmer head with the main body and press firmly until it clicks into place.
2. To detach a head: Gently push the head upwards or press the release button (if available) and pull it away from the body.

Adjusting Trim Length

The trimmer features a precision dial with 40 length settings, ranging from 0.5mm to 20mm in 0.5mm steps. Install the appropriate length comb onto the U-shaped beard trimmer head. Rotate the ergonomic slider dial to select your desired hair length.



Image: A detailed view of the trimmer's precision dial, indicating the various length settings for accurate grooming.

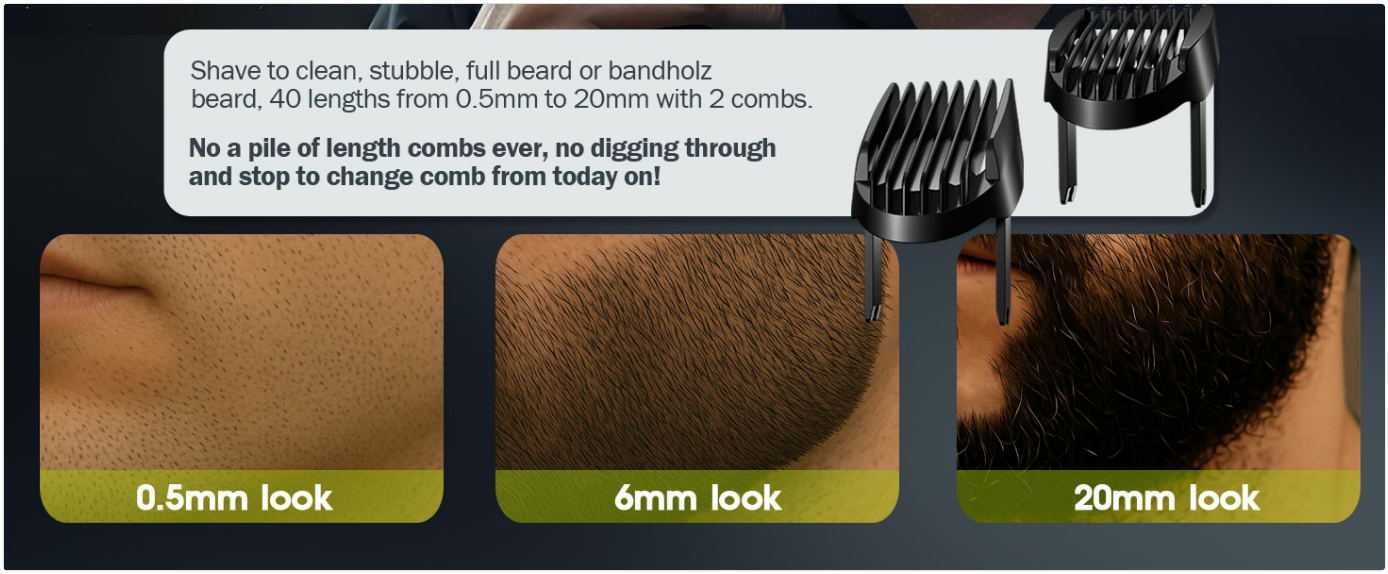


Image: Examples of beard lengths (0.5mm stubble, 6mm short beard, 20mm full beard) demonstrating the versatility of the 40 precision settings.

5. Operating Instructions

General Trimming Guidelines

- Ensure your skin and hair are clean and dry before trimming, unless performing wet trimming.
- Always trim against the direction of hair growth for best results.
- Start with a longer length setting and gradually reduce it until you achieve your desired look.
- Use light pressure and smooth, even strokes.

Beard and Facial Hair Trimming

Attach the U-shaped beard trimmer head with the desired length comb. Adjust the precision dial to your preferred length. Move the trimmer against the direction of hair growth, ensuring even coverage. For shaping and defining edges, remove the length comb or switch to the detailer trimmer head.



Image: A user demonstrating beard trimming and precise edging techniques with the Voukad H1906 trimmer.

Detailer and Edging

Use the steel detailer trimmer head for creating sharp lines, defining beard and mustache edges, and intricate styling. Hold

the trimmer at an angle to the skin and carefully guide it along the desired outline.

Foil Shaving (Close Shave)

For a clean, smooth shave, attach the foil shaver blade. This 2-in-1 blade features a long hair trimmer and a short hair shaver. Move the shaver gently against the skin, following facial contours, to achieve a close finish without pulling hair.



Image: A close-up view of the 2-in-1 shaver blade, illustrating its design for both trimming longer hairs and achieving a close shave.

Nose and Ear Hair Trimming

Attach the nose/ear hair trimmer head. Gently insert the trimmer tip into your nostril or ear canal, being careful not to insert it too deeply. Move the trimmer in a circular motion to trim unwanted hair.

Body Hair Grooming and Hair Clipping

The Voukad H1906 is versatile for various body grooming needs, including chest, underarms, and legs. For hair clipping and creating fades or line-ups, use the U-shaped trimmer head with or without a comb, depending on the desired style. The precision blades allow for detailed hair designs.



Image: An illustration depicting the multi-purpose use of the trimmer for various body areas including face, head, chest, underarms, intimate areas, nose, and legs.

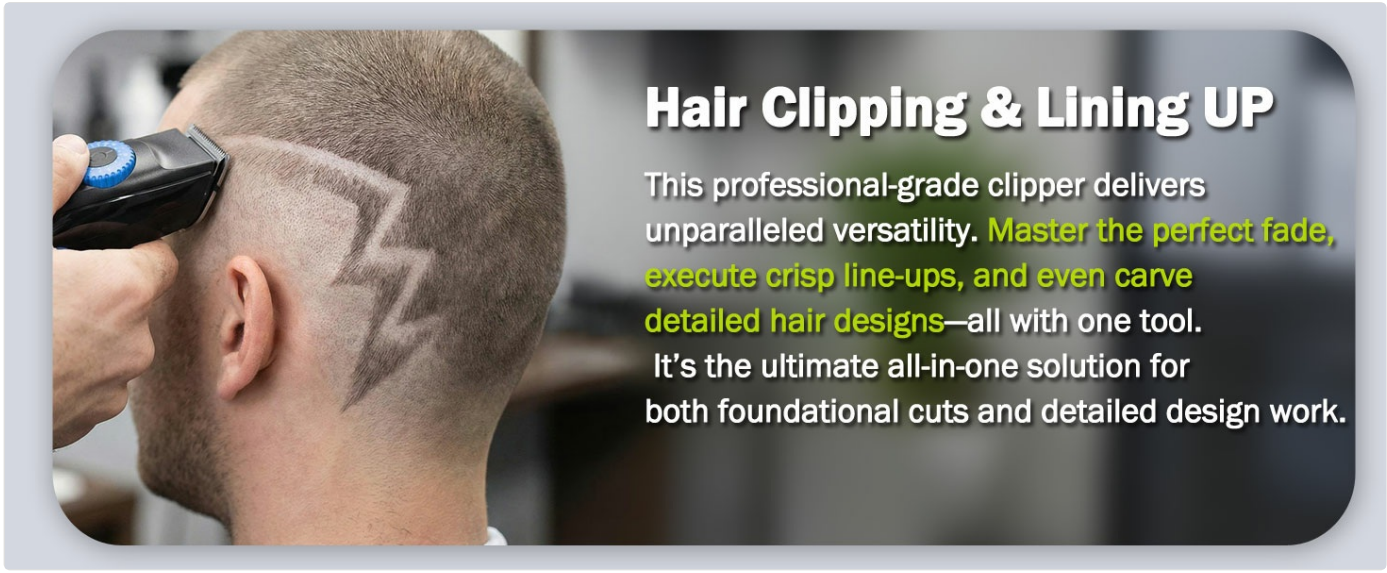


Image: A professional-grade use of the trimmer for hair clipping, demonstrating its capability for fades, line-ups, and detailed hair designs.

6. Maintenance and Cleaning

Cleaning the Trimmer

The Voukad H1906 trimmer is IPX7 waterproof, allowing for easy cleaning under running water. After each use:

1. Turn off the trimmer and detach the trimmer head.
2. Rinse the trimmer head and the main body under warm running water to remove hair clippings.
3. Use the included cleaning brush to remove any stubborn hairs from the blades.
4. Shake off excess water and allow all parts to air dry completely before reassembling or storing.



Image: The trimmer being rinsed under a faucet, illustrating its waterproof design for convenient and thorough cleaning.

Blade Care

The blades are detachable and replaceable. For optimal performance, ensure blades are clean and free of debris. If blades become dull or damaged, replacement blades can be purchased separately.

7. Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully using the USB-C cable.
Trimmer pulls hair or cuts unevenly.	Blades are dull or clogged with hair.	Clean the blades thoroughly. Consider replacing the blade head if dullness persists.
Trimmer stops working during use.	Battery is low.	Recharge the trimmer.
Attachments do not fit securely.	Incorrect alignment or debris.	Ensure the attachment is correctly aligned and press firmly until it clicks. Check for any obstructions.

8. Specifications

Feature	Specification
Model Number	H1906
Power Source	Battery Powered (1 x 9V battery included)
Charging Method	USB-C (5V input)
Charging Time	Approx. 90 minutes
Runtime	Up to 120 minutes
Waterproof Rating	IPX7 (100% shower proof)
Length Settings	40 precision settings (0.5mm to 20mm)
Precision Steps	0.5mm
Blade Material	Stainless Steel
Special Features	Charge Indicator Light, Detachable Head, Multigroomer, Rechargeable, Travel Lock Function
Included Components	Trimmer handle, 3 interchangeable heads, 2 length combs, soft pouch, USB-C cable
Dimensions (Package)	8.62 x 7.64 x 3.23 inches
Weight (Package)	1.37 Pounds

9. Warranty and Support

Warranty Information

The Voukad H1906 Electric Beard Trimmer comes with a 2-year service warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, concerns, or warranty claims, please contact our customer support team. Refer to the contact

information provided with your product packaging or visit the official Voukad website for assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FLJMHZYW

More documents and user manuals: **https://manuals.plus/**