Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ChooChoo DC2501-OA

ChooChoo 2-Tier Washer Dryer Countertop with Adjustable Shelf

Model: DC2501-OA | Rustic Oak

Introduction

Thank you for choosing the ChooChoo 2-Tier Washer Dryer Countertop with Adjustable Shelf. This product is designed to enhance your laundry room's functionality and organization by providing a spacious work surface and customizable storage. Crafted from durable engineered wood with a rustic oak finish, it offers both strength and aesthetic appeal. This manual provides essential information for safe assembly, proper use, and maintenance of your new countertop.

Safety Information

- Read all instructions carefully before assembly and use.
- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Assemble the unit on a soft, clean surface (e.g., carpet or blanket) to prevent scratches or damage to the product and your floor.
- Ensure all connections are securely tightened before placing items on the countertop or shelves.
- Do not overload the shelves or countertop. Refer to the specifications for weight limits.
- Place the unit on a stable, level surface. The included anti-slip pads should be used to prevent movement.
- Avoid exposing the product to excessive moisture or direct heat sources.

Package Contents

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Main Countertop Panel
- Side Support Panels (2)
- Adjustable Shelf Panels (2)
- Hardware Pack (screws, shelf pins, anti-slip pads)
- Assembly Instructions Guide

Setup and Assembly Instructions

Assembly typically requires a Phillips head screwdriver (not included). Follow these steps carefully:

1. **Prepare the Area:** Clear a spacious, soft, and clean area for assembly.
2. **Attach Side Panels:** Secure the two side support panels to the main countertop panel using the provided screws. Ensure they are aligned correctly.
3. **Install Shelf Pins:** Insert the shelf pins into the desired height level holes on the side support panels. The unit offers 5 adjustable height levels for customization.
4. **Place Adjustable Shelves:** Carefully place the adjustable shelf panels onto the installed shelf pins. Ensure they are stable.
5. **Apply Anti-Slip Pads:** Attach the anti-slip pads to the bottom edges of the main countertop panel. These pads help secure the unit on top of your washer and dryer and prevent scratching.
6. **Position the Unit:** Carefully lift and place the assembled countertop unit on top of your washer and dryer. Ensure it is centered and stable.



Image: Key features including easy assembly and premium wood construction.



Image: Detailed view of the 5-level adjustable shelf, showing height options.

Operating Instructions

The ChooChoo 2-Tier Washer Dryer Countertop is designed for practical use in your laundry area.

- **Utilizing the Countertop:** The spacious surface is ideal for folding clothes, sorting laundry, or temporarily placing items.
- **Adjusting Shelves:** To change the shelf height, carefully remove items from the shelf, lift the shelf panel, reposition the shelf pins to the desired level, and then replace the shelf panel. Ensure pins are fully inserted and the shelf is stable before placing items back.
- **Storage:** Use the adjustable shelves to store detergent bottles, fabric softeners, laundry baskets, towels, and other essentials, keeping them organized and within easy reach.

Smart Storage Design

Spacious Surface



Image: The countertop in a laundry room setting, demonstrating its smart storage design.

Maintenance

Proper care will ensure the longevity of your ChooChoo countertop.

- **Cleaning:** The water-resistant surface can be cleaned with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish. Wipe spills immediately.
- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Surface Protection:** While durable, consider using protective mats or coasters under heavy or potentially scratching items to preserve the finish.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Unit is unstable or wobbles.	Screws are loose; unit not level; anti-slip pads not applied.	Ensure all screws are tightened. Verify the washer/dryer surface is level. Apply or re-position anti-slip pads.
Shelf falls out of place.	Shelf pins not fully inserted; shelf overloaded; incorrect pin size.	Ensure shelf pins are fully seated in the holes. Do not exceed the recommended weight capacity. If pins are too small, contact customer support for replacements.
Scratches or chips on surface.	Rough handling during assembly or use; abrasive cleaning.	Use care when moving items. Avoid dragging objects across the surface. Use soft cloths for cleaning. Minor scratches may be touched up with furniture repair markers.

Specifications

Model Number: DC2501-OA

Brand: ChooChoo

Material: Engineered Wood

Color: Rustic Oak

Product Dimensions (L x W x H):53.9" x 27.5" x 11.8"

Item Weight: 15.8 Pounds

Mounting Type: Countertop Mount

Special Features: Adjustable Shelf, Double Layered Shelf

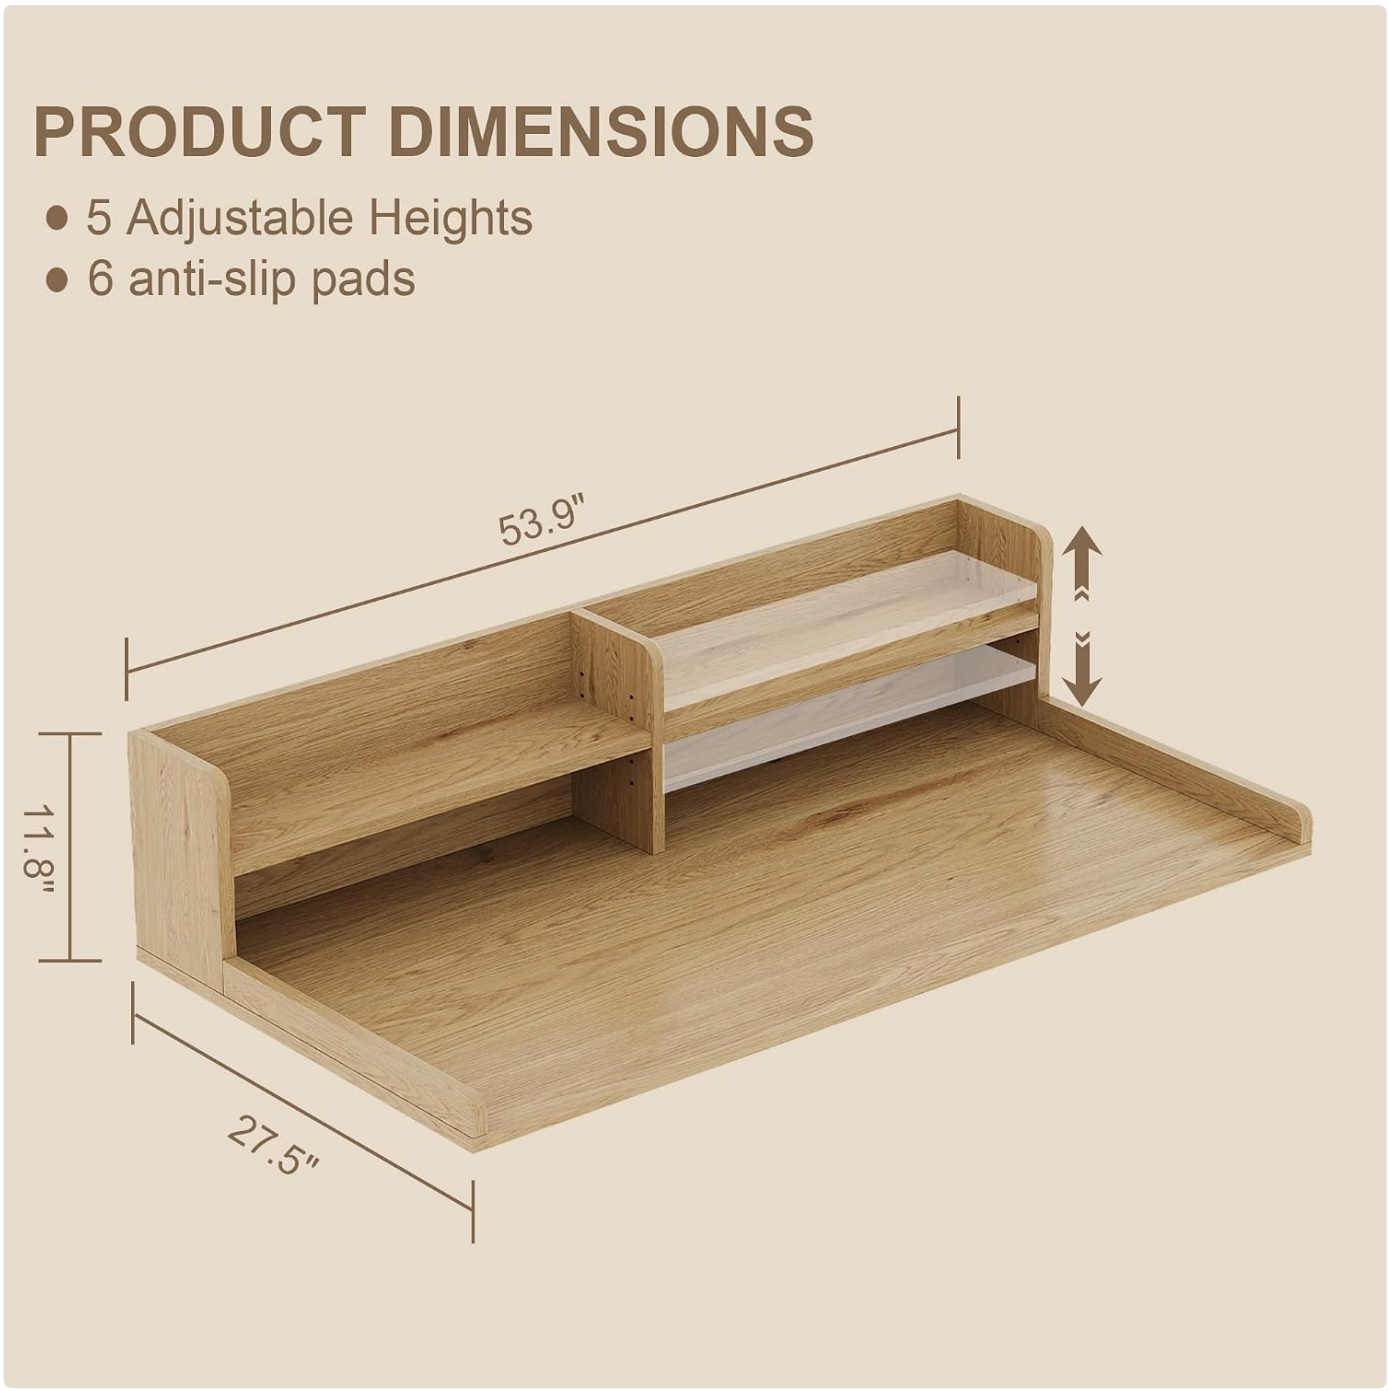


Image: Product dimensions for the ChooChoo 2-Tier Washer Dryer Countertop.

Warranty and Support

For warranty information or technical support, please contact ChooChoo customer service. Keep your purchase receipt and model number (DC2501-OA) handy for faster service.

Contact Information: Please refer to the retailer's website or your purchase documentation for the most current customer support contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FLY1C9F1

More documents and user manuals: **https://manuals.plus/**